


Digital Still Camera

3.1 Mega Pixel

User's Manual

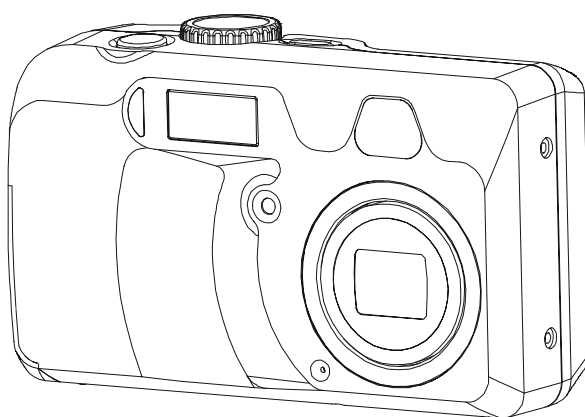

INDEX

Getting Started	1
Contents of Package	1
System Requirements	1
General Precautions	2
FCC Compliance and Advisory	2
Camera Nomenclature	3
Accessory Set-up	4
 Preparing to Take Pictures	 6
Battery Installation	6
Turning the Power On	8
Date and Time Set-Up	9
Beep Sound Set-Up	10
Quick View Setting (LCD Confirm)	10
Auto Power Off Settings	11
TV Out Signal Set-Up	12
Language Set-Up	13
Returning to Default Settings	14

Using a Memory Card	15
Camera Working Mode	16
Taking Pictures	17
Previewing a Picture before it is taken	17
Using the Zoom feature	19
Digital Zoom Function	19
Taking a picture	20
Changing the Picture Resolution	22
Adjusting the Exposure	24
Setting the White Balance	25
Changing the ISO Speed	26
Setting the Slow Shutter Mode	27
Setting the Flash	28
Using the Macro mode	28
Setting the Self-Timer	29
Recording Video images	30
Functions Available in Each Shooting Mode	32
Reviewing Your Pictures and Videos	33
Viewing Pictures	33

Replaying the Last Image Quickly	33
Viewing Pictures in Thumbnail	34
Zooming the Displayed Image	35
Erasing Pictures	35
Protecting Pictures against Deletion	37
Running a Slide Show (Auto Play)	39
Copying Flash Memory Images to a Memory Card	40
Formatting Memory Card or On board memory	41
Setting Your Camera for Printing	43
Folders and Files	43
File Number Reset.....	44
DPOF Print Settings	45
PRINT Image Matching	47
Connecting your camera.....	48
Viewing Images on a TV Set.....	48
Downloading Images to a Computer.....	48
About the memory storage you using in this camera	51
Installing the Software	52
Downloading Pictures	52

Installing MGI PhotoSuite 4 SE	53
Using MGI PhotoSuite 4 SE	55
Indicator Lamp Reference	56
Troubleshooting	56
Default Setting in Each Camera Working Mode	58
Specification	59

Getting Started

Contents of Package

All of the items shown below are included with your camera.

Camera



USB cable



Video cable



Strap



Soft case



User's Guide



CD-ROM



*Alkaline batteries
(2 AA-size batteries)*



System Requirements

For Windows

PC with processor better than MMX Pentium 233MHz
Windows 98/98se/2000/ME/XP
Minimum 32MB RAM
USB Port
CD-ROM drive
800x600 pixels, 16-bit color display compatible monitor

For Macintosh

Power Mac G3 or later
Mac OS 9.0, 9.1, 9.2 and OS X
Minimum 64MB RAM
USB Port
CD-ROM drive
800x600 pixels, 16-bit color display compatible monitor

* Specifications are subject to change without prior notice.

General Precautions

- n Do not try to open the case of the camera or attempt to modify this camera in any way. High-voltage internal components create the risk of electric shock when exposed. The maintenance and repairs should be carried out by authorized service providers.
- n Do not fire the flash when it is too close to people or animal's eyes. It may cause eye damage especially for children.
- n Do not use this camera with wet hand. Keep the camera away from water and other liquids. Moisture creates the danger of fire and electric shock. Never use this camera in the rain or snow.
- n For safety reasons, please keep this camera and accessories out of reach of children or animals to prevent accidents.
- n If you notice smoke or a strange odor coming out of the camera, immediately turn power off and unplug the AC adaptor from the power outlet. Take it to your nearest service center for repair. Never attempt your own maintenance.

FCC Compliance and Advisory

This device complies with Part 15 of the FF Rules. Operation is subject to the following two conditions: 1.) this device may not cause harmful interference, and 2.) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B peripheral, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause a harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.


- n Reorient or relocate the receiving antenna.
- n Increase the separation between the equipment and receiver.
- n Connect the equipment into an outlet ton a circuit different from that to which the receiver is connected.
- n Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables


have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Camera Nomenclature


Front

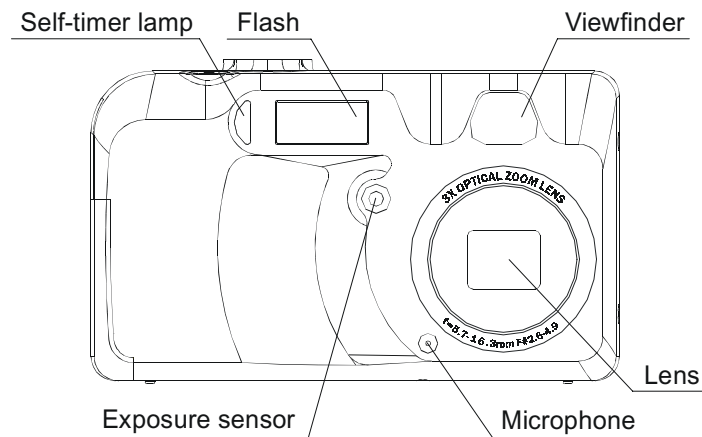


Back

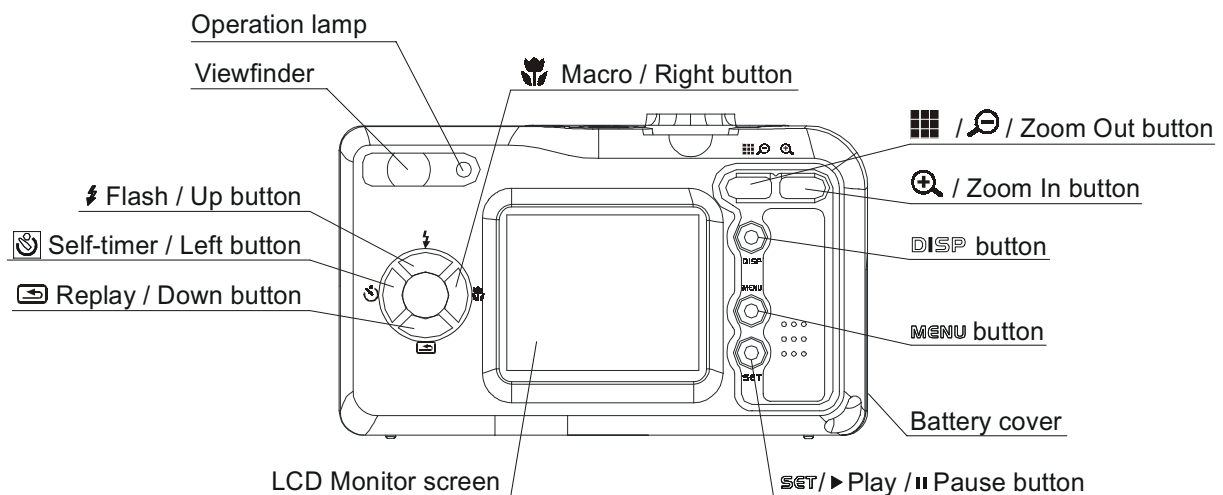

Side

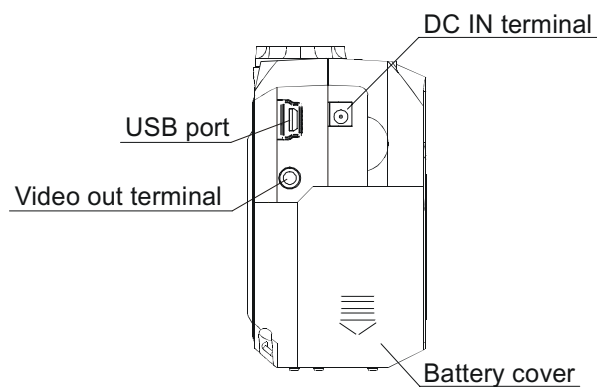


Top

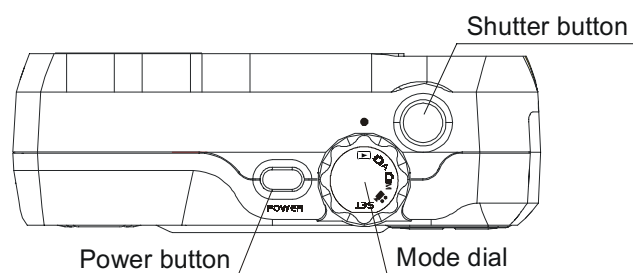

Accessory Set-up

Attaching the Wrist Strap

- Follow illustrations to add the wrist strap.

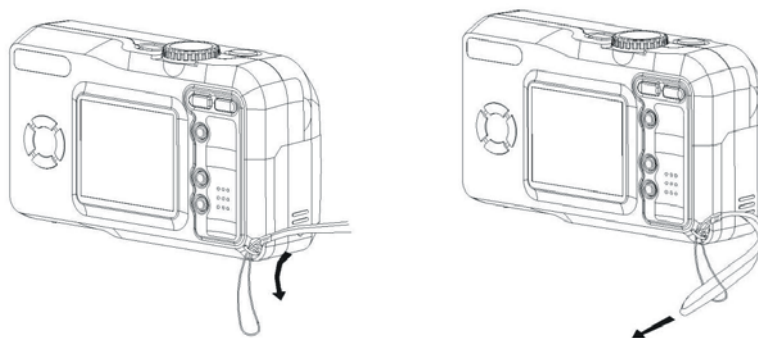


NOTE:

When carrying the camera by the strap, please don't swing the camera on the strap.

Using the Soft Case

- Keep the camera in it's soft case while it is not in use.
- Be sure to insert the camera into the case, with the monitor screen facing down.

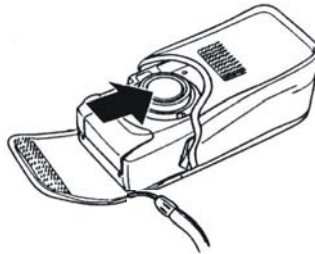


Preparing to Take Pictures

Battery Installation


There are two ways to supply power to the camera. You can use batteries (AA Alkaline or CR-V3), or alternatively, you can use an AC adapter (**DC3.3V/2.0A**).


If using Batteries,

1. Open the battery cover by pushing and sliding into the side.

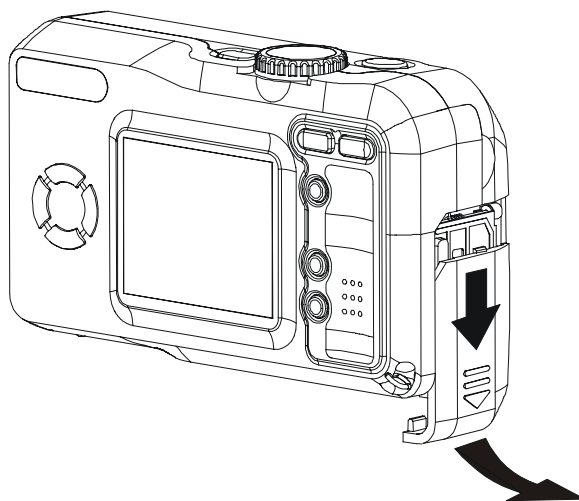


2. Check inscription on battery chamber for correct negative/positive installation.
3. Install 2-AA alkaline batteries.

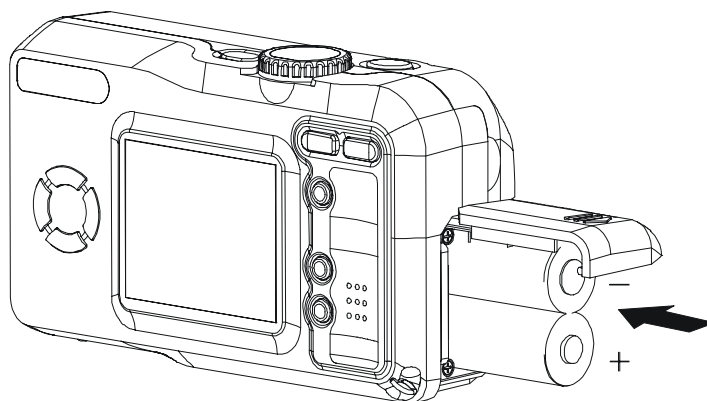

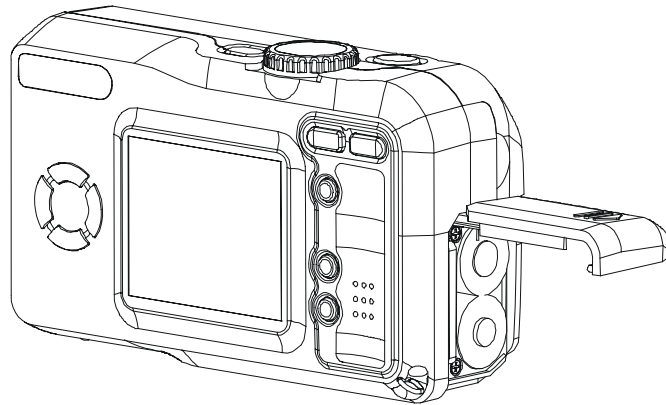

4. Close battery cover.

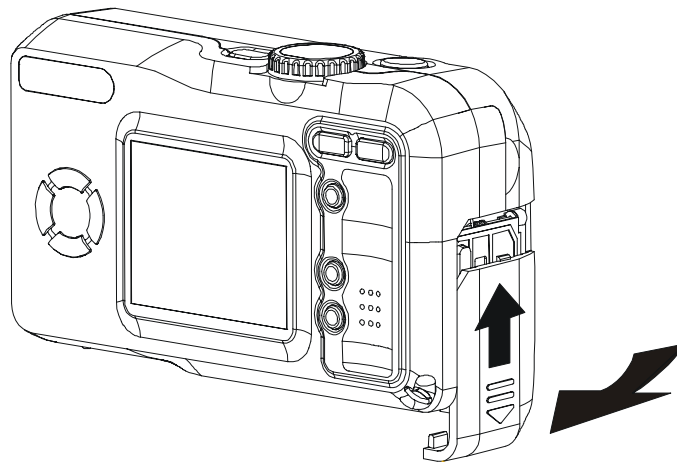

Low Battery Indicator

1. As the battery runs out of power, the “battery low” indicator shows on the monitor screen.

 - Power is running out; change the battery.

NOTE:


- Never use manganese batteries, as they cannot supply sufficient power to support the camera's operations.
- Replace all batteries at the same time to ensure a properly working camera, never mix old and new batteries.
- Remove batteries from the camera if you do not plan on using it for more than two weeks.

- It is normal that the temperature of the camera body rises after extended use.
- It is suggested to use an AC adaptor for extended camera use.

If using AC Adaptor,

1. Plug the adapter into the DC-In jack (**DC-IN 3.3V**).

Please make sure that you use an AC adaptor with the correct specification for the camera (**DC3.3V/2.0A**).

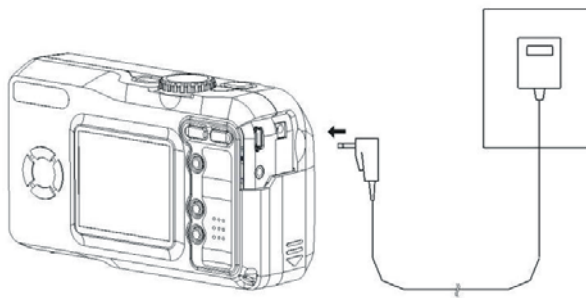

NOTE:

- Please be sure to turn off power before connecting or disconnecting the Adaptor.
- The camera automatically switches over to AC adaptor powered operation whenever the AC adaptor is plugged into the camera.
- Recommend using the AC adaptor to power the camera whenever connected to a computer.

Turning the Power On


1. Press the POWER button (**POWER**) until the green indicator begins flashing.
2. It takes about 3 seconds to power on the camera.

NOTE:

- When you turn on the camera at the first time, you will be required to set up the date and time of camera.
- If you turn on the power when the working mode are in SET or PLAYBACK mode, the lens will not extend to the shooting position.

Date and Time Set-Up

1. Turn the mode dial to SET mode (**SET**).
2. Press DOWN button () until the Date & Time icon () is highlighted.

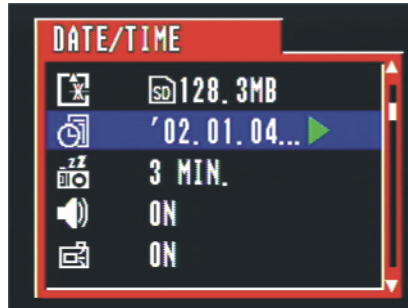

3. Then press SET button (**SET**) to DATE&TIME menu.



4. Press UP/DOWN () to adjust the value of your setting.

5. Press LEFT/RIGHT button () to advance to the next.

Use UP/DOWN button to change the display of date.

- A. Y/M/D
- B. M/D/Y
- C. D/M/Y




6. Press SET button (**SET**) when the OK() is highlighted to complete your setting.


Beep Sound Set-Up

You may turn on/off the operating beep sound in at SET mode (**SET**).

1. Turn the mode dial to SET (**SET**).
2. Press DOWN button () until the BEEP icon () is highlighted.

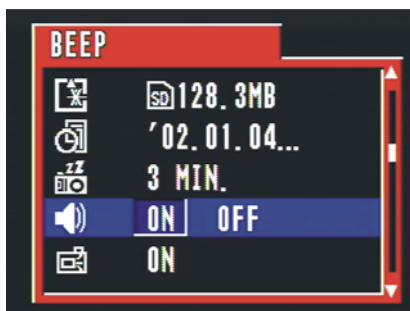

3. Then press LEFT/RIGHT button () to select ON/OFF to complete your setting.

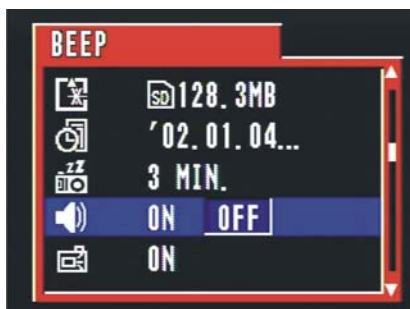

Note: The default setting is “On”.

Quick View Setting (LCD Confirm)

You can view the picture immediately on the LCD screen right after it is taken by setting the LCD Confirm function () in SET mode (**SET**).

1. Set the mode dial to SET (**SET**).

2. Press DOWN button () until the LCD CONFIRM is highlighted.




3. Use RIGHT/LEFT button to select the ON/OFF of quick view setting.


Auto Power Off Settings

You may perform auto power off settings at SET mode (**SET**).

1. Turn the mode dial to SET (**SET**).
2. Press DOWN button () until the AUTO POWER OFF icon () is highlighted.

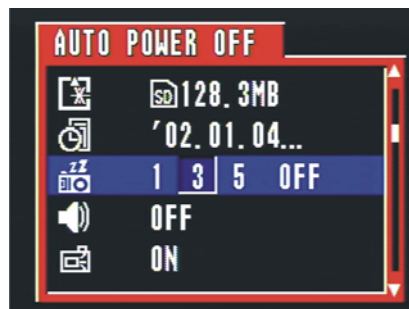

3. Then press LEFT/RIGHT button () to select OFF / 1 MIN. / 3MIN. / 5MIN. to complete your setting.

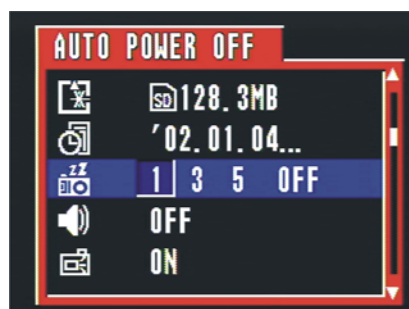

Note: The default setting is “Off”.

1 minute: This camera will automatically turn off monitor screen if there is no operation after one minute. You have to push the Power bottom in order to turn on the camera again.

3 minutes: This camera will automatically turn off monitor screen if there is no operation after three minutes. You have to push the Power bottom in order to turn on the camera again.

5 minutes: This camera will automatically turn off monitor screen if there is no operation after five minutes. You have to push the Power bottom in order to turn on the camera again.

Off: This camera will not perform the power saving function.

TV Out Signal Set-Up

This camera can connect directly to a TV set. Please refer to Page 48 of “Viewing images on a TV set.” It allows you to use the TV screen as your camera LCD screen when shooting or replaying images.

The Video output signal can be switched (NTSC or PAL) to accommodate different signal systems. The default setting will vary between regions.


NTSC: U.S.A., Canada, Taiwan, Japan, etc.

PAL: Europe, Asia (excluding Taiwan), etc.

1. Turn the mode dial to SET (**SET**).
2. Press DOWN button () until the VIDEO SYSTEM icon () is highlighted.



3. Then press LEFT/RIGHT button () to select NTSC/PAL to complete your setting.

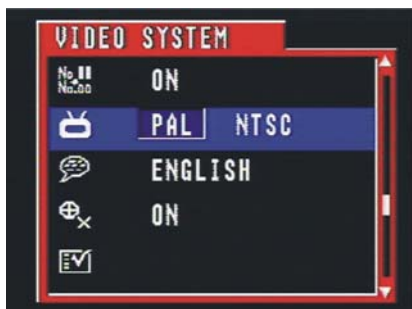

Language Set-Up

Use this feature to select the language for the LCD screen.

You may perform the language setting at SET mode (**SET**).

1. Turn the mode dial to SET (**SET**).
2. Press DOWN button () until the LANGUAGE icon () is highlighted.




3. Then press LEFT/RIGHT button () to select the language you need.




Returning to Default Settings

You can easily change all the settings you made back to their initial setting.

1. Turn the mode dial to SET (**SET**).
2. Press DOWN button () until the DEFAULT SETTING () is highlighted.

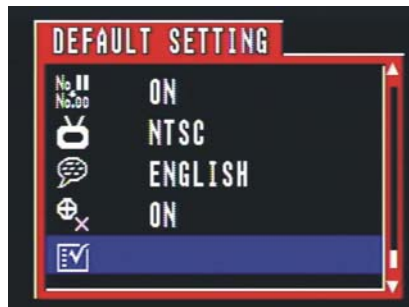


3. Press RIGHT button () to enter the the setting.
4. To return to default setting, use RIGHT button to select "YES".
5. Press SET button to complete the setting.

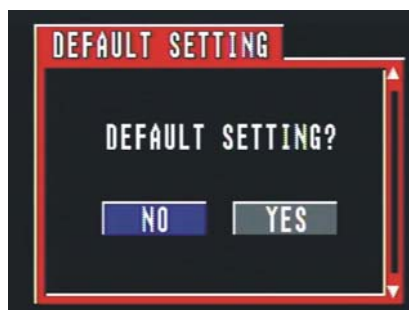

Using a Memory Card


Inserting a SD memory card

1. Push forward the battery cover following the arrow direction on the cover (please refer to page 6).
2. You will see the card slot next to the battery house.
3. Insert the SD card into the slot in the direction shown illustration.

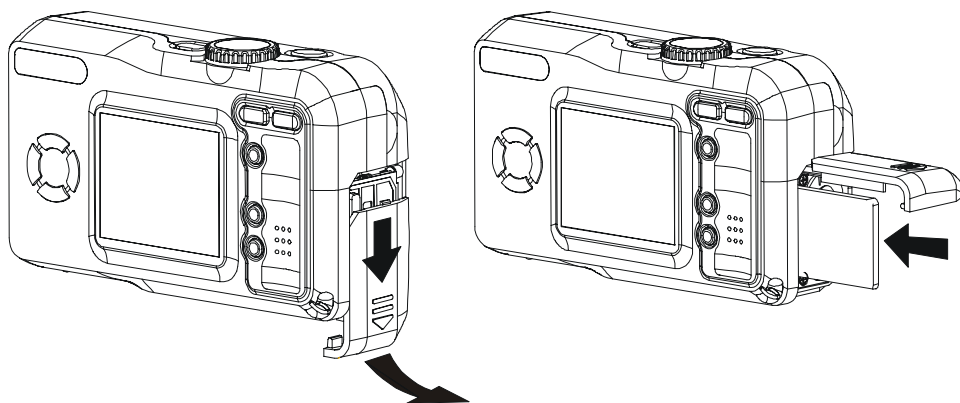

Removing a SD memory card

1. Press the memory card into the camera and then quickly release it. That will make the card to come partially out of the camera.
2. Pull the memory card out of the slot.
3. Close the battery/card cover (please refer to page 7).

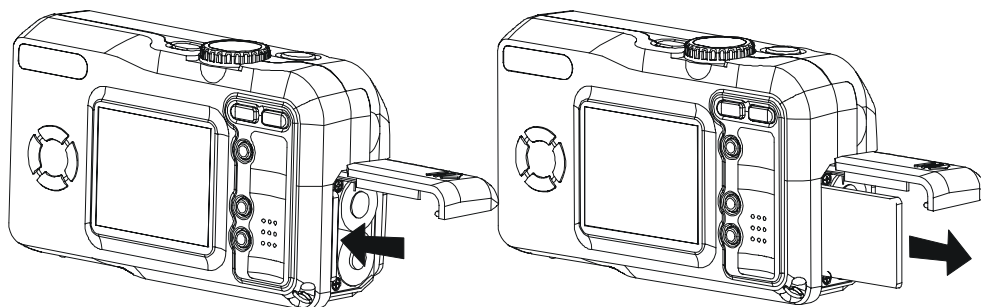


Camera Working Mode

You can select the camera's working mode by using the Mode dial located on the top of the camera. There are 5 working modes in this camera

Auto Photo Mode ()

In this mode, the camera will automatically set the exposure and white balance according to your shooting environment.

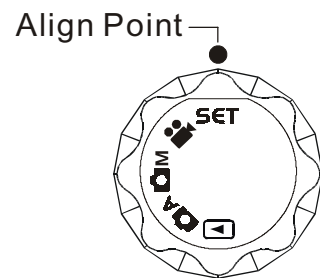

Manual Photo Mode ()

You can manually set the exposure and white balance before shooting.

Playback Mode ()

Replay or delete images from the camera memory storage.
Download and display image at your computer.

Video Mode ()

Use this mode to record movies.
You can also manually set the white balance before recording the video.

Set Mode (**SET**)

By setting each item on the Set-up menu to your preference, you can customized your camera.

Taking Pictures

Previewing a Picture before it is taken

You can preview the image on the LCD screen before you take it.

1. Set the Mode dial to Auto () or Manual ().
2. Press POWER button () to power on the camera. When the camera comes is powering ON, the LED indicators next to the Viewfinder will flash in Green.
3. The live image will automatically show out on the LCD screen with information display.

Turn off the previewing LCD screen

The LCD screen always comes on when you turn the camera power on at any Mode dial. You can turn on/off the previewing LCD screen by pressing DISP button ().

1. Press the DISP button () one time to turn off the information display.
2. Press the DISP button () twice to turn off the LCD screen.



(Auto Mode)



(Turn off the information)



(Turn off the LCD screen)

Using the Auto Focus Indicator

When recording with the LCD screen, align the Auto Focus Indicator in the center of the screen with the subject.



— AF Indicator

Turn off the Auto Focus Indicator

You may turn off the Auto Focus Indicator in SET Mode (**SET**)

1. Turn the mode dial to SET (**SET**).
2. Press the DOWN button () until the FOCUS INDICATOR () is highlighted.
3. Press RIGHT button () to select OFF.




4. This setting is completed after you press UP/DOWN button to the next setting.



(AF Indicator if OFF)

Using the Zoom feature

You can zoom in the subject for a telephoto shot, or zoom out for a wide-angle shot.

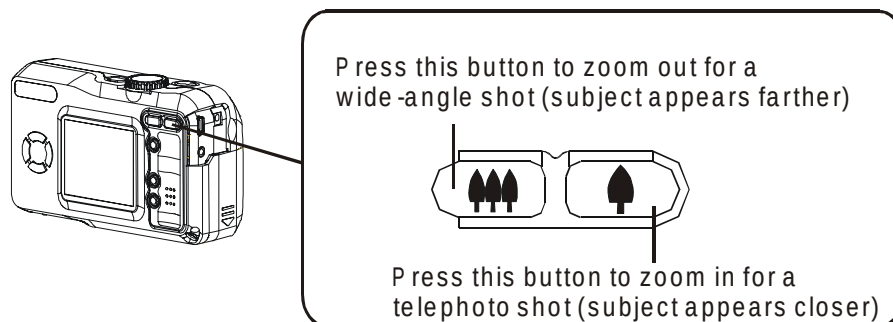


NOTE:

The lens portion moves during zoom operation. Be careful not to touch the lens portion while it is operating.

Digital Zoom Function

This camera has a digital zoom function.

Digital zoom enlarges the image by digital processing and it starts to function when zoom exceeds 3x. Image can be zoomed up to 6 times which combines the effect of the optical zoom.

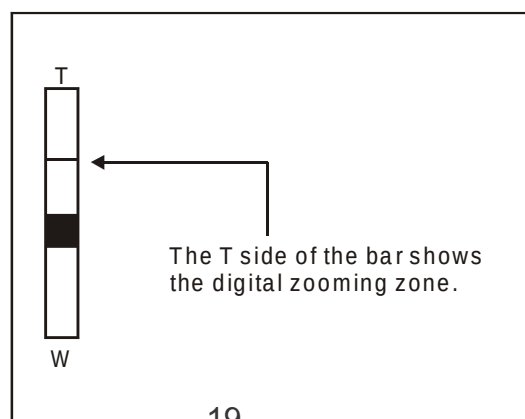

Taking a picture

There are two Camera Working Modes for you to take a picture. In the Auto Mode, all you have to do is to press the shutter button and let the camera judges the environment conditions for you. In the Manual Mode, you can manually adjust the exposure and set the white balance based on different environment condition.

If you don't insert the SD card into the camera, you can take the pictures and storage them into the on board memory. If you insert the SD card into the camera, you can access the SD card only. You can't access the SD card and the on board memory at the same time.


Taking a Picture in Auto Mode

1. Select the Mode dial to Auto ().
2. Press the POWER button (**POWER**) to power on the camera.
3. Press Shutter button half way and align the auto focus mark on the subject you want to take. When the focus is locked, the auto focus mark turns into Green and the LED indicator next to the viewfinder lights in green.
4. Take a picture by pressing the shutter button further. When it makes a sound, the image has been taken and will be recorded on the card or on board memory.

* The Auto Focus Indicator will not appear if the Focus Indicator setting is turn off.

* The beep will not sound if the beeper setting is turn off.

5. During recording to the memory card, the LED indicator will flash in Green. Once the LED indicator stops flashing, the recording has finished.

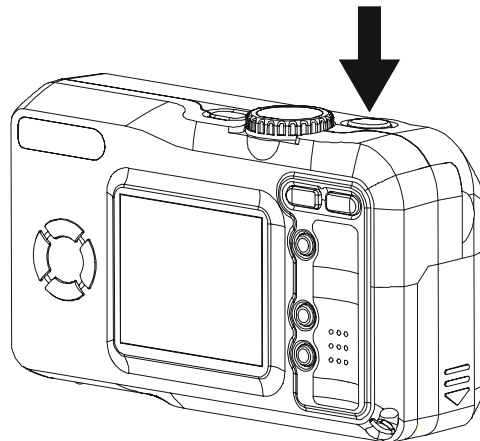**NOTE:**

- While pressing the shutter button half way down, a “Hand Shaking” icon () appears under the auto focus indicator, it may suggest that the focusing on the subject is difficult, and/or the camera is not hold securely.
- While pressing the shutter button half way down, you can also check if there is proper exposure value subject to your current light condition for capturing.
- If the display indicators on the LCD screen turn into green color, it means the camera has automatically lock the exposure and white balance for you.
- If the display indicators on LCD screen turn into red color which means the camera’s auto exposure and auto white balance function is not ready or your capturing condition is over the camera’s setting.
- Under the above condition, if you still press completely down the capture button, the picture you took is in risk of over exposure or too dark.

Setting the Image Quality and Size in Auto Mode

1. Select the Mode dial to Auto ().

2. Press the MENU button (**MENU**).



3. Press UP/DOWN button to set the image quality and size.
4. Press SET button to complete the setting.

Display Icon	Quality	Resolution
	Fine	2048 x 1536
	Normal	2048 x 1536
	Fine	1600 x 1200
	Normal	1600 x 1200
	Normal	1024 x 768
	Normal	640 x 480

Taking a Picture in Manual Mode

1. Select the Mode dial to Manual().
2. Press the POWER button (**POWER**) to power on the camera.
3. The shooting procedures are the same as “Taking a picture in Auto Mode”.

Changing the Picture Resolution

You can change the resolution of images you will record in Manual Mode.

Change the Picture Resolution:

1. Select the Mode dial to Manual().

2. Press MENU button.
3. Use UP/DOWN button to set the resolution of image ().



4. Press Menu again to complete the setting or RIGHT/LEFT button to the next setting.

After setting the resolution and quality, the following information icons will appear on the LCD screen.

Display Icon	Resolution
	2048 x 1536
	1600 x 1200
	1024 x 768
	640 x 480

Change the Picture Quality (Compression):

1. Select the Mode dial to Manual().
2. Press MENU button.
3. Press RIGHT button and select to COMPRESSION ().



4. Use UP/DOWN button to set the quality of image compression.
5. Press Menu again to complete the setting or RIGHT/LEFT button to the next setting.


After setting the resolution and quality, the following information icons will appear on the LCD screen.

Display Icon	Quality 
	Fine
	Normal

Adjusting the Exposure

You can manually set the exposure value (EV value ) to compensate for lighting conditions. This setting is used to obtain better results when shooting backlighting, indirect indoors lighting or a dark background.

1. Set the Mode dial to Manual (.
2. Press MENU button.
3. Press RIGHT button and select to EXP (+/-) (.

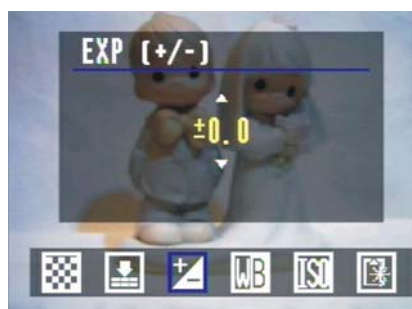

4. Use UP/DOWN button (/) to set the exposure value.
5. Press Menu again to complete the setting or RIGHT/LEFT button to the next setting.

EV Value: -2.0, -1.7, -1.3, -1.0, -0.7, -0.3, 0.0, +0.3, +0.7, +1.0, +1.3, +1.7, +2.0



After you manually set the exposure value in "Manual" capturing mode, the exposure value will be shown in the LCD screen.


Setting the White Balance

You can set the white balance mode to match different type of light source.

1. Set the Mode dial to Manual ().
2. Press MENU and select to WHITE BALANCE ().



3. Use UP/DOWN button to set the white balance mode.
4. Press MENU button to complete the setting or RIGHT/LEFT button to the next setting.

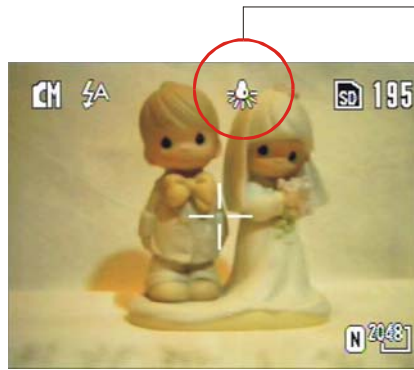

After you manually set the white balance mode in "Manual" capturing mode, the following information icons will be shown in the LCD screen.

- **AUTO** - Normal conditions
(camera adjusts white balance automatically)
-  - Outdoor daylight
-  - Cloudy
-  - TUNGSTEN (Indoors, illuminated by tungsten lighting)
-  - FLUORESCENT (Indoors, illuminated by fluorescent lighting)
-  - converts images to black and white

Changing the ISO Speed

You can change the camera's sensitivity to light by selecting the ISO value.

1. Set the Mode dial to Manual ()
2. Press MENU and select to ISO SETTING ()
3. Use UP/DOWN button to set the ISO value you need.



- Auto: The camera's sensitivity is automatically changed by different lighting value or subject brightness.
 - 100/200/400: In the same lighting condition, the higher ISO value is, the faster the shutter speed will be.
4. Press MENU button to complete the setting or RIGHT/LEFT button to the next setting.



After you manually set the ISO Speed in "Manual" capturing mode, the ISO value will be shown in the LCD screen.

Setting the Slow Shutter Mode

The normal shutter speed ranges between 1/2000 to one of a second, but by setting the slow shutter mode, you can set the slow shutter speed to 1 sec./2 sec./4 sec/8 sec. mode.

1. Set the Mode dial to Manual ().
2. Press MENU and select to SLOW SHUTTER ().



3. Use UP/DOWN button to set the slow shutter speed.
4. Press MENU button to complete the setting or RIGHT/LEFT button to the next setting.



After you manually set the S low Shutter Speed in "Manual" capturing mode, the shutter speed will be shown in the LCD screen when you press the shutter button halfway and the subject is focused.

NOTE:

Recommending to use a tripod to keep the camera steady when you set the manual capturing mode in slow shutter speed mode.

Setting the Flash

Press the  button to select the flash mode.

Mode	Auto	Manual	Video
	☐	☐	X
	☐	☐	X
	☐	☐	X
	☐	☐	X

☐ : Available

X : Not Available

Using the Macro mode

Press the MACRO button () to record subjects at the distance of 10 ~ 50cm when at the maximum wide angle setting and at the distance of 16cm when at the maximum telephoto setting.

Mode	Auto	Manual	Video
Macro	○	○	○

○ : Available

X : Not Available

NOTE:

- The distances mentioned above represent the distances from the camera's lens surface to the subject.
- The flash is set to "Flash Off"  each time when the Macro feature is activated.
- Users can change the flash setting to "Flash Fill" by pressing Flash button. But the Flash Auto and Red-Eye Reduction setting can not be set in Macro Mode.

Setting the Self-Timer

When you use the self-timer function, the subject is recorded about 2 or 10 seconds upon your setting after you press the shutter button.

1. Set Mode dial to Auto () or Manual ().

2. Press the Self-Timer button ().

Self-Timer Options:

OFF - Turns self-timer off.

 - 2 SEC.(Press Self-Timer one time)
Indicates a countdown of two seconds.

 - 10 SEC.
Indicates a countdown of ten seconds.

3. Be sure that the  (2 sec.) or  (10 sec.) appear on the LCD monitor, then press Shutter button.

4. The Self-Timer lamp will flash in red when you press shutter button for countdown.



To cancel the self-timer function

Press the self-timer () again.

Recording Video images

This camera performs video-recording function.

1. Set the Mode dial to Video ().



2. Press the shutter button to start video recording.

This green spot flashes while recording.

Recording length(Sec.)



3. Press the shutter button again to stop the recording.

Adjusting the white balance before recording

Please refer to page 25.

NOTE:

- In Video mode, the resolution is set to 320x240 pixels.
- Be careful not to touch the microphone while recording.
- The maximum length of individual video recording will depend on the memory space. The recording will end automatically when the storage memory becomes full.

Functions Available in Each Shooting Mode

Function	Mode	Auto  A	Manual  M	Video 
EXPOSURE 	Exposure Compensation Valve: -2.0 ~ +2.0	X	○	○
WHITE BALANCE 	AUTO	X	○	○
	DAYLIGHT 	X	○	○
	CLOUDY 	X	○	○
	TUNGSTEN 	X	○	○
	FLUORESCENT 	X	○	○
	BLACK&WHITE 	X	○	○
ISO 	100/200/400/AUTO	X	○	X
SLOW SHUTTER	1sec./2sec./4sec./8sec.	X	○	X
RESOLUTION 	2048 X 1536 	○	○	X
	1600 X 1200 	○	○	X
	1024 X 768 	○	○	X
	640 X 480 	○	○	X
COMPRESSION 	FINE 	○	○	X
	NORMAL 	○	○	X
Flash 	Auto 	○	○	X
	Red-Eye Reduction 	○	○	X
	Off 	○	○	X
	Fill 	○	○	X
Macro Focus		○	○	○
Self-Timer		○	○	X
Zoom		○	○	OPTICAL ZOOM ONLY

○ : Available

X : Not Available

Reviewing Your Pictures and Videos

Viewing Pictures

You can view pictures and images in Playback mode ().

1. Select the Mode dial to Playback (). The LCD screen displays the last recorded image.



2. Use RIGHT/LEFT button ( / ) to view different pictures.

NOTE:

- The image information will not be shown on the LCD screen if you press DISP button.
- When viewing the video, you can use SET button (**SET**) to start the video playing, and use SET button again to pause the video playing.
- Press RIGHT/LEFT button to stop video playing and move to the next image.
- When a video has finished palying, it will display the first frame.

Replaying the Last Image Quickly

In each capturing mode ( **A** /  **M** / ), you can quickly replay the last image you just took.

1. Press the DOWN button () to replay the last image.

If you want to delete this display image, press the SET (**SET**) button.



Press RIGHT/LEFT button to confirm YES/NO.

2. To return to the capturing mode, please the DOWN button again.

Viewing Pictures in Thumbnail

You can view up to 9 images at a time by using the THUMBNAIL function ().

1. Select Mode dial to Playback mode().
2. The LCD screen displays the last recorded image.
3. Press ZOOM OUT button (), the thumbnail images will display on the LCD screen.
4. The thumbnail display will highlight the image that had been showing at the time the thumbnail mode was selected.



4. In the thumbnail display mode, you can use four-way arrow director to select the image you want to review.
5. When the selected image is highlighted, pressing the ZOOM IN button () or SET button to display the image in full screen size.

Zooming the Displayed Image

When viewing a single image in Playback Mode, you can magnify the image you selected. The scale of magnification is x1.0 ~ x4.0.

1. Select the Mode dial to Playback mode (▶).
2. Magnify the image up to the desired scale of magnification by using the ZOOM IN button (⬆).
3. Press the ZOOM OUT button (⬆⬆⬆) to zoom backs the original full sized image

If an image is magnified, the scale drawing and ratio indicator will display on the left down side of the LCD screen.



Slide the magnified image in four ways.

1. Use four-way arrow directors to slide the magnified image.
2. The portion of image you slide to will display on the scale drawing.



NOTE:

To return to the normal size, press MENU button twice or press ZOOM OUT button (⬆⬆⬆) until the image return to the normal size.

Erasing Pictures

You can erase single or all images in Playback mode (▶).

Erasing a Single Image

1. Select Mode dial to Playback mode().
2. Press MENU button.



3. Press SET button to enter the “ERASE ONE” menu ().




Press MENU button to return to the main menu.
Press Set button (**SET**) to confirm the erase.




4. Use RIGHT/LEFT button to confirm “YES” deleting  this picture
or “NO” cancelling this deleting and returning to the main menu.

Erasing All Unprotected Images

1. Select Mode dial to Playback mode().
2. Press MENU button and use RIGHT button () to ERASE ALL ().

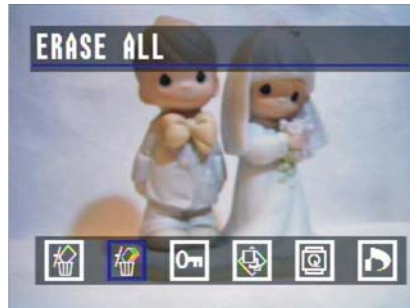

3. Press SET button to enter ERASE ALL menu.

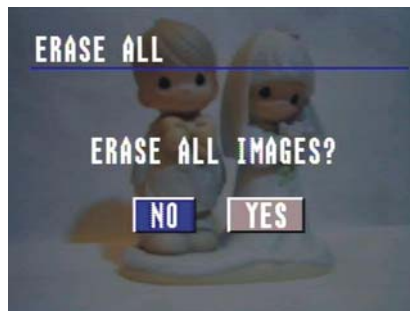

4. When it asks for confirmation, using RIGHT/LEFT button ( / ) to confirm "YES" or "NO".

After you confirm to erase all images, the "NO IMAGE" information will be display on the LCD screen.



Protect or unprotect a single image.

1. Select Mode dial to Playback mode (▶).
2. Follow “Viewing Pictures” procedure to the pictures you want protect.
3. Press MENU button and use RIGHT button (◂) to PROTECT (🔒) function.



4. Press SET button to enter PROTECT menu.



5. Use Set button (**SET**) to protect (🔒) this picture or “MENU” button to cancel (MENU) this protection and return to the main menu.

NOTE:

1. Be sure that the PROTECT icon (🔒) appears after your setting.
2. Use LEFT/RIGHT button to slide the image to the next one.

To remove the protection


When the image is in protection mode, follow the above procedure 1,2, 3 and 4, and then press the SET button again to remove the protection

() of the image.

Running a Slide Show (Auto Play)

View your pictures on the camera LCD screen by using the Slide Show (Auto Play) feature. The pictures appear for a period of 3 seconds.

1. Select the Mode dial to Playback mode () .
2. The last picture taken appears on the LCD screen.
3. Press MENU button and use RIGHT button to "AUTO PLAY" () .

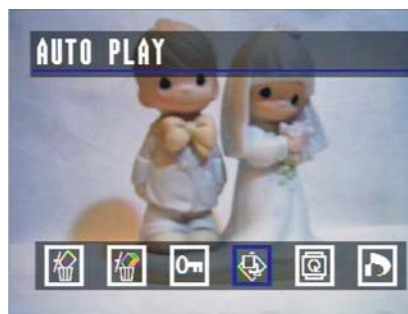

4. The slide show will automatically run from the first picture taken after you press the SET button.



NOTE:


1. You may pause the Slide show by pressing the SET button. To paly to slide show, pressing the SET button again.

2. To stop the slide show and return to the main, please use MENU button.
3. The slide show will keep running as long as there is power supply.
4. Recommend using AC power for long time slide show.

Copying Flash Memory Images to a Memory Card

Copy single or all images currently in the camera's built-in flash memory to a memory card.

1. Select Mode dial to Playback mode ().
2. Press MENU button and use RIGHT button to select to "COPY TO CARD" ().

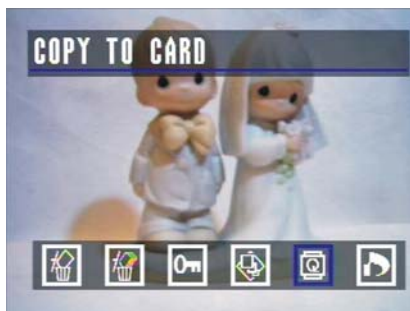

3. Press SET button to enter COPY TO CARD menu.




4. Use RIGHT/LEFT button to select "ONE" or "ALL" units to copy.

"ONE" - An single selected image stored in camera's built-in flash memory will be copied to a memory card.

Use RIGHT/LEFT button to select the image you want to copy to the card.



“ALL” - All the images stored in the camera’s built-in flash memory will be copied to a memory card. During the copying process, the images will be displayed in thumbnail mode and copied one by one.

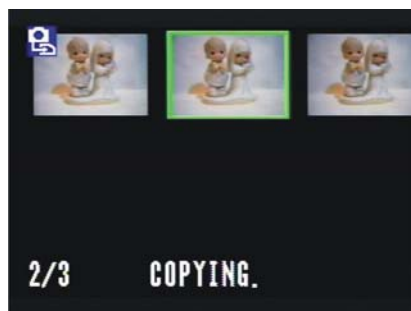


- This starts the copy operation.

NOTE::


You can not copy the images from the memory card to the cameras built-in memory.

Formatting Memory Card or On board memory

1. Select Mode dial to SET mode (**SET**).

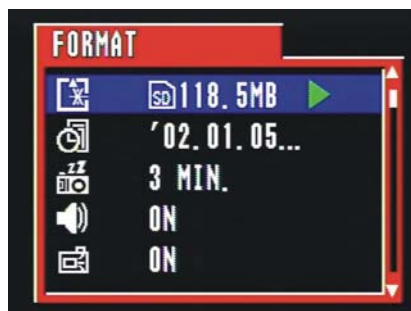

2. When the "FORMAT" is highlighted, press RIGHT button to enter "FORMAT" () menu.

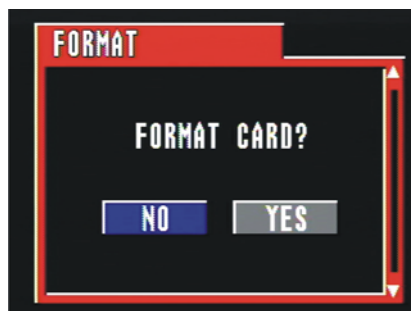

3. Use RIGHT/LEFT button to select "YES" or "NO".
4. Press SET button to confirm your selection.

YES - Formats the memory card.



- This starts the FORMATTING operation.
- After the memory storage is formatted, the message "NO IMAGE" appears on the camera LCD screen in Playback () mode.

NO - Cancels formatting operation.

NOTE:

The data deleted by a format operation can not be recovered. Make sure that you do not need any data currently stored on a memory card before you format it.

Setting Your Camera for Printing

Folders and Files

Your camera automatically created a directory of folders in its on board memory or on the memory card to store images.

Folders Example:

100V3310




1. The folder number starts from 100.
2. Each holder can hold up to 100 pictures. If a picture is taken when the current folder contains a picture file numbered 0999. Your camera will create a new folder by adding one to the current folder number (for example, if the current folder is "100V3310", the new folder will be named "101V3310").
3. The maximum folder number is 999.

Files

Your camera automatically assign each picture a file name consisting of "PIC_" followed by a four-digit number as described below.

File Example: .

PIC_0001.JPG

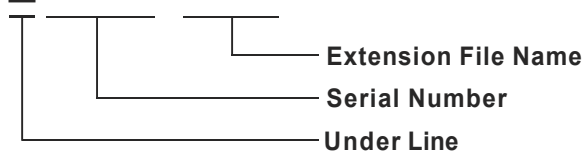

1. Each holder can hold up to 100 pictures. If a picture is taken when the current folder contains a picture file numbered 0100. Your camera will create a new folder and store the new image in the new folder.
2. In a new folder, the picture file numbering starts over from 0001.

File Number Reset

You can perform file number reset function in the camera “SET” working mode.

1. Turn the mode dial to SET (**SET**).
2. Press DOWN button () until the File NO. REST () is highlighted.




3. Press RIGHT/LEFT button ( / ) to select ON/OFF.
4. Press UP/DOWN button to complete the setting and move to the next one .

YES - When this option is selected, the camera assigns all subsequent file numbers sequentially in ascending order, starting from the last number used. If the memory card is formatted or a new card inserted in the camera, the image file number will continue from the last number used.

NO - The camera does not store the last file number used. When another memory card is inserted or a new folder is created, the image file number starts from the lowest number available.

DPOF Print Settings

On your SD card, select with image or images you want to print and how many copies you want. This is convenient for printing on optional printers with the DPOF function or at any print service.

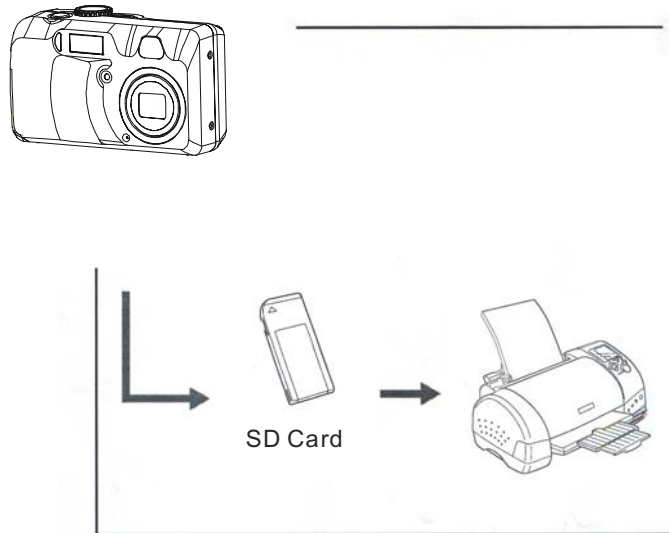

DPOF



The letters “DPOF” stand for “Digital Print Order Format”, which is a format for recording on a memory card or other medium which digital camera images should be printed and how many copies of the image should be printed. Then you can print on a DPOF-compatible printer or at a professional print service from the memory card in accordance with the file name and number of copies settings recorded on the cards.


Print Order Setting

1. Select to Mode dial to PLAY mode().
2. Use RIGHT/LEFT button to select the image you want to set the printing order.
3. Press Menu button.

4. Press RIGHT button to PRINT SETTING.



5. Press SET button to enter the SETTING MODE.

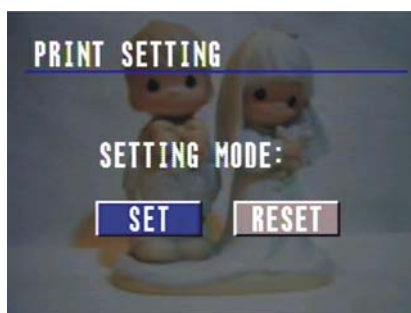

SETTING Modes:

In SET (**SET**) setting mode, press SET button (**SET**) to confirm the printing setting () of this displaying picture.

Once this picture is set, the tick sign appears in box.



Setting for the next image

- After setting the first image, use RIGHT/LEFT button to scroll the imgs you want to set.
- Follow the above PRINT SETTING procedure.

Returning to Main Menu of Playback Mode

- In SET (**SET**) setting mode, press MENU button (**MENU**) to return () to the main menu of Playback mode.

RESET Mode

The Reset feature clears all printing settings.

PRINT Image Matching



This camera supports PRINT Image Matching. Images recorded with it include information about the mode setting, camera setup, etc. When you print an image on a printer that supports PRINT Image Matching, the printer reads this data and adjust the printed image accordingly, so your image come out just the way you intended when you recorded them. See the documentation that came with your printer for full details about PRINT Image Matching.

*PRINT Image Matching is a term for the print command that is embedded in header file fo the image created by Digital Camera. It contains color setting and image parameter information.


* SEIKO EPSON Corporation holds the copyright for PRINT Image Matching.

Connecting your camera

Viewing Images on a TV Set

Images displayed on the camera's monitor screen can also be displayed on a television screen.

1. Use the video cable to connect the camera to the TV set as shown.

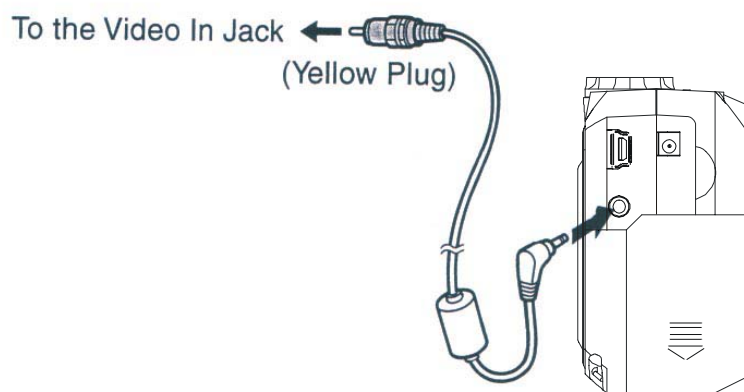

2. Perform the required operation on the TV to obtain video input
3. Perform normal playback and recording operations on the camera.

NOTE:

The camera LCD screen turns off automatically during video output.

Selecting the Video Output Signal Mode

Your camera supports both NTSC (used in U.S., Japan, and other countries) and PAL (used in Europe and other areas) video output signal systems. The video system you should use depends on the country of origin of the equipment you are connecting to the camera's VIDEO OUT terminal. Please refer to page 12 to select the video output signal mode.

Downloading Images to a Computer


There are two ways to download images taken with the camera to a computer.

- Directly from the SD card.
- Connect the camera to a computer via the USB cable.


After installing the supplied software, download images automatically by simply connecting the camera to a computer with the supplied USB cable.

Downloading Directly from a SD card

1. Eject the SD card from the camera, and inset it into a SD card reader which is connected to the computer.

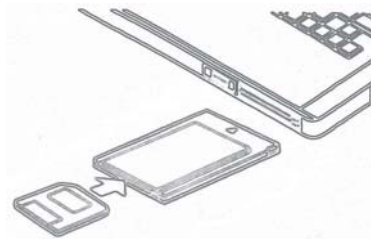

If you are using a PC card reader, first insert the SD card into a PC card adapter (optional), and then insert the PC card adapter into the computer's PC card reader.


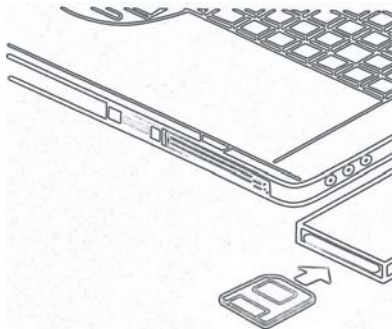


2. Double-click the icon of the drive with the SD card.
3. Copy images from the card into a folder of your choice on the hard disk.

Connecting the Camera to a Computer via USB Cable

1. Make sure that you install the USB driver that comes on the bundled CD-ROM first.
2. Connect the supplied USB cable to the computer's USB port
You do not need to turn off the computer or camera when making this connection.

Please refer to your computer manual for information regarding to the USB port location.

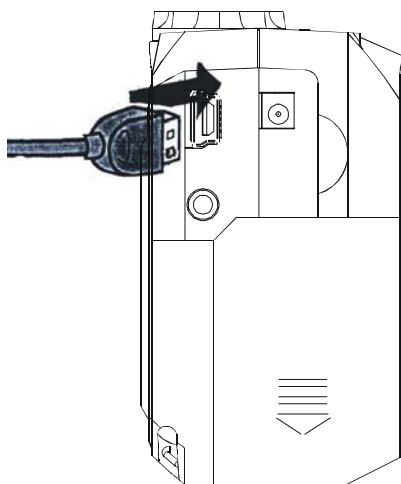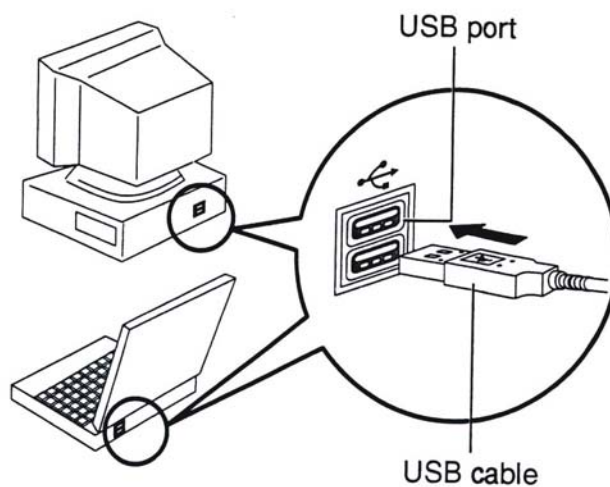

1. Open the terminal cover with your fingernail.

2. Insert the connector until it clicks.

3. Turn on your camera.

When the connection to the computer is complete, the LCD screen turns off.

NOTE:

- When you disconnect the USB cable while the camera is on, the camera will automatically turn off.
- It's recommended to power the camera from a household power outlet with the optional AC Adapter.
- If you are in the first time to connect the camera to a PC in Windows98 operation system via USB cable, the computer will detect the camera as "Unknow device" and then automatically complete the camera installation.

4. A “Removable Disk” will be displayed under “My Computer”.
5. Double-click the “Removable Disk” and you will see a “DCIM” folder.
6. All the images stored on camera are transferred to the “DCIM” folder.

About the memory storage you using in this camera

On-board Memory

This camera has on board memory. If you do not insert SD card into the camera, all images taken will be stored in camera on-board memory. If you insert a SD card into the camera, the images taken will be stored in the SD card.

Memory Card Data

Images recorded with this camera and other data are stored on the memory card using DCF (Design rule for Camera File system) protocol. DCF protocol is designed for image and other data exchange between digital cameras and other devices.

DCF Protocol

DCF Protocol defines the format for image file data and the directory structure for the memory card. If images taken by a DCF camera, those images can be viewed as well in another manufacturer's DCF camera.


Installing the Software

Downloading Pictures

Installing Camera Drivers

If operating system is Windows 98/98SE:


- Insert CD into your PC cd-rom drive.
- Program should install automatically.
- Follow on-screen instructions.

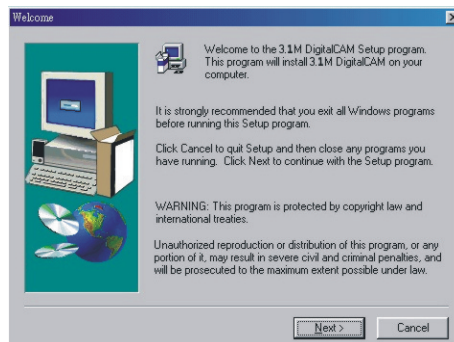

NOTE:

If your system requires a manual installation: Click Run, type “(the CD-ROM drive):/install.exe”, then click OK.


Restarting your computer is recommended.

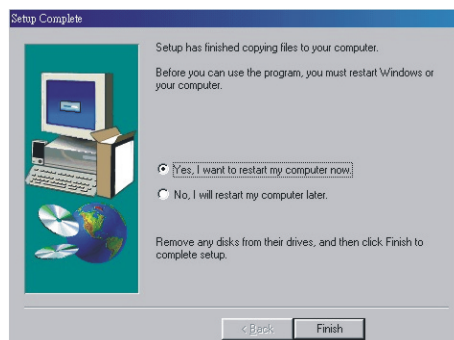

Installing MGI PhotoSuite 4 SE

If operating system is Windows 98/98SE/2000/ME/XP:

1. Insert CD into your PC cd-rom drive.
 2. Program should install automatically.
 3. Follow on-screen instructions.
-
1. Click the MGI PhotoSuite 4 SE menu on autorun frame.

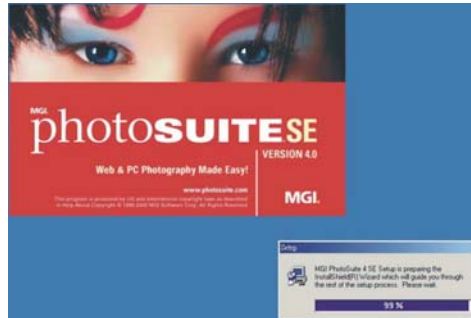


2. A Welcome window will be displayed.
Click [Next>] to move to the next step.




3. The Software License Agreement window will be displayed.

If you agree to this, click [YES], the window will then move to the next step. If you disagree, click [NO] and the install program will be canceled.

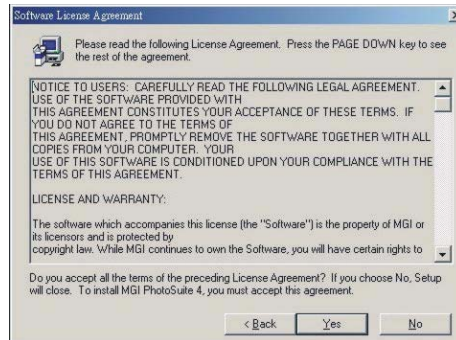


4. Select Destination Location.

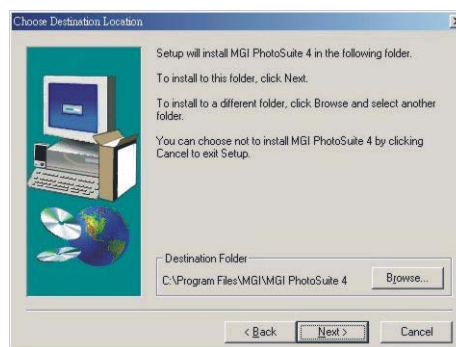

5. Start Copying Files window will displayed.

Click [Next>] to start installation.

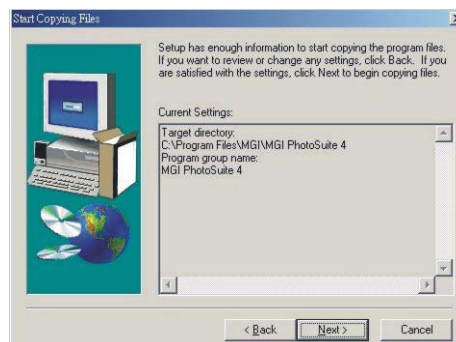

6. Installation is completed.



NOTE:

If your system requires a manual installation: Click Run, type “(the CD-ROM drive):/install.exe”, then click OK.

Restarting your computer is recommended.

Using MGI PhotoSuite 4 SE

1. Click Start> Programs> MGI PhotoSuite 4> MGI PhotoSuite 4.
2. This will open the MGI PhotoSuite software to edit, crop and print your pictures.

Reference

Indicator Lamp Reference

Mode	No.	Camera Status		LED	ALWAYS ON	Blinking (UNIT: ms)		Video	Playback	Auto	Manual
						ON	OFF				
General	1	Power On (till ready)		Green		130	130	○	○	○	○
	2	Dial Mode Change		Green		130	130	○	○	○	○
	3	Mass Storage		Green	○			○	○	○	○
	4	LCD is OFF		Green	○			○	○	○	○
REC	1	Charge for Flash (till ready)		Red		130	130			○	○
	2	Video AF Lock (AE/AWB Unlock)		Green	○			○			
	3	Video Recording		Green		500	500	○			
	4	Still AF/AE/AWB Lock	With Flash	Red	○					○	○
			Without Flash	Green	○					○	○
	5	Capture Still Image	With Flash	Red	○					○	○
			Without Flash	Green	○					○	○
	6	Saving Image	Charging Flash	Red		130	130			○	○
			No Charging Flash	Green		130	130			○	○
	7	Self-time Capture (10sec., 2sec.)	With Flash	Red							
			Without Flash	Self-timer						○	○
	8	Self-time Capture 2sec.		Self-timer		125	125			○	○
	9	Self-time Capture 10sec.	1~4 sec.	Self-timer		500	500			○	○
			5~8 sec.	Self-timer		250	250			○	○
			0~10 sec.	Self-timer		125	125			○	○
PLAY	1	Erase All		Green		130	130		○		
	2	Slide Show (Reading Image)		Green		130	130		○		
	3	Copy to Card (Copying)		Green		130	130		○		

Troubleshooting

Problem	Cause	Action
Power does not turn on.	- Batteries are loading in wrong direction. - Batteries are dead. - The battery cover is open.	- Reload batteries in the correct direction. - Replace the new batteries. - Make sure the battery cover is closed security.

Problem	Cause	Action
Image is not recorded when the shutter release button is pressed.	- The mode dial is set to Playback mode. - Flash is in charge. - Memory is full.	- Turn your mode dial to Auto mode or Manual mode. - Wait until the flash charging finishes - Delete images you no longer need.
The camera does not shoot.	- The model dial is set to Playback mode. - The flash is charging. - Memory is full. - The SD card is not formatted correctly.	- Turn the mode dial to Auto mode, Manual mode or Video mode. - Wait until the flash charges. - Insert a new SD card. - Delete images you no longer need. - Format the card correctly. - The card may be defective.
Images are blurry or unfocused.	- The camera was moving when you took images. - The subject was out of the range over which the camera can focus.	- Hold the camera steady when shooting. - Be sure that there is at least 80cm between the camera lens and the subject. - Use the macro mode to shoot close-ups images at a distance of 20cm. - When shooting distance subjects, use the camera to Normal/Infinity focus mode.
Recorded images are not saved in memory	Camera power down before the save operation is complete.	If the low-battery indicator appears on the camera LCD screen, replace batteries with a full set of new ones.
Images are not displayed.	A memory card with non-DCF images recorded with another camera is loaded in the camera.	This camera can not display non-DCF images.
The flash doesn't fire.	The flash mode is set to Off.	Set the flash to any other mode except Off.
Image not showing on TV.	- There is a problem with the camera-TV connection. - Incorrect video system setting.	- Please use the attached video cable to connect the camera to the TV correctly. - Set the video system to the appropriate setting, NTSC or PAL for your TV
Cannot transfer images after connecting to a computer with USB cable.	- USB driver is not installed. - Camera is turned off.	- Install the USB driver before you connect the camera to a PC. - Turn on the camera.

Default Setting in Each Camera Working Mode

Working Mode	Descriptions	Default
Playback	Image Information Disp Mode	Basic
Auto Photo Mode	Quality/Size	2048x1536/Normal
	Flash	Force Off
	PreView Disp Mode	Display Image and Information
Manual Photo Mode	Size	2048x1536
	Quality	Normal
	Flash	Force Off
	Exposure Compesation	0.0
	White Balance	AUTO
	ISO Speed	AUTO
	PreView Disp Mode	Display Image and Information
Video Recording Mode	White Balance	AUTO
	PreView Disp Mode	Display Image and Information
Setup Mode	Beep	ON
	Date Style	YMD
	Focus Indicator	ON
	Auto Power Off	3 Min.
	LCD Confirm	ON
	TV Out	NTSC
	Language	ENGLISH

Specification

Sensor	3.34 Mega Pixel CCD (effective pixels: approx.3.1 Mega Pixels)
Lens	F 2.66 ~ 10.383
Built-In Viewfinder	Optical Viewfinder
Focus Range	Normal Mode: Infinity~50cm, Macro Mode:50~10cm(W)/16cm(T)
Sensitivity	Auto, 100,200,400
LCD Display	1.5" Color TFT LCD panel
Still Image Resolution	2048x1536, 1600x1200, 1024x768, 640x480
Video Resolution	320x240
Still Image Quality	Fine: 5X compression rate Normal: 10X compression rate
Exposure Meter	Center-weighted average, Multi-pattern TTL AE
Exposure Control	Auto & Manual
Exposure Compensation	-2EV to +2EV (-2.0, -1.7, -1.3, -1.0, -0.7, -0.3,0.0, +0.3, +0.7, +1.0, +1.3, +1.7, +2.0)
Shutter Control	Mechanical Shutter With CCD variable electronic shutter Shutter Speed 1/2000~~8 sec.
Digital Zoom	Preview Mode: up to 2X continuous Playback Mode: up to 8X scollable
Image File Format	EXIF 2.1 compatible format (JPEG Compression) DCF compatible. Support DPOF, PIM
White Balance	Auto/Manual (5 modes in manual selection: day light/ cloudy/ tungsten/fluorescent/black & white)
Picture Storage	On-board flash memory: 16MB External: SD memory card/ MMC
Microphone	Built-In
Sound Feedback	Buzzer
Communication Interface	USB 1.1
Self-Timer	2 steps, 2/10 sec. with Beep sound
Playback Mode	Single/ 9 Thumbnail pictures
Video & Audio Out	Yes, NTSC/PAL
Power Supply	2xAA batteries DC Input: +3.3V DC adapter
Dimension	Camera body: 107x63x36.4 mm
Weight	Camera body without battery: 160g

*** Specifications are subject to change without prior notice.**