 




User Manual

 
In the box

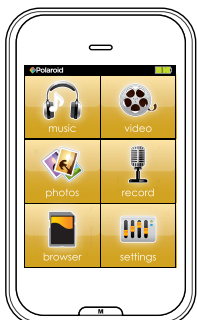


MP3 Player




CD
(Video Converter)

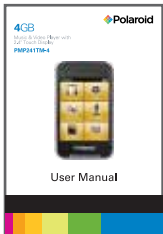

User Manual

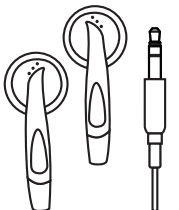 


Headphones

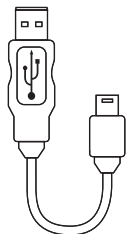 


USB Cable

 Location of controls

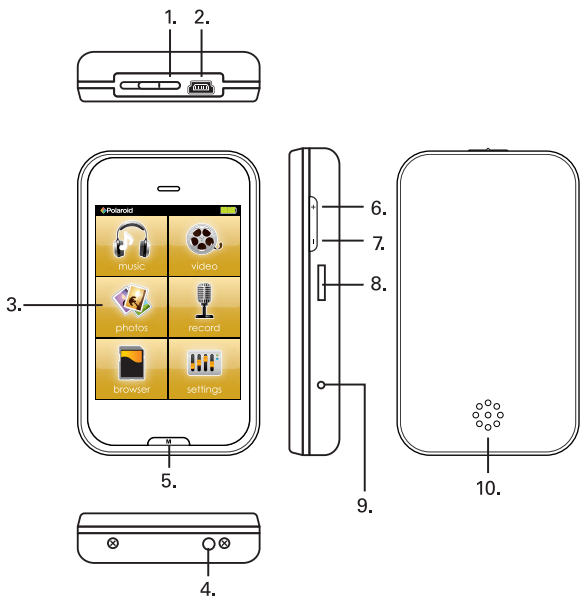

1. **[POWER]** On/off switch
2. Mini-USB port
3. Touch Screen display
4. Headphone jack
5. **[M]** • Select
 - Return to main menu
6. **[+]**
 - Volume up
 - Next track
7. **[-]**
 - Volume down
 - Previous track
8. Micro SD card slot
9. Reset
10. Speaker

 Charging

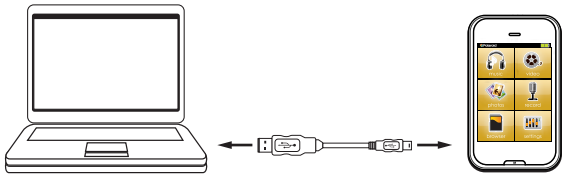

1. Connect the player to your computer using the included USB cable.
2. Charge the battery between 3-5 hours. Do not charge for more than 8 hours.

 


Mini SD card

The player supports Mini SD cards (not included), which allow you to add up to 8GB additional memory to the MP3 Player.

To insert the Mini SD card:


1. Insert the Mini SD card into the card slot with the metal contacts facing down towards the back of the player and gently push it in until it clicks. Do not apply excessive force, as this may damage the player and Mini SD card.
2. To view files on the Mini SD card, touch "browser", from the main menu and select "Card Memory".
3. To remove the Mini SD card, gently push it in until it pops out.

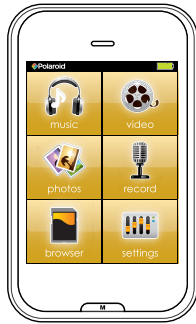


Mini SD card
(Insert contacts facing down)

Transferring media files to the player

 1. Find music, picture, or video files on your computer.

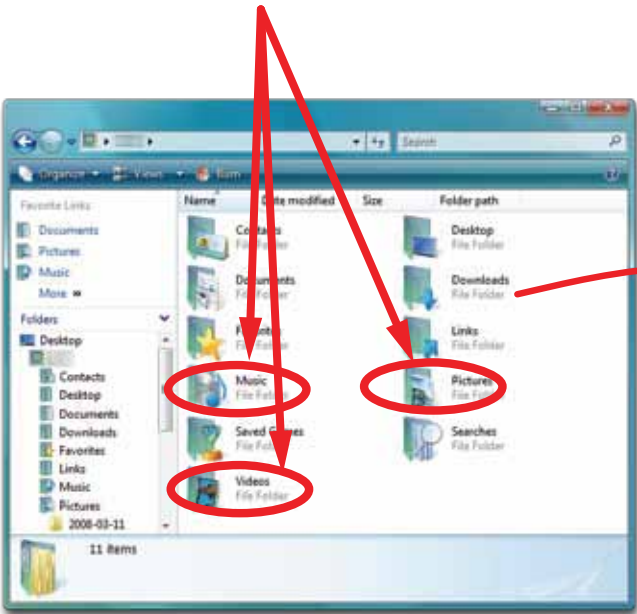

 2. Connect the MP3 Player to your computer, and locate "MP3".
3. Drag the files into the Music, Pictures or Video folder.

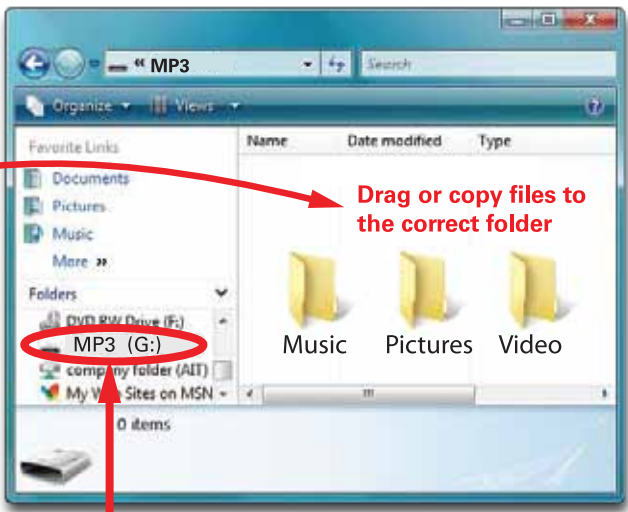


Locate "MP3"

*Screenshots above may be slightly different than your computer's operating system.

Converting videos

Before transferring video files to the player, you must convert them to the correct format. Use the Video Converter provided on the included CD to convert most video files to the correct format suitable for the player.

 1. Insert the CD into your computer's CD drive.
2. The CD should open automatically. On the installer screen that appears, select "Video Converter".

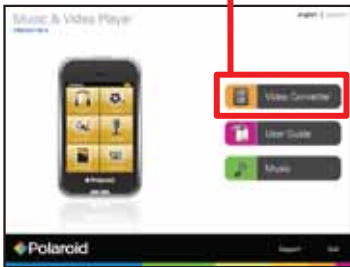

Installer screen

i It is also possible to delete files on the player while connected to the computer. Select the file and press the delete key of the computer's keyboard.

 
i If the CD does not open automatically, go to "My Computer" to manually launch the installer screen.

Basic operation

Turning on/off:

Make sure the player is fully charged before turning it on.

- To turn the player on/off, slide and hold the **[POWER]** switch to the right until the display turns on or off.



Lock/unlock function:

The Lock function prevents you from accidentally pressing the buttons while using the player.

- To lock the player, slide the **[POWER]** switch to the left. To unlock, slide the **[POWER]** switch to the right.

Resetting the player:

 
If the player malfunctions or freezes, you can use the reset function to restart it.

- To reset the player, take a metal pin (such as the end of a paperclip), and gently push it into the RESET hole to restart the player.


Using the player

After turning on the player, the main menu appears.

- Touch an icon on the main menu to select it.
- To return to the main menu, press the **[Home]** button or press and hold the **[M]** button.

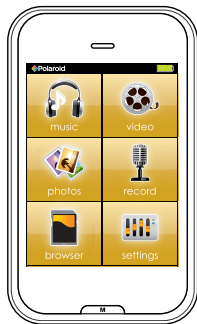

main menu

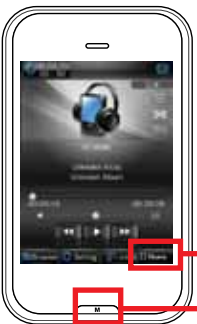 

music screen

 
Main Menu Options:

- music: play songs
- video: play movies
- photos: view pictures
- record: record voice memos
- browser: view or delete files on the player
- settings: change system settings

Listening to music

Select "music" from the main menu and the music screen appears. Music playback can be controlled from the touch display or the **[+]** **[-]** **[M]** buttons of the player.

Main Directory

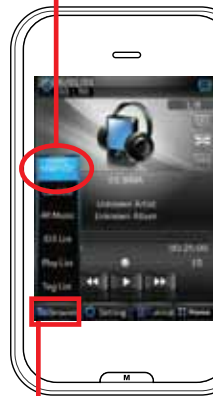

music screen



music files on the player

To search for music files on the player select "Browser" and "Main Directory" from the music screen.

Depending on what you’re doing on the MP3 Player, the different buttons perform different functions.

In Music Modes



i

you can also touch an item to select it.

	During Play Mode	During Standby (Pause) Mode
[+]	Volume Up	Next Song
[-]	Volume Down	Previous Song
[M] ----	• Play/pause music • Makes a selection • Press & hold to return to the main menu	

Menus or File Browsing



i

you can also touch an item to select it.

[+]

Moves the selection down

[-]

Moves the selection up

[M] ----

- Makes a selection
- Press & hold to return to the main menu

Videos

Select “videos” from the main menu, and the video browser screen appears.

Use the [+] or [-] button to select a video and press the [M] button to start playing the selected video.

[+] [-]



i

Before transferring video files to the player, you must convert them to the correct format. Use the Video Converter provided on the included CD to convert most video files. Refer to “Converting videos”.

[M]

Video control

[+] [-]



i

you can also touch an item to select it.

[M]


	During Play Mode	During Standby (Pause) Mode
[+]	Volume Up	Next Video
[-]	Volume Down	Previous Video
[M] ----	• Play/pause video • Makes a selection • Press & hold to return to the main menu	

Photos

Select “photos” from the main menu, and the photo browser screen appears.

Use the [+] or [-] button to scroll through the “IMAGE” folder and select a photo you would like to view, and press the [M] button.

 To view all pictures in slideshow mode, press  to switch between automatic / manual slideshow.

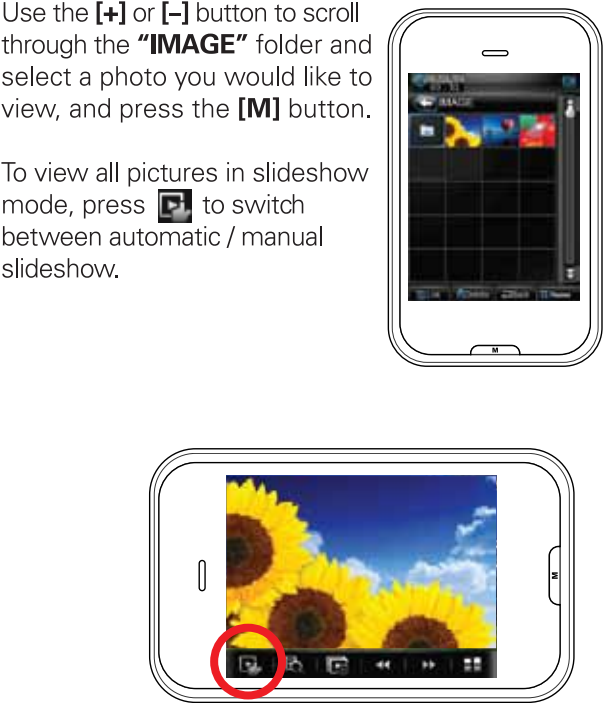

Record

To record voice memos, select “record” from the main menu.

Press  or the [M] button to start recording.

To pause recording, press  or the [M] button again.

Press  to save the recorded file.

Press  to view and playback voice memos.



Browser

To view or delete files on the player or SD card, select “browser” from the main menu and select the folder you wish to browse using the touch display or the [+] [-] [M] buttons of the player.



[+]

[-]

[M]

Settings

In the settings menu you can customize various player settings such as power usage, language, display settings and more.



i

Adjust the “Backlight Time” and “Power off” options to extend and optimize battery performance.

Legal information

FCC Part 15:
This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.
Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation."

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governance in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to: HYPERLINK "http://www.polaroid.com" www.polaroid.com and Reference About / Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Troubleshooting

Can not power on
• The battery may be exhausted, please recharge the battery.

Files can not be transferred to the player
• Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer
• Check the connection between the player and PC, and confirm the USB cable is properly connected.

No sound from the headphones
• Please ensure the volume is turned up, and the headphones are properly connected.
• Check if the format of music file is supported by the player.

Can not record
• Check if there is enough memory and battery capacity.

Display is in the wrong language
• Please ensure you selected the correct language from the “Settings” menu.

The buttons do not work
• Slide the [POWER] switch to the right to unlock the player.

I cannot display my .jpg files
• Many digital cameras and image editing softwares add hidden data to the .jpg files. This data can prevent the player from loading the images. Try to eliminate them by saving the file with another name.

Resetting the player
If the player malfunctions, you can use the reset function to restart it.
• To reset the player, take a metal pin (such as the end of a paperclip), and push it into the RESET hole to restart the player.

Limited Warranty

This product as supplied and distributed new by AIT, Inc. (“AIT”) to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase (“Warranty”).
In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:
- Provide proof of the date of purchase within the package (Dated bill of sale)
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product. Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

AIT, Inc.
ATTN: Returns Department
14-C 53rd Street
Brooklyn, NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT, EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
☎ 1-877-768-8483 (Toll Free)
✉ polaroidsupport@southerntelecom.com

Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)