 


Video

1) Select “video” from the Homescreen (if you have an SD card inserted, choose from “Player” or “SDCard”). The video menu appears.

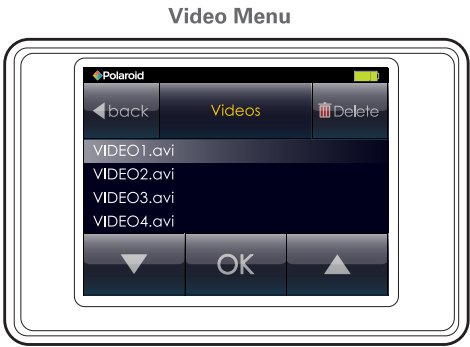 


2) Use the [▼] or [▲] button to select a video file and press “OK”, the video begins to play. You can also double-tap a file to open it.


3) Touch the center of the screen to make the video interface appear or disappear.

4) Use the [◀ back] button to go to previous screens or keep pressing it to return to the Homescreen.

i To watch videos taken with the players camera, select “CAMERA” from the video menu.

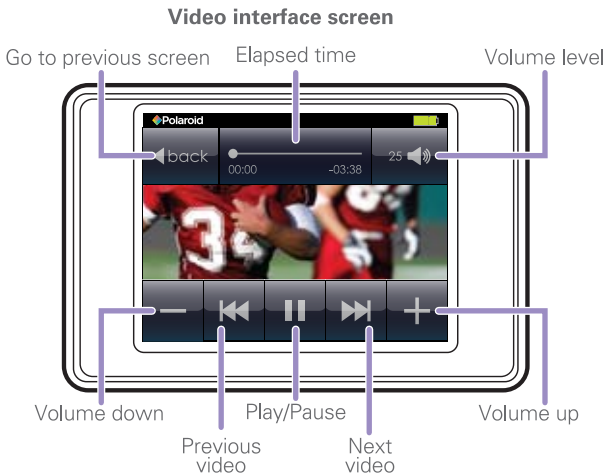


 5) Touch the center of the screen again to make the video interface disappear.

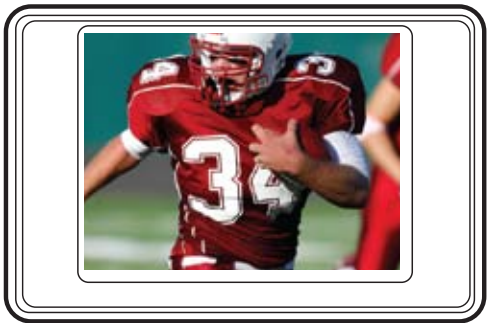

Photos

 
1) Select “photos” from the Homescreen (if you have an SD card inserted, choose from “Player” or “SDCard”). The photo browser appears.

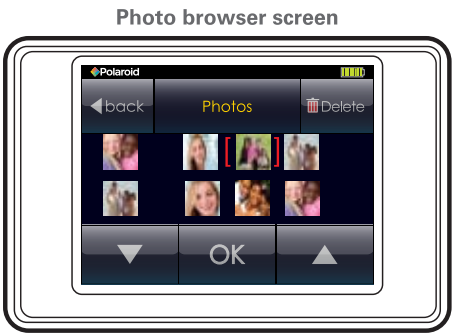

2) Use the [▼] or [▲] button to select a photo file and press “OK”, the photo appears on the screen. You can also double-tap a thumbnail to open a photo.

3) Touch the center of the screen to make the photo interface appear or disappear.

 i To view photos from the player's camera, select “photos” from the Homescreen, select the “camera” folder and select the photo you would like to view.

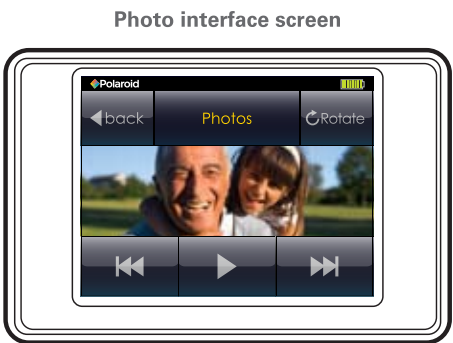

4) Use the [◀◀], or [▶▶] buttons to view the previous or next photo.

5) Use the [▶] button to start and stop slideshow mode.

 
6) Use the [🔄 Rotate] button to adjust the image

7) Use the [◀ back] button to go to previous screens or keep pressing it to return to the Homescreen.


Camera

Taking Photos

1) Select “camera” from the Homescreen, the viewfinder screen appears.

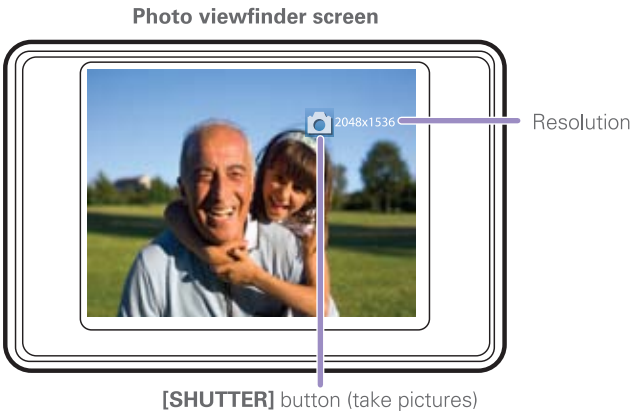


 2) To take a picture press the [SHUTTER] button on top of the camera or touch the [📷 SHUTTER] button icon on the screen.



i To switch between photo and video modes, quickpress the [POWER] button.

 3) Touch the center of the screen to make the photo interface appear, the settings bar appears at the bottom of the screen.

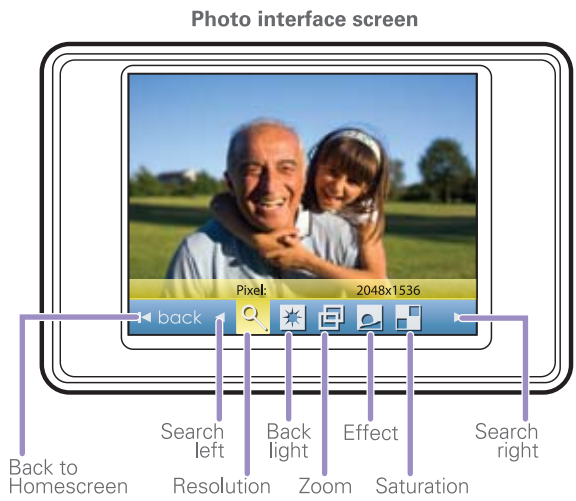



4) Press the settings icon you would like to change, then use the [◀] or [▶] button to scroll through that setting's options.

5) Touch the center of the screen again to exit the camera setting's screen and return to picture taking mode. The settings bar must be closed to take pictures.

Recording videos


1) Select “camera” from the Homescreen, the photo viewfinder screen appears.

  2) Quickpress the power button to switch from photo mode to video mode.

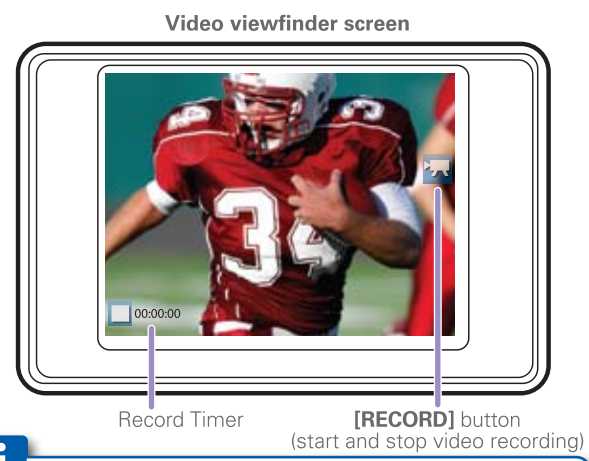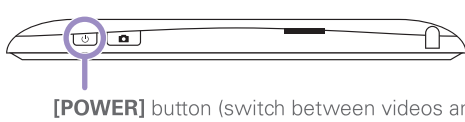

i The video settings must be adjusted in photo mode. The changes made to photo settings will take effect for video settings as well.

 3) To start recording a video, press the [SHUTTER] button on top of the camera or touch the [📷 RECORD] button icon on the screen.

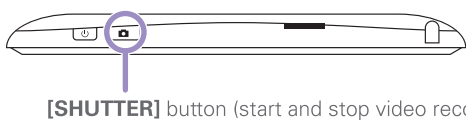

4) To stop recording and save the video, press the [SHUTTER] button on top of the camera or touch the [📷 RECORD] button icon on the screen.

 
5) To return to the Homescreen from video recording:

- A) Switch back to photo mode (quickpress the [POWER] button).
- B) Open the photo interface (touch the center of the screen)
- C) Touch the [◀ back] button.

i To view videos from the camera, select “videos” from the Homescreen, select the “camera” folder then select the video you would like to view.

Record

To record voice memos, select “record” from the Homescreen, the recorder screen appears.

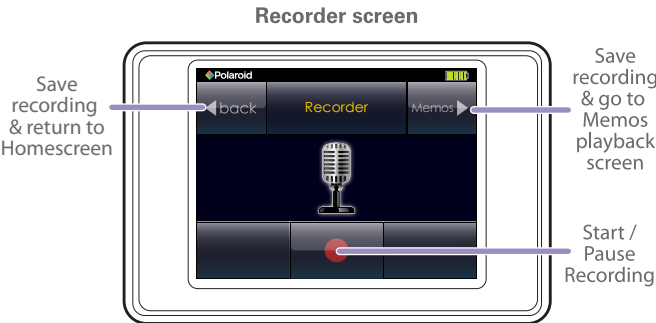

1) Press [🔴] to start recording.

2) Press [⏸] to pause the recording.

3) Press [🔴] again to continue recording within the same voice memo file.

4) Press the [Memos ▶] button to save the recording and enter the Memos Playback Screen where you can playback the recorded voice memos.

 
or

Press the [◀ back] button to save the recording and return to the Homescreen.

Settings

In the settings menu you can customize various player settings, such as: display settings, power options, language, and more. You can also browse all files on the player by selecting “Explorer”.

1) Select “settings” from the Homescreen, the settings menu appears.

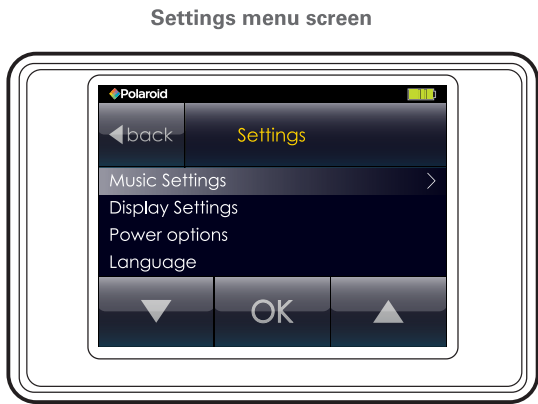

2) Use the [▼] or [▲] button to select an option and press the “OK” button. You can also double-tap an option to open it.

3) Use the [▼] or [▲] button to make changes and press the “OK” button to confirm.

Browsing files on the player

1) To browse for a file, select “explorer” from the settings menu (if you have an SD card inserted, choose from “Player” or “SDCard”)

2) Use the [▼] or [▲] button to select a file, and press the “OK” button. You can also double-tap a file to open it.



i Adjust the “Display” and “Power Options” to extend and optimize battery performance.

Deleting files on the player

1) To delete a file, select “explorer” from the settings menu.

2) Use the [▼] or [▲] button to select a file, and press the “Delete” button. You can also single-tap the file to select it, then press the “Delete” button.

3) On the “Delete file?” screen that appears, select “YES” to delete the selected file, and return to the Browser screen.

or

Select “NO” to return to the Browser screen.



Legal information

FCC Part 15:
This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.
Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.”

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PLR IP Holdings, LLC, its licensees and affiliates, fully supports all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governance in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to: [HYPERLINK "http://www.polaroid.com"](http://www.polaroid.com) www.polaroid.com and reference About / Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Troubleshooting

Can not power on
• The battery may be exhausted, please recharge the battery.

Files can not be transferred to the player
• Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer
• Check the connection between the player and PC, and confirm the USB cable is properly connected.

No sound from the headphones
• Please ensure the volume is turned up, and the headphones are properly connected.
• Check if the format of music file is supported by the player.

Can not record
• Check if there is enough memory and battery capacity.

Display is in the wrong language
• Please ensure you selected the correct language from the “Settings” menu.

The buttons do not work
• Slide the [POWER] switch to unlock the player.

I cannot display my .jpg files
• Many digital cameras and image editing softwares add hidden data to the .jpg files. This data can prevent the player from loading the images. Try to eliminate them by saving the file with another name.

Resetting the player
If the player malfunctions, you can use the reset function to restart it.
• To reset the player, take a metal pin (such as the end of a paperclip), and push it into the RESET hole to restart the player.

Limited Warranty

This Product is supplied and distributed new by AIT, Inc. (“AIT”) to the original consumer purchaser and is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase (“Warranty”). In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:
- Provide proof of the date of purchase within the package (Dated bill of sale)
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product. Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

AIT, Inc.
ATTN: Returns Department
14-C 53rd Street Brooklyn, NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
☎ 1-877-768-8483 (Toll Free)
✉ polaroidsupport@southerntelecom.com

Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)