

7" Digital Media Player

PMP700-4

USER MANUAL

Questions? Need some help?

Find manual help? This manual will help you enjoy your new product.

If you still have questions, ask our help line

1-877-768-8483

or email us at

 
customer.support@polaroidmedia.com

Let's Get Started >>>>

Included




Location of controls

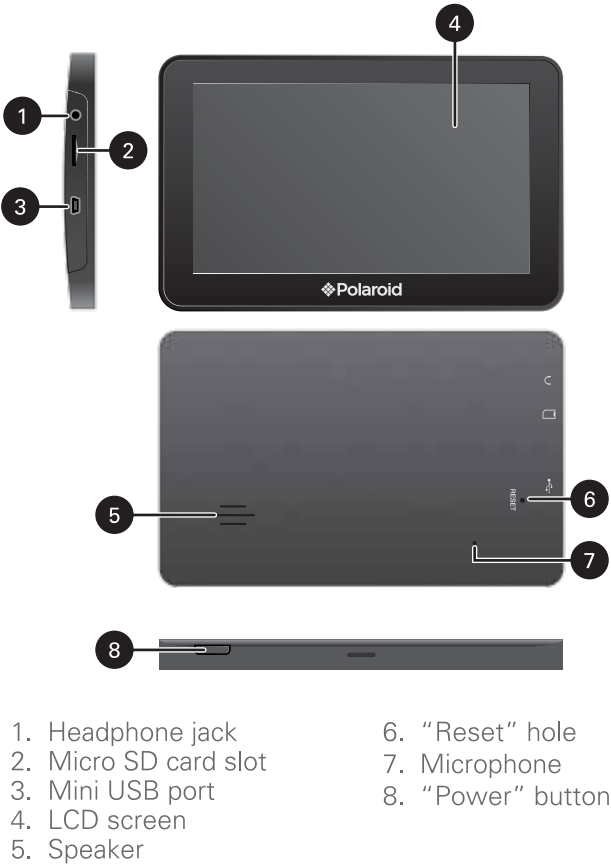

Basic operation

Charging:

 1. Connect the player to your computer using the included USB cable.
2. Charge the battery between 3-5 hours (do not charge for more than 8 hours).

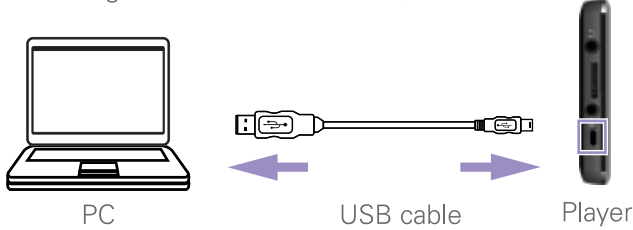

Turning on/off:

Make sure the player is fully charged before turning it on.

- To turn the player on/off, press and HOLD the "Power" button until the display turns on or off.



Resetting the player:

If the player malfunctions or freezes, you can use the reset function to restart it.

- To reset the player, take a metal pin (such as the end of a paperclip), and gently push it into the "Reset" hole on the back of the player.



Micro SD card

To insert the Micro SD card:

1. Insert the Micro SD card (up to 32GB) into the card slot with the metal contacts facing towards the front of the player and gently push it in until it clicks. Do not apply excessive force as this may damage the player and/or Micro SD card.
2. To view files on your Micro SD card, select "browser", from the main menu, then select "MicroSD Card".
3. To view certain types of files on the Micro SD card, select the function icon from the home screen and select "MicroSD Card".
4. To remove the MicroSD card, gently push it in until it pops out.
5. When the player is connected to a computer with a card inserted, the card will be listed as a second drive titled "Removable Disk".

 
Micro SD

1. Find music, picture, or video files on your computer.



Locate "MP3"

2. Connect the player to the computer, and locate "MP3".
3. "Drag and drop" or "copy and paste" the files as shown below.

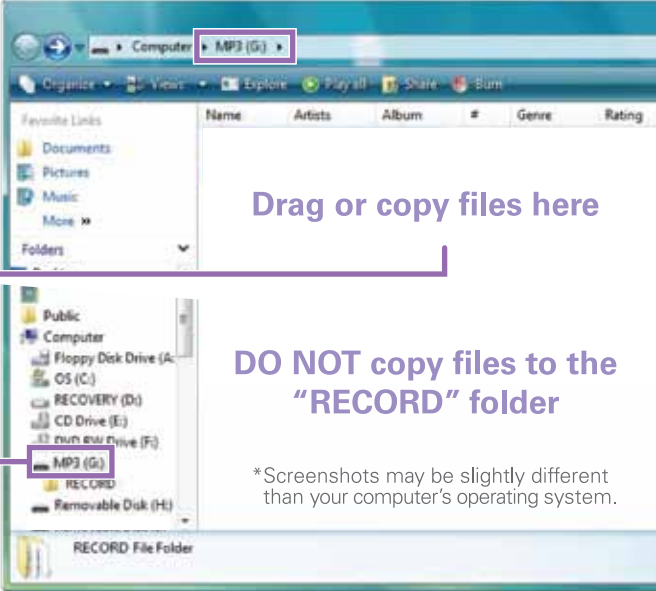

Drag or copy files here

DO NOT copy files to the "RECORD" folder

*Screenshots may be slightly different than your computer's operating system.



- Turn the player off before inserting or removing the card.
- Do not use force while inserting or removing the card.
- Do not remove the card during file transfers.

 
- It is also possible to delete files on the player while connected to the computer. Select the file and press the delete key of the computer's keyboard.

- To avoid data loss or damage to the player, always perform a safe USB extraction before disconnecting the player from the computer.

Homescreen

1. After turning on the player, the Homescreen appears. Use the touch button icons to control the player and make selections.

Homescreen

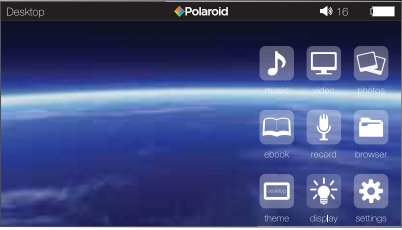


2. There are 9 touch button icons to choose from:

- Music - listen to music files
- Video - watch video files
- Photos - view pictures
- Ebook - read ebooks
- Record - record voice memos
- Browser - browse files on the player/card
- Theme - change the homescreen wallpaper
- Display - adjust the brightness
- Settings - adjust the player settings

Music

1. To listen to music, select "music" from the homescreen.
2. Select from the following menu options:
 - Flash Memory - search music files on the player
 - MicroSD card - search music files on the Micro SD card
3. The music browser will appear.
4. Select the track you would like to hear by touching the file on the screen. The music playing screen will appear and the track starts playing.

 Music playing screen

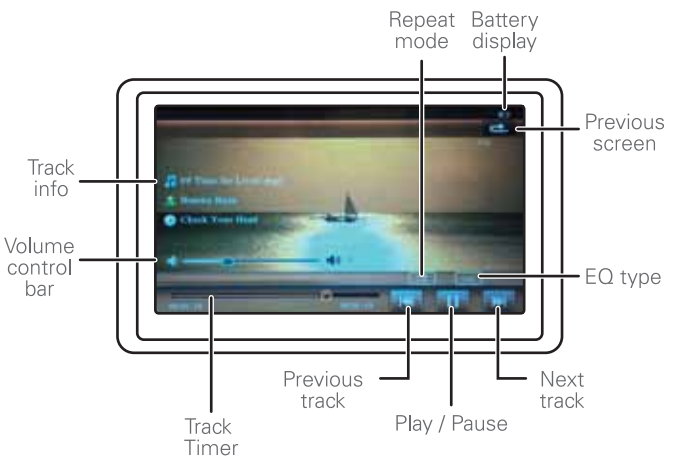

Music controls

1. Touch the || button to pause the track.
2. Touch the ► button to play the track.
3. Touch the ►► button to skip to the next track.
4. Touch and drag the track timer to fast forward.
5. Touch the ◀◀ button to skip to the previous track.
6. Touch and drag the track timer to rewind.

Music browser

While browsing music, touch the icons on the bottom of the screen to change browsing options.



Volume

1. While music is playing touch and drag the volume control bar to adjust the volume.
2. Touch and drag towards 🔊 to lower the volume.
3. Touch and drag towards 🔊 to raise the volume.



Favorites list

 
You can add tracks to your favorites list by doing the following:

1. While browsing music, touch the 🌐 icon. The track will be saved to your favorites list.



2. To access your favorites list touch the 🌐 icon on the music browser bar.

3. To delete songs from your favorites list touch the 🗑 icon while in the favorites list.

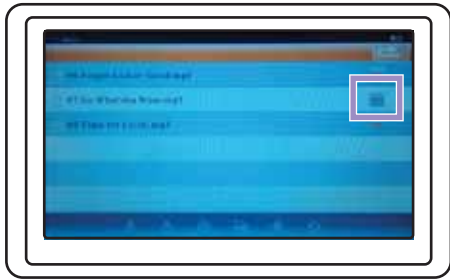

Video

This player supports high def en it ion video up to 720p.

1. To watch videos, select "video" from the homescreen. The video browser will appear.
2. Select the video you would like to watch by touching the file on the screen. The video playing screen will appear and the video starts playing.

Volume

1. While video is playing drag the volume control volume control bar to adjust the volume.
2. Touch and drag towards 🔊 to lower the volume.
3. Touch and drag towards 🔊 to raise the volume.



Video playing screen



Video controls

While a video is playing touch the bottom of the screen to bring up the video controls.

1. Touch the || button to pause the video.
2. Touch the ► button to play the video.
3. Touch the ►► button to skip to the next video.
4. Touch the video timer to fast forward.
5. Touch the ◀◀ button to skip to the previous video.
6. Touch the video timer to rewind.

- This player supports subtitles which must be downloaded with the video file and stored in the same folder as the video. Not all videos support subtitles.

Photos

1. To view photos, select “photos” from the homescreen. The photo browser will appear.

2. Select the photo you would like to view by touching the file on the screen. The photo control screen will appear.

3. Use the  or  buttons to scroll through pictures,

or

swipe your finger across the screen to scroll. Swipe left to view the previous picture. Swipe right to view the next picture.

Photo control screen



Photo controls

While a viewing a photo, touch the the icons at the bottom of the screen to control photo viewing options:

-  View next photo
-  View previous photo
-  Rotate picture
-  View slideshow and set timer intervals
-  Zoom out
-  Zoom in
-  Return to previous screen

ebooks

This player supports ebooks in .TXT and .LRC formats.

- To view ebooks, select “ebook” from the homescreen. The ebook browser will appear.
- Select the ebook you would like to read by touching the file on the screen. The ebook playback screen will open.

ebook playback screen



- Swipe your finger across the screen to change pages. Swipe left to view the next page. Swipe right to view the previous page.

4. While viewing an ebook, tap the screen to bring up the ebook control screen.

 
ebook control screen



Record

To record voice memos, select “record” from the homescreen. The recording screen will appear.

Recording screen

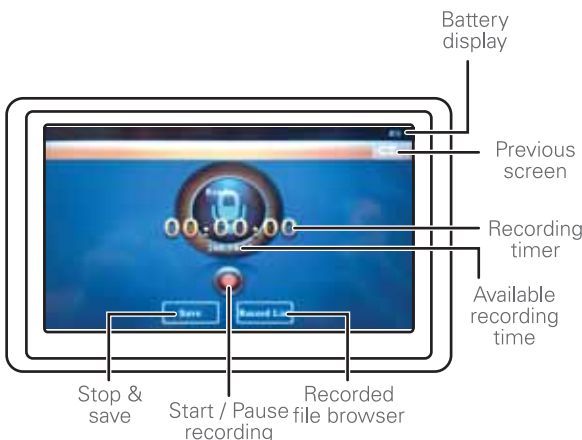

Record controls

- Press  to start a voice recording.
- Press  to pause a voice recording.
- Press  to stop and save a recording.
- Press  to open the recorded file browser.

 
Browser

To view files or delete files on the player or MicroSD card (if inserted), select “browser” from the homescreen.

- Select from the following browser menu options:
 - Flash Memory - search all files on the player
 - MicroSD card - search all files on the Micro SD card
- Select the file you would like to open.
- Please refer to the instructions of the media’s file type in this manual for proper media controls.

Deleting files

- While browsing files, press the  button next to the filename to delete that file. The following options screen will appear:

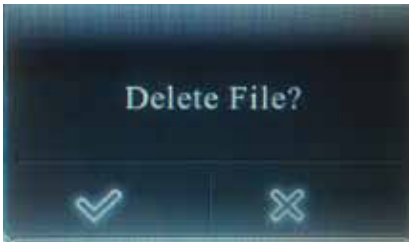

- Select the  icon to delete the file.
- Select the  icon to cancel and return to browser.

Settings

- To change various settings and customize the player, select “settings” from the homescreen.
- Touch one of the following icons to open that setting and make changes:

-  Display settings:
 - Backlight time - change display off time
 - Brightness - adjust screen brightness
-  System settings:
 - Default settings - restore settings to default
 - Screen lock - set time for screen to lock
 - Calibration - calibrate touch screen
-  System information - show player and MicroSD card information
-  Language - choose from:
 - English
 - Spanish
 - French
-  Auto shut time - set a time for the player to automatically shut down if not in use
-  Time - set the time and date.

Theme & Display

Theme

- To change the wallpaper on the homescreen, select “theme” from the homescreen. The wallpaper will automatically change to the next available option.
- There are 3 preset wallpapers to choose from.

Brightness

- To change the level of brightness select “display” from the homescreen.
- Keep selecting “display” to adjust the brightness between 3 different levels.
- Lower display settings will extend battery life.
- Higher display settings allow for easier viewing in high, ambient light settings.

Tip

Brightness levels can also be adjusted from the settings menu. From the homescreen select “settings” then “display settings” then “Brightness” and choose your level.

Safety precautions

WARNING

to prevent fire or shock hazard, do not use the plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

to reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

to prevent electrical shock, match wide blade plug to wide slot, fully insert.

 The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN warning: to reduce the risk of electric shock, do not remove cover (or back), no user serviceable parts inside, refer servicing to qualified service personnel.	 The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.
---	---	--

Legal information

FCC Part 15:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to [HYPERLINK “http://www.polaroid.com”](http://www.polaroid.com) www.polaroid.com and reference About / Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Can not power on

- The battery may be exhausted, please recharge the battery.

Troubleshooting

Files can not be transferred to the player

- Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer
- Check the connection between the player and PC, and confirm the USB cable is properly connected.

No sound from the headphones

- Please ensure the volume is turned up, and the headphones are properly connected.
- Check if the format of music file is supported by the player.

Can not record

- Check if there is enough memory and battery capacity.

Display is in the wrong language

- Please ensure you selected the correct language from the “Settings” menu.

I cannot display my .jpg files

- Many digital cameras and image editing softwares add hidden data to the .jpg files. This data can prevent the player from loading the images. Try to eliminate them by saving the file with another name.

Resetting the player

- If the player malfunctions, you can use the reset function to restart it.
- To reset the player, take a metal pin (such as the end of a paperclip), and push it into the RESET hole to restart the player.

Limited Warranty

This product as supplied and distributed new by AIT, Inc. (“AIT”) to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase (“Warranty”).

In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

AIT, Inc.
ATTN: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT INDIRECT SPECIAL PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
1-877-768-8483 (Toll Free)
✉ polaroidsupport@southern telecom.com

Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)