



 
Smartphone

Quick Start Guide

What's in the Box?



Your Phone


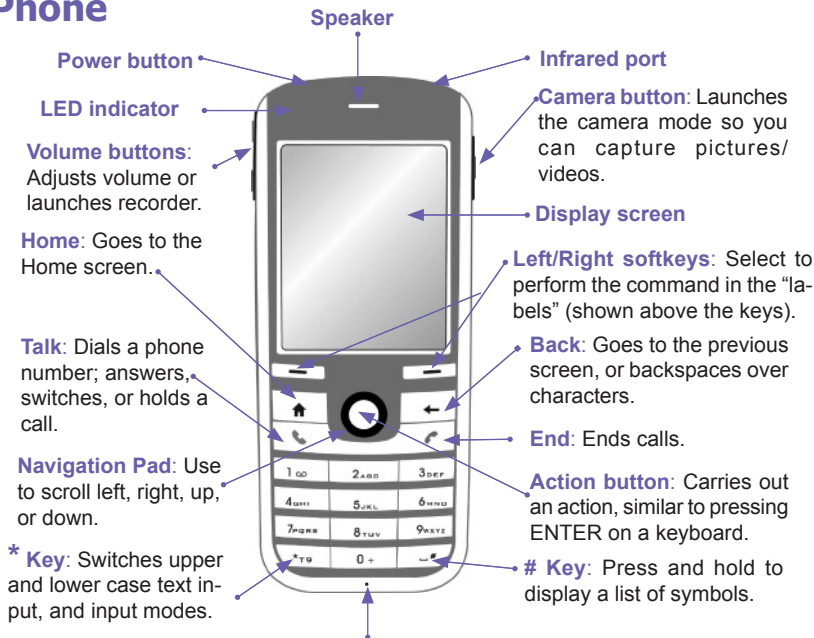


Light Sensor: If enabled in **Settings > Power Management**, dark conditions sensed here will activate a backlight under the keypad.

1. SIM Card and Battery

Inserting the SIM card

  Press on the **battery release latch** to slide off the cover and remove the battery by lifting it up from the bottom end. Pry the **SIM metal socket** open. Insert the **SIM card** with the gold-plated contact area on the card facing down. Push the metal socket down to snap into place.

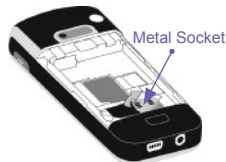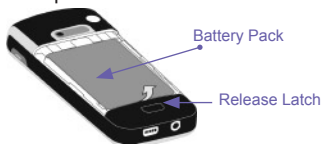

Inserting the battery

Insert the battery by aligning the exposed copper part of the battery pack with the protruding copper conductor, and close the cover.



Charging the battery

Charge your phone for about one hour before turning it on for the first time. Connect the power cable to your phone and plug it into an electrical outlet. You can also charge the phone using the **Sync cable** while connected to the PC's USB port.

2. Turning On Your Phone and Making a Call

Turning on your phone

 
Press and hold the **Power** button for about 2-3 seconds to turn the phone on (or off). Your mobile operator's screen and the Smartphone's *Home* screen will appear, prompting you to enter a PIN.

Power Button



Activating your PIN

Activate the PIN (Personal Identification Number) as set by your mobile operator. Enter the PIN number, then press the Left Softkey ("Done").

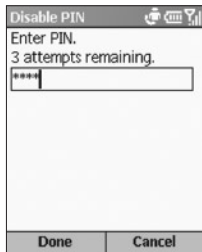

Making a phone call

When in the *Home* screen, dial the phone number and press the **Talk** button. You can also make a call directly from your Pocket Contacts or from the Caller ID utility, as explained in Chapter 2 of the User's Manual.

3. Synchronizing with ActiveSync

If you use Outlook on your desktop or notebook PC, you can synchronize E-mail, contacts, calendar, and other data with your phone.

 
Installing ActiveSync on your PC

Insert the **ActiveSync CD** into the CD drive of your PC. Follow the instructions on the screen. Once installation is completed, connect the **Sync cable** to the phone and plug it into your PC's USB port to synchronize.



Establishing a partnership

Turn on the phone by pressing the Power button for 2-3 seconds. When the PC detects the USB connection, it will start the ActiveSync *New Partnership* Setup Wizard. Follow the instructions on the screen and select the items you want to be synchronized. Your data will begin to synchronize between your phone and your PC.

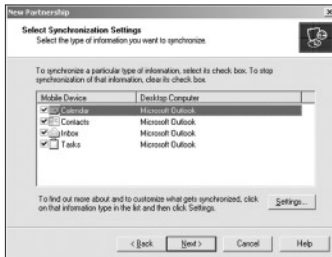

4. Surfing the Internet

You need to set up your phone's data connection in order to surf the Internet or access web-based E-mail accounts.

Setting up an Internet connection

In the *Home* screen, select **Start menu > Settings > Data Connections....** Scroll to Internet connection; scroll right or left to view the available options. Select the service offered by your mobile operator. (See *Connecting to the Internet* in Chapter 5 of the User's Manual for more information.)

Starting Internet Explorer

Select **Internet Explorer** from the Start menu or from your *Programs* group, and then press the Action button. Select **Favorites** (left softkey) and choose a web site from the list, or select **Address Bar** from the menu and enter the URL address of the site you want to access. Then select **Go** (left softkey).



5. Using the Camera

Your phone is equipped with a camera (the lens is at the back of the phone). You can capture photos and short videos, then view, manage, and manipulate them using the **Album** utility, as explained in Chapter 3 of the User's Manual. You can also directly send newly-captured or existing files via E-mail or MMS.

Taking a picture or filming a short video

From your *Programs* group, select **Camera** to capture a still image, or **Camcorder** to capture a video clip. Or, you can enter **Camera** mode by pressing the *Camera* button on the phone (as shown at right). The screen functions as a viewfinder. Press the Camera or Action button on your phone, or the Left Softkey ("Capture"), to capture a photo. For video, press any of them to start recording, and press any of them to stop recording.



Camera Button



6. Entering Text, Numbers and Symbols

To start a new line: Press the **Action** button.

To delete one character: Press the **Back** button once.

To delete an entire text field: Press and hold the **Back** button.

To enter a symbol: Press and hold the **#** key, select the symbol you want, and then press the **Done** softkey.

Input Modes

To choose or change the input mode: Press and hold the ***** key to pop up a selection list, then press and hold until the status indicator of the input mode you want is shown at the top of the display:

abc **Multipress mode:** To enter the first alphabetic letter shown on a key, press the key once. If you want to enter the second letter, press the key twice quickly, and so on.

t9 **T9 Mode:** Press the number keys that contain the letters you want to form a word, and T9 will complete the word with suggestions, matching your entries character by character. If a suggestion does not match the word you are looking for, enter the next letter of the word.

123 **Numeric Mode:** Press the key containing the number you want to enter.

Program Icons

Some items available in your phone's *Programs* group are listed below. To access them, select **Programs** from the *Start* menu. To start one of these programs, highlight it and then press the Action button.



Messaging

Opens the Messaging feature, where you can read text messages or E-mails, and compose new ones.



Contacts

Opens your contacts list alphabetically.



Calendar

Record your important events, and set alarms to remind you when important events come up.



Internet Explorer

Browse the Internet or visit your favorite sites straight from your phone, even while on the move.



ActiveSync

Keep your Contacts, Tasks, E-mail, and Calendar events up-to-date on both your computer and your phone, by synchronizing regularly.



Call History

View information about phone calls you have made and received, such as length of last call and Missed Calls.



MSN Messenger

Keep in touch with your friends in real time by subscribing to this free service.



Settings

Personalize your phone to suit the way you use it.



Album

View, organize, manage, and manipulate your audio, video, and image files.



Camcorder

Launch the phone's Camcorder to capture video clips, with audio if desired.



Camera

Launch the phone's Camera to take pictures.



MIDlet Manager

Download and manage Java games and utilities.



Photo Contacts

Assign photo or animated GIF files to your Contacts, so that when people call you, their Photo ID will appear on your phone's screen.



Tasks

Keep track of what you need to do, or have your phone alert you of important pending events.



Voice Notes

Record your thoughts using your phone's built-in audio recorder, and save for later playback.



Windows Media Player

Play music and watch video clips while on the move.

Status Indicators

Status indicators are displayed in the Title Bar at the top of your phone's screen.



New voice mail



New mail



New instant message



Voice call in progress



Data call in progress



Calls are forwarded



Call on hold



Missed call

1 2 Line1 or Line 2



High battery level



Low battery level



Battery charging



No battery



Full signal strength



No signal



GPRS Available



GPRS in use



Roaming



Sync error



Radio off



Ringer off



Data call in progress



Multipress text input lower case



Multipress text input upper case



Multipress text input caps lock



T9 mode lower case



T9 mode upper case



Numeric



Photo Caller ID monitor is off



Photo Caller ID monitor is running