

aigo

月光寶盒®

MP3播放器 a6

操作指南

V1.0

公司简介

华旗资讯是创立于 1993 年的高新技术企业，总部设在北京中关村核心地带。华旗资讯自创建以来，始终坚持以“六赢”理念为准则，即在确保“大众、代理、员工、公司、供方、社会”六方的合理利益均获得满足的前提下，使公司能够坚实、稳定的发展。公司现有员工逾千人，已经在南京、广州、深圳、上海、杭州、成都、武汉、福州、沈阳、济南、西安、乌鲁木齐、重庆各大城市设立分公司和平台，拥有五百多家代理商和两千多家经销商，在全国各个省、市、自治区建立了完善的营销体系和服务网络，专业地为各地客户提供优秀的资讯产品。

1997 年华旗资讯推出自有品牌——爱国者，本着以发展民族工业为己任的原则，依靠自己辛勤的努力，“爱国者”系列产品已成为人们公认的 IT 知名品牌。

2000 年 7 月，华旗资讯为满足移动办公用户的需求，在国内率先推出了具有国际领先水平的爱国者移动存储王。该产品被权威媒体评为“世纪初十大 IT 产品”，评价“给人们的生活和工作带来了深远影响”。

2001 年率先推出了移动存储加密王、烽线王以及双启动型迷你王，从而将国内存储行业带入了一个崭新的移动存储时代。

2001 年 10 月 18 日，公司正式通过 ISO9001 质量管理体系和英国 UKAS 皇家皇冠认证。

目前爱国者产品包含移动存储王、桌面存储王、迷你王、智慧棒、MP3、数码相机、机箱、显示器、键盘等广泛的领域。在售后服务上，

华旗资讯坚持阳光服务政策，彻底解除了消费者的后顾之忧。“以专家的眼、执着的心，推广专业资讯产品”，华旗资讯和每一个华旗人，将不断进取，不断战胜自我，开创民族 IT 产业更加辉煌的明天！

提示：

爱国者强烈建议您选配原厂充电器，原厂充电器是经过严格测试和通过国家 CCC 认证的可靠配件，它在保障播放器的正常工作和您的安全方面，起着至关重要的作用。我们长期的客户调查和售后服务实践表明，播放器故障在很多情况下是由于使用了不合格充电器所造成的。爱国者维修体系对于因为使用非原厂充电器造成的机器故障不予保修。

使用不合格充电器的危害：

- 严重缩短播放器自身电池的使用寿命
- 大大缩短播放器的使用寿命，不稳定的电压和电流会严重影响播放器电路的正常工作，带来永久的损害
- 影响播放器的性能和可靠性
- 可能发生燃烧爆炸，危害消费者人身安全

注意事项：

- 请将播放器远离电磁环境
- 请不要拆解或者改造播放器
- 请不要在播放器上放置重物
- 请将播放器远离潮湿、烟尘等恶劣环境并避免产品遭受雨滴或水溅
- 请避免播放器与水或其他液体接触，如果不小心发生，请迅速用干布吸干
- 请不要剧烈振动或撞击播放器
- 本产品电池不能自行更换，请勿自行拆机，电池部分更换不当会有爆炸危险，请与专业维修人员联系
- 为了保护听力，请不要将音量调的太高（医生指出，长时间使用较大音量收听会损伤听者的听力）。出现耳鸣时，请调低音量或停止使用
- 电池的寿命可能会随使用条件、生产时间的不同而有所不同
- 播放器在格式化或正在进行上传下载时请不要突然断开连接，否则可能导致程序出错
- 本机作为移动磁盘使用时，用户请按正确的文件管理操作方法存储和导出文件，由于错误的操作方法导致文件丢失，本公司概不负责
- **本产品可能会由于软件的更新而导致实际使用与说明书内容产生差异，请以购买的产品为准，操作指南仅供参考。**
- 因为产品的性能和功能改进而发生的產品变化，将不另行通知

目 录

装箱清单	1
面板及按键定义	3
连接电脑	4
计算机配置要求	4
将MP3 播放器连接到电脑	4
下载文件到播放器	5
充电	5
基本操作	7
开关机	7
调整音量	7
锁定按键	8
系统复位	8
选择主菜单和功能模式	8
聆听音乐	10
首次开机并播放	10
暂停	10
播放上一曲或下一曲	10
在曲目内搜索	11
设置播放模式	11

设置音效.....	12
通过分类聆听音乐	13
收听FM广播	14
设置搜寻模式	14
手动搜寻并预置电台	15
自动搜索并预置电台	16
聆听预置电台	17
设置广播区域	17
FM录音	18
录制语音.....	18
聆听录音.....	19
删除录音文件	20
时钟显示.....	21
时间设置.....	21
系统设置.....	22
节电设置.....	23
睡眠设置.....	23
音量限制.....	23
背光设置.....	24
关于	24

出厂设置.....	24
语言设置.....	24
产品规格表	25
联系我们.....	27

装箱清单

您选购的 aigo 月光宝盒 a6 mp3 播放器包装内应包含如下内容请您购买时仔细核对：

- | | | |
|----|--------------|----|
| 1. | 月光宝盒 a6 主机 | 一台 |
| 2. | 月光宝盒 a6 主机背夹 | 一个 |
| 3. | USB 联机线 | 一条 |
| 4. | 耳机 | 一条 |
| 5. | 操作指南 | 一份 |
| 6. | 快速指南 | 一份 |
| 7. | 产品三包凭证回执 | 一份 |
| 8. | 产品合格证 | 一份 |
| 9. | aigo 正版音乐点卡 | 一张 |



面板及按键定义一

1	开关键	滑动开关机键到  标示处，并保持2秒完成开机或关机 滑动开关机键到  标示处，锁定所有触摸键 滑动开关机键到中间位置，则取消锁定功能
2	Mic 孔	用麦克风孔录音
3	显示屏	字符显示区域
4	[≡]	进入主菜单或子菜单；返回；停止录音
5	触摸滑动区	向上滑动增加音量或选择上一个选项 向下滑动减少音量或选择下个选项
6	[<<]	选择上一首歌曲或上一个选项；快退
7	[>>]	选择下一首歌曲或下一个选项；快进
8	[>]	播放/暂停
9	耳机孔	连接耳机
10	USB 端口	连接电脑充电或下载文件
11	RESET 孔	按 RESET 孔，可以重设主机

连接电脑

计算机配置要求

为顺利拷贝文件，您的计算机系统必须符合如下要求：

- 奔腾 350MHz 或更高
- Microsoft Windows 2000/ME/XP/Vista
- 120MB 可用磁盘空间
- USB 连接口

将 MP3 播放器连接到电脑

1. 将 USB 连接线的一端（大头）连接到电脑的 USB 接口上。
2. 将 USB 连接线的另一端（小头）连接到播放器的 USB 接口上。

下载文件到播放器

1. 打开“我的电脑”或“资源管理器”，找到新出现的移动硬盘，卷标为“aigo”。
2. 将电脑中的歌曲直接复制粘贴到此移动硬盘内。

注意：拷贝文件时，请不要断开 USB 连接。文件拷贝完成后，请遵循“安全删除硬件”操作断开 USB 设备连接。

充电

如果您只用电脑 USB 接口为产品充电：

当 MP3 播放器连接到电脑时，自动充电。请确保电脑处于开机状态。

本 MP3 播放器充满电的时间大约为 3 小时，总的充电时间与您的电脑配置有关。

如果您选购了 aigo 电源适配器 M2608:

1. 将 USB 连接线的一端（大头）连接到 M2608 的 USB 接口上。
2. 将 M2608 插入市电电源插座（220v），充电起指示灯呈蓝色。
3. 将 USB 连接线的另一端（小头）连接到播放器的 USB 接口上，此时充电器指示灯转变为橙色，并开始充电。
4. 当充电器指示灯由橙色重新转变为蓝色时表示播放器电池已经充满。
5. 请注意使用充电起对本产品进行充电时请尽量不要超过 6 个小时。
6. M2608 充电器具体使用注意事项请参见其使用说明书。

注意:

- 第一次使用或很长时间没有使用本播放器时，请充满。
- 过度充电或放电会降低电池使用寿命。
- 为避免过度放电，若长时间不使用本机（超过 3 个月），请务必每隔一段时间充电，并保持电量在 50%以上。

基本操作

开关机

- 开机：滑动开关机键到⏻标示处，并保持 2 秒，当屏幕变亮完成开机。
- 关机：滑动开关机键到⏻标示处，并保持 2 秒，当“aigo”标识出现在屏幕上完成关机。

注意：如果电池耗尽，MP3 播放器将自动关机。

调整音量

将手指放在机身前面板的滑动区域内，向上滑动增加音量，向下滑动降低音量。

注意：如果您在设置菜单中限定了最大音量，则音量最大只能调整到限制值。

锁定按键

在锁定模式下，MP3 播放器所有触摸图标都不起作用。这样可以避免在您享受音乐时，偶尔碰到触摸按键而打断音乐播放。

- 将机顶滑动开关键到“锁定”标示处，“锁”图标将出现在屏幕上，表示本机处于锁定状态。
- 将机顶滑动开关键拨到中间位置，则取消锁定功能。

系统复位

如果播放器发生死机现象（如不能开机，不能播放音乐，触控键无反应），使用一个带有尖头的物体（如回形针）按播放器背部的 RESET 孔，可以重设主机。

选择主菜单和功能模式

您可以进入 MP3 播放器的主菜单，根据您的需要选择不同的功能模式。轻触 [≡] 进入主菜单，轻触 [◀] 或 [▶] 或在触摸滑动区域内，向上或向下滑动选取不同的功能模式，并轻触 [▶II] 进入相应的模式。

所有的功能和选项如下表：

音乐	聆听音乐
收音机	收听 FM 广播
语音播放	听取录制的语音文件
录音	通过内置的麦克风录制声音
时钟显示	显示时钟
设置	节电设置：闲置自动关机时间设定
	睡眠设置：睡眠自动关机时间设定
	音量限制：音量限制
	背光设置：屏幕背光灯时间设置
	关于：软件版本，已用空间和总存储空间显示
	出厂设置：恢复原厂设置
	时间设置：时钟设置
	语言设置：菜单语言选择

聆听音乐

首次开机并播放

1. 确保 MP3 播放器的电量充足，并连接好耳机。
2. 滑动开关键到标示处，并保持 2 秒，本机型号会显示在屏幕上，松开开关键，之后 MP3 播放器将根据存储的音乐文件创建数据并将您的音乐归类，之后进入音乐播放界面。第一首歌名显示在屏幕上，并处于停止模式。
3. 轻触[>||]开始播放。

暂停

在音乐播放时，轻触 [>||] 暂停播放。再次轻触[>||]，将从暂停点继续播放。

播放上一曲或下一曲

- 音乐播放时，轻触[«]选择上一曲。

- 音乐播放时，轻触[>>]选择下一曲。

注意：如果音乐已经播放超过 3 秒，轻触[<<]将返回到当前曲目的开始点，再轻触[<<]则选择上一首歌曲。

在曲目内搜索

- 在选择的曲目播放时，轻触[<<]并按住不放，向前搜索到想要的播放点后松开。
- 在选择的曲目播放时，轻触[>>]并按住不放，向后搜索到想要的播放点后松开。
- 松开后，将从您想要的播放点开始播放。

设置播放模式

聆听音乐时，您可以选择重复播放，随机播放等。

1. 聆听音乐时，轻触并按住 [≡]，直到音乐子菜单出现在屏幕上。
2. 轻触[<<]或[>>]或在触摸滑动区域内，向上或向下滑动选取“播放模式”并轻触[>|I]。

3. 轻触[<<]或[>>]选取如下的播放模式，并轻触[>||]。
 - **关闭**：所有的曲目按正常顺序播放。
 - **单曲重复**：重复播放所选或当前曲目。
 - **全部重复**：重复播放所有曲目。
 - **随机播放**：随机播放所有曲目。
 - **随机及重复**：反复的随机播放所有曲目。
4. 轻触 [≡] 返回到播放界面。

设置音效

您可以为不同的音乐选择合适的音效。

1. 聆听音乐时，轻触并按住 [≡]，直到音乐子菜单出现在屏幕上。
2. 轻触[<<]或[>>]或在触摸滑动区域内，向上或向下滑动选取“音效模式”并轻触 [>||] 确认。
3. 轻触[<<]或[>>]或在触摸滑动区域内，向上或向下滑动选择“关闭，摇滚，流行，爵士，古典，重低音，并轻触 [>||] 确认。
4. 轻触 [≡] 返回到播放界面。

通过分类聆听音乐

MP3 播放器开机时，自动将所有的音乐文件按 ID3 标签分类，并建立音乐库。您可以按照歌手和专辑来聆听音乐。

1. 聆听音乐时，轻触并按住 [≡]，直到音乐子菜单出现在屏幕上。
2. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取“媒体库”并轻触 [>||] 确认。
3. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选择如下项目，并轻触 [>||]确认。
 - 所有歌曲：所有歌曲列表，按照字母或数字次序播放。
 - 艺术家：按歌手播放。
 - 专辑：按专辑播放。

注意：当您选择某一专辑内的歌曲时，MP3 播放将只播放该专辑内的歌曲；而不是所有歌曲。

收听 FM 广播

注意：确保耳机一直与主机连接，因为耳机作为 FM 广播天线使用。

1. 轻触 [≡] 进入主菜单。
2. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取“收音机”并轻触 [>||], 开始收听收音机广播。

设置搜寻模式

1. 在 FM 收音机模式，轻触并按住 [≡]，直到 FM 子菜单出现在屏幕上。
2. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取“切换模式”，并轻触 [>||] 确认。
3. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取如下搜寻模式，并轻触 [>||] 确认。
 - **预设电台模式：**如果您想选取预置电台，选择此模式。

- **手动模式：**如果您想手动搜索 FM 频率，选择此模式。

4. 轻触 [≡] 返回收音机广播界面。

提示：在 FM 收听界面反复轻触（短按）[>||]可以在两种不同的模式间切换。切换过程中，屏幕上收音图标会相应变化。

手动搜寻并预置电台

1. 在调频模式下，轻触[«]或[»]向前或向后搜索一个频率波段点。

轻触并长按[«]或[»]，然后松开，MP3 播放器将自动向前或向后搜索最近的电台。

2. 若要预置手动搜寻的电台，以方便下一次收听，轻触并按住 [≡]，直到收音机子菜单出现在屏幕上。

3. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取“存储预设电台”并轻触 [>||] 确认。预置电台列表出现在屏

幕上。

- 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取一个预置位置，并轻触 [>||]。一个系统提示出现，问您是否将该电台预置。
- 轻触 [>||] 确认并预置电台。轻触 [≡] 则放弃预置并返回。

自动搜索并预置电台

- 在 FM 收音机模式，轻触并按住 [≡]，直到收音机子菜单出现在屏幕上。
- 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动 选取“自动搜索”并轻触 [>||] 确认。

MP3 播放器开始自动搜索所有电台，并将其保存为预置电台。完成搜索后，开始播放第一个预置电台。

最多可以自动设置 20 个电台。

聆听预置电台

在预设电台模式下，轻触[«]或[»]选择上一个或下一个预置电台。

设置广播区域

当您外出旅游时，您可以更改广播区域设置。

1. 在 FM 收音机模式，轻触并按住 [≡]，直到收音机子菜单出现在屏幕上。
2. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取“区域设置”并轻触 [▶] 确认。
3. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取美国，欧洲或亚洲，并轻触 [▶] 确认。

FM 录音

在收听 FM 广播时，您还可以将正在播放的节目录音。

1. 在 FM 模式，轻触并按住 [≡]，直到 FM 子菜单出现在屏幕上。
2. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取“FM 录音”，并轻触 [▶]开始录音。
轻触 [▶] 暂停录音；恢复录音，再次轻触 [▶]。
3. 要停止录音，轻触 [≡]。系统信息提示：问您是否保存录音。
4. 轻触 [▶] 保存录音，轻触 [≡] 则放弃保存。
已保存的录音文件可在“语音播放”模式下倾听。

录制语音

您可以通过 MP3 播放器的内置麦克风录制语音。

1. 轻触 [≡] 进入主菜单。
2. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取“录音”并轻触 [▶]开始录音。轻触[▶]暂停录音；要恢复

录音，请再次轻触 [>||]。

3. 要停止录音，轻触 [≡]。系统信息提示：问您是否保存录音。
4. 轻触 [>||] 保存录音并返回到语音模式。轻触 [≡] 则放弃保存并返回到主菜单。已保存的录音文件可在“语音播放”模式下倾听。

聆听录音

在语音模式，您可以听取所有的录音文件。

1. 轻触 [≡] 进入主菜单。
2. 轻触 [«]或[»]或在触摸滑动区域内，向上或向下滑动选取“语音播放”并轻触 [>||]确认。屏幕显示录音文件列表。
3. 轻触 [«]或[»]或在触摸滑动区域内，向上或向下滑动选取录音文件并轻触 [>||] 开始播放选中的文件。
暂停，播放上一曲/下一曲，在曲目内搜索与“音乐播放”操作相同。

删除录音文件

1. 轻触 [≡] 进入主菜单。
2. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取“语音播放”并轻触 [▶]确认。屏幕显示录音文件列表。
3. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取要删除的文件，轻触并长按 [≡]。系统提示，是否确定删除文件。
4. 轻触 [▶] 确定删除。轻触 [≡] 放弃删除操作并返回到播放界面。

时钟显示

1. 轻触 [≡] 进入主菜单。
2. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取“时钟显示”并轻触 [>||]。当前时间显示在屏幕上。

时间设置

1. 轻触 [≡] 进入主菜单。
2. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取“设置”并轻触 [>||]确认。
3. 轻触[«]或[»]或在触摸滑动区域内，向上或向下滑动选取“时间设置”并轻触 [>||]确认。时间设置选项如下：
 - 设置时间：轻触 [>||] 进入设置，轻触[«]或[»]选择调整时钟或分钟，向上或向下滑动调整值。轻触 [>||]保存设置，轻触 [≡]则不保存并返回。
 - 时间格式：轻触[«]或[»]选择时间格式轻触 [>||] 进入设置，轻触[«]或[»]或上下滑动选取 24 小时制式或 12 小时制式。并轻触[>||]保存。

系统设置

您可以通过访问设置菜单来自定义各系统功能。包括自动关机时间，背景灯时间，菜单语言等。

1. 轻触 [≡] 进入主菜单。
2. 轻触[<<]或[>>]或在触摸滑动区域内，向上或向下滑动选取“设置”并轻触[>|I]。设置菜单显示在屏幕上。
 - 选取或调整选项值，轻触[<<]或[>>]或在触摸滑动区域内向上或向下滑动。
 - 确认选择，轻触[>|I]。
 - 返回上一级目录，轻触 [≡] 。

节电设置

选择闲置关机时间。当 MP3 播放器在设置的时间内都没有工作时（如播放停止），则自动关机。

睡眠设置

选择睡眠关机时间。从设置的时间起，不管 MP3 播放器是否处于播放或暂停状态，当到达指定的时间后，则自动关机。

音量限制

您可以在设置菜单中限制音量的大小。

选择“音量限制”并轻触 [>||]。

- 关闭：不限制音量，您可以在播放模式时随时调整音量。
- 设置：设置音量，轻触[<<]或[>>]或在触摸滑动区域内向上或向下滑动调整音量，轻触 [>||] 确认。

背光设置

选择背景灯自动关闭时间。若在指定的时间内，没有触摸任何按键，则背景灯自动关闭。再次触摸按键，背景灯变亮。

关于

选择“关于”可以查看软件版本，已用空间和总容量。

出厂设置

选择出厂设置可恢复原厂设置。

语言设置

选择菜单语言。可供选择项有：英文、简体中文、繁体中文。

产品规格表

产品名称	月光宝盒 MP3 播放器 a6
存储容量	内置 1G/2G/4G/8G 闪存 (FLASH)
液晶显示屏	FSTN 液晶显示屏，分辨率 128*64
使用电池	内置聚合物锂离子充电电池，3.7V，300mAh
电源适配器	(选配)
电压	供电电压：3.7V  充电电压：5V 
充电时间	使用电脑 USB 口进行充电：充电时间约为 3 小时，总的充电时间与您的电脑配置有关。 使用选配的充电器 (M2608) 充电：充电时间约为 3 小时，根据电池剩余容量的多少，充电时间也会不同。开机充电时间会更长。充满电后请拔下电源适配器。
电池使用时间 (常温下，电池充满电的情况)	大约 30 小时播放时间 注：本说明书提及的播放时间，指的都是常温 25℃ 下，音量为中等，音频播放标准 MP3 音乐比特率为 128Kbps，背光 10 秒关闭情况下连续播放测试所得。由于操作环境不同，播放文件的格式，比特率等因素影响，实际播放时间

	可能会与此测试的播放时间有些差异，这属于正常现象。
支持语言	简体中文、繁体中文、英语
支持的音频文件	MP3: MPEG 1.0 Layer 3 CBR 80Kbps~320Kbps WMA: CBR 80Kbps~192Kbps WAV: ADPCM 48Kbps~192Kbps
录音	Wav
USB 接口	USB 2.0 HIGH SPEED (兼容 USB 1.1)
音频输出	立体声输出
产品尺寸(W×L×H)	35×79×9 mm
产品重量 (含电池)	27.6 克 (不含背夹)
操作温度	0℃ ~ 40℃
存储温度	-20℃ ~ 55℃
最大湿度	90% RH (不结露)
支持操作系统	Windows 2000/XP/VISTA

联系我们

地址：北京市海淀区中关村广场 2 号地
(理想国际大厦 10 层 1007-1010 室)

网址：<http://www.aigo.com>; <http://www.aigodmp.com>

通信地址：北京市海淀区中关村邮局 069 信箱
华旗资讯客户服务中心

邮政编码：100080

网上订购：<http://shop.aigo.com>

爱国者俱乐部：<http://www.aigoclub.com>

阳光服务热线：400-610-6666

非 400 地区请拨打 010-82607776

电子信箱：ser@aigo.com



声明：

本产品中预置的所有作品之版权归相应的版权人所有，
受《中华人民共和国著作权法》保护，我公司出售本产品的行为
不代表向用户转让或授予与作品版权相关的任何权利。

以专家的眼 执著的心 推广专业资讯产品

环保说明：

根据电子产品污染防治管理办法及相关标准
(SJ/T11363-2006SJ/T11363-2006) 进行表述

产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅 [Pb]	汞[Hg]	镉 [Cd]	六价 铬 [Cr(VI)]	多 溴 联 苯 [PBB]	多溴苯 二醚 [PBDE]
壳料、结构件	0	0	0	0	0	0
PCB 板及处理器	0	0	0	0	0	0
液晶屏	0	0	0	0	0	0
电池	0	0	0	0	0	0
电源适配器	0	0	0	0	0	0
耳机	0	0	0	0	0	0
USB 线	0	0	0	0	0	0
包装材料及附件	0	0	0	0	0	0
0：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 规定的限量要求以下。 X：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006规定的限量要求。 注：本产品90%的部件采用无毒无害的环保材料制造，含有有毒有害物质或元素的部件皆因全球发展水平限制而无法实现有毒有害物质或元素的替代。						

产品型号 月光宝盒 a6 MP3 播放器



MP3 Player A6

User's Manual

V1.0

Company Information

Established in 1993, Beijing Huaqi Information Digital Technology Co., Ltd. is a high-tech company headquartered in Beijing's Zhongguancun (a technology hub, known as "the Silicon Valley of China"). As a leading domestic manufacturer of portable storage devices, digital products and self-assembling products, Huaqi always takes the development of national IT industry for its own responsibility. Huaqi engages in R&D and promotion of computer software and hardware and customer service. Aigo portable storage devices, monitors, digital products, computer cases and optomagnetic products became flagship products and highly favoured by customers.

Since its establishment in 1993, Huaqi sales revenue kept a steady annual increase of 60% over a decade. Our products are exported to North America, South America, Europe, Southeast Asia and other regions. Aigo portable storage devices hold the largest market share on the Chinese market for the past four years. Only one year after launching aigo MP3 players, aigo MP3 players outrun numerous brands and aigo is now the sales champion and the market leader. aigo monitors and peripherals have been the number one on the domestic market, among which computer cases have occupied the largest market share for years. Huaqi has become one of the premier enterprises in Chinese IT industry.

Huaqi has over 1400 employees with over 200 highly qualified and

well-trained R&D staff. We also have an integrated national marketing network system. Besides the Beijing headquarters, we have more than 20 subsidiaries and local branches in China. We also have offices in Singapore, France and Great Britain. We also plan to open branches in Germany, Spain and Canada to develop the European and North American market. PTE Ltd., Shanghai Huaqi International Co., Ltd, Shanghai aigo Digital Technology Co., Ltd., Beijing Huaqi Digital Lab Inc., aigo Research Institute of Image Computer Co., Ltd., Huaqi Image Data Intelligence Technology Co., Ltd., Beijing Legend Advertisement Co., Ltd, Beijing aigo Chess Club (BACC) and other affiliated companies, form a great enterprise group with Beijing Huaqi Information Digital Technology Co., Ltd as an essential component.

With the principles of "persistence, Six Win principles, being No. 1", a specialized and internationalized operation system, Huaqi consolidated itself on the Chinese mainland and steps out into the world to undertake the task of making aigo "a well known international brand".

Notes:

aigo strongly recommend choosing qualified adapter by aigo. The qualified adapter, which is reliable accessories certificated by national CCC, plays a very important role in ensuring the performance of the player and your safety. Our study in the long-term customer survey and experience of after-sale practice demonstrate that many problem of the player is caused by using unqualified adapter. The after-sale service system of aigo will not provide any warranty for the after-sales problem caused by using unqualified adapter.

Harms caused by using unqualified adapter:

- Shortens the battery life
- Shortens the life of the player. Unstable voltage or current results in permanent damage on circuit of the player.
- Impacts the performance and reliability of the player
- Results in explosion, does harm to the safety.

For your safety:

- Do not place the player near magnetic objects, as it may cause a malfunction.
- Do not disassemble, repair or modify this player on your own.
- Do not place heavy objects on the top of the player
- Do not place the player in damp, dusty or sooty areas, as it could result in fire or electric shock. Prevent any foreign particles or dust or water for entering into the

player.

- Do not get the player wet or drop it in water. If the player gets wet, do not switch it on, please dry it immediately with dry cloth.
- Do not cause excessive impact on the player by dropping or shock.
- The battery of the player is built-in. Do not change the battery on your own, it may cause explosion. Please contact our after-sale staff.
- Avoid using your player at high volume levels, as it may result in permanent hearing damage. If you experience ringing in your ear while using the earphone, remove the earphone immediately and lower the volume.
- Battery life varies with the using condition, producing time.
- Do not disconnect USB cable during data transferring or formatting, it may damage to the player or your PC.
- When using the player as a flash stick, please follow the introduction of files management. aigo will take no responsibility for any document losing caused by incorrect operation
- **The player may be different from the user manual because of the improvement or system upgrade. Please refer to the real product. User manual is just for reference.**
- Design of accessories or the player is subject to change for the purpose of improvement, with out notice.

CONTENTS

PACKAGE LIST	1
LOCATION OF CONTROLS	3
CONNECTING TO COMPUTER	4
SYSTEM REQUIREMENTS	4
CONNECTING PLAYER TO COMPUTER	4
LOADING FILES TO PLAYER	4
CHARGING THE BATTERY	5
BASIC OPERATION	7
TURNING ON/OFF THE PLAYER	7
ADJUSTING THE VOLUME	7
LOCK FUNCTION	8
RESETTING THE PLAYER	8
SELECTING MAIN MENU OR MODE	8
LISTENING TO MUSIC	10
TURNING ON AND PLAYING	10

PAUSE	10
SKIPPING TRACKS	10
SEARCHING BACKWARD OR FORWARD WITHIN A TRACK	11
SETTING PLAY MODE.....	11
SETTING SOUND EFFECT	12
LISTENING BY LIBRARY	12
LISTENING TO FM RADIO.....	13
CHANGING SEARCH MODE	14
MANUALLY SEARCHING AND STORING STATIONS.....	14
AUTOMATICALLY SEARCHING AND STORING STATIONS	15
LISTENING TO PRESET STATIONS	16
SELECTING FM REGION	16
FM RECORDING.....	16
RECORDING VOICE	17
LISTENING TO RECORDINGS	18
DELETING VOICE FILE	18
DISPLAYING CLOCK	20

SETTING CLOCK.....	20
SETTING SYSTEM	22
IDLE SHUTDOWN	22
SLEEP SHUTDOWN	22
SOUND SETTINGS	23
BACKLIGHT TIME	23
INFORMATION	24
FACTORY SETTINGS.....	24
LANGUAGE.....	24
PRODUCT SPECIFICATION	25
CONTACT US	27

Package List

Open the package box and check if all supplied accessories as below are available.

1.	Player a6	1
2.	Attached back Clip	1
3.	USB cable	1
4.	Earphone	1
5.	User's Manual	1
6.	Quick Guide	1
7.	Warranty Card	1
8.	Product Qualification Certification	1
9.	aigo authorized music point prepaid card	1



Location of Controls

1	Power Switch	Slide to  icon, and hold for 2 seconds to power on or off the player. Slide to  icon to lock all touch button. Slide to the middle position to cancel the lock function.
2	MIC	Microphone for voice recording.
3	Screen	Display screen area
4	[≡]	Enters main menu or sub-menu, Return, Stop recording.
5	Slide area	Slide up to increase the volume or select previous item. Slide down to decrease the volume or select next item.
6	[<<]	Select previous track or item, Fast backward.
7	[>>]	Select next track or item, Fast forward.
8	[>]	Play/Pause/ Confirm
9	Earphone jack	Connect with the supplied earphone
10	USB port	Connect to computer with supplied USB cable.
11	RESET	Press the RESET hole if a malfunction occurs.

Connecting to Computer

System requirements

For downloading the files successfully, your computer system must meet the following specifications:

- Pentium 350MHz or above
- Microsoft Windows 2000/ME/XP/Vista
- 120MB available hard disk space
- USB port supported

Connecting player to computer

1. Plug the larger USB end of the USB cable into the USB port on the computer.
2. Plug the other end (the smaller end) of the USB cable to the player.

Loading files to player

1. Open the Windows Explorer or “My computer”. Find out the new removable disk, which can be identified by volume label “aigo”.
2. Select the files on your computer and simply copy and paste them into the “aigo” Removable Disk.

Note: Do not disconnect the USB connection during loading files. After completing the file transfer, follow the “ Safely Remove Hardware” to disconnect the USB mass storage device.

Charging the battery

Use the USB port of computer to charge the player:

The battery of the player is charging automatically when the player is connected to the computer. Make sure the computer is turned on.

The battery of the player is fully charged in about three hours. The total charge time varies depending on your computer configure.

You can also use the aigo power adapter M2608 (optional) to charge the player:

1. Plug the larger USB connector of the USB cable into the USB port of the M2608.
2. Plug and insert the M2608 into an electrical outlet (220v). The indicator of M2608 lights in blue.
3. Plug the other end (the smaller end) of the USB cable to the player. The indicator of M2608 becomes to orange and power charge starts.

4. When the indicator color is changed from orange to blue, the battery is charged fully.
5. Please do not charge the player more than 6 hours when using the power adapter.
6. The detailed notes or information of M2608, please refer to its user's manual.

Note:

- Fully charge it before you use the player for the first time or when you haven't use it for a long time.
- Over charging or discharging will shorten the battery life.
- To avoid over discharge, fully charge the player every two or three month and always keep the power of the battery above 50%.

Basic Operation

Turning on/off the player

- To turn on the player, slide and hold the Power Switch to the  icon for 2 seconds until the LCD screen lights.
- To turn off the player, slide and hold the Power Switch to the  icon for 2 seconds until the “aigo” logo appears on the screen.

Note: The MP3 player will power off automatically if the battery is exhausted.

Adjusting the volume

In the slide area of the player, slide up to increase the volume and slide down to decrease the volume.

Note: If you limit the volume in the settings menu, the volume only can be adjusted to max volume of limited

Lock function

The lock function can help you lock all buttons to avoid accidental player operation.

- To lock all touch buttons, slide the Power Switch on the top of the player to the  icon. The  icon will appear on the screen, which indicates all buttons are disabled.
- To deactivate the lock function, slide the Power Switch on the top of the player to the middle position.

Resetting the player

If a malfunction of the player occurs, take a metal pin, e.g. the end of the paper clip, and press it into the RESET hole to re-initialize the system of the player

Selecting main menu or mode

The MP3 player has different modes. Touch[≡] to enter the main menu. Touch [<<] or [>>] or slide up and down in the slide-touch area to select the different mode and touch[>||] to confirm your selection. All available items are listed as the below table.

Music	Music playback
FM Radio	FM radio playback and FM recording
Voice	Voice playback or delete
Mic Record	Record the voice
Clock	Display Clock time
Settings	Idle shutdown: To set the idle shutdown time
	Sleep shutdown: To set the sleep shutdown time
	Sound settings: To limit the volume
	Backlight timer: To set the LCD off time
	Information: To display the total memory, free memory and software version of the player
	Factory settings: To restore all settings to default settings
	Time Settings: To set the clock time
	Language: To select the menu language

Listening to Music

Turning on and playing

1. Make sure that the battery is enough and the earphone connected correctly.
2. Slide and hold the Power Switch to the  icon for 2 seconds. The display lights up and model name of the player appears on the screen. The player starts to scan all stored files and builds the music library, then enters the music playback interface. By default the first music name appears on the screen and is in stop mode.
3. Touch[>||]to start playing the music。

Pause

While a track is playing, touch[>||]to pause the playback. To resume the playback from the paused point, touch[>||]again.

Skiping tracks

- Touch[<<]to skip to the previous track。
- Touch[>>] to skip to the next track.

Note: If the elapsed time of current track is more than 3 seconds, touching[<<]will return to the start point of current track. Touch[<<]again to skip to previous track.

Searching backward or forward within a track

- Touch and hold[<<]to search backward within a track.
- Touch and hold[>>]to search forward within a track
- Once you release the button, the file will be played from the searched point.

Setting play mode

While listening to the music, you can select a play mode to enjoy your music in desired order.

1. While listening to the music, touch and hold[≡]. The music sub-menu appears.
2. Touch[<<]or[>>]or slide up and down in the slide-touch area to select **Play mode**, and touch[>||]. The play mode menu appears.
3. Touch[<<]or[>>]or slide up and down in the slide-touch area to select the desired repeat mode as below and touch[>||]to confirm.
 - **Off** : Play all saved files in order once.
 - **Repeat one** : Play the current or selected file repeatedly.
 - **Repeat all**: Play all the files in order repeatedly.
 - **Shuffle all**: Play all the files in random.

- **Repeat & Shuffle:** Play all the files in random repeatedly.
4. Touch[≡]to return to playback interface.

Setting sound effect

While listening to the music, you can select an equalizer from the six preset equalizer settings to suit the type of audio output or edit your personal equalizer effect.

1. While listening to the music, touch and hold[≡]. The music sub-menu appears.
2. Touch[<<] or[>>]or slide up and down in the slide-touch area to select **Equalizer** and touch[>||]. The equalizer menu appears.
3. Touch[<<]or[>>]or slide up and down in the slide-touch area o select the desired equalizer from Off, Rock, Funk, Jazz, Classic, Bass, and touch[>||]to confirm.
4. Touch[≡]to return to the playback interface.

Listening by library

When you switch on the player, the player sorts your songs by different artists, albums by reading the ID3 information along with the music and builds a music

library, which enables you to find the desired track quickly.

1. While listening to the music, touch and hold[≡]. The music sub-menu appears.
2. Touch[<<]or[>>]or slide up and down in the slide-touch area to select **Music Library** and touch[>|]to confirm.
3. Touch[<<]or[>>]or slide up and down in the slide-touch area to select desired list as below, and touch[>|]to confirm.
 - All songs: To list all tracks in the player.
 - Artists: To select and play songs by artist.
 - Albums: To select and play songs by album.

Note: When you select a song by album or artist, the MP3 player will only play the songs in this album rather than all tracks in the player.

Listening to FM Radio

Note: Always connect your earphone to the earphone jack, since the earphone cable serves as antenna for the internal radio.

1. Touch[≡]to enter the main menu.
2. Touch[<<]or[>>]or slide up and down in the slide-touch area to select **“FM Radio”**, and touch[>|]to start listening to the FM radio.

Changing search mode

1. Touch and hold[≡]while listening to the FM radio. The FM Radio sub-menu appears.
2. Touch[<<]or[>>]or slide up and down in the slide-touch area to select **“FM mode”**, and touch[>||]to confirm.
3. Touch[<<]or [>>] or slide up and down in the slide-touch area to select **Presets mode** or **Scan mode**, and touch[>||]to confirm,
 - **Presets mode:** Select this mode if you want to search one preset channel through the saved presets.
 - **Scan mode:** Select this mode if you want to manually search one frequency through the FM band at a time.
4. Touch[≡]to return to FM Radio playback interface.

Note:You can swith the different FM mode by touch softly (short press) [>||]

Manually searching and storing stations

1. In scan mode, touch[<<]or[>>]or slide up and down in the slide-touch area to change the frequency (fine-tune).
If you touch and hold[<<]or[>>]or slide up and down in the

slide-touch area for approx. 2 seconds, the MP3 player automatically searches with lower or higher frequency range for the radio station with next strongest reception.

2. To save the station manually searched, touch and hold [≡]. The FM Radio sub-menu appears.
3. Touch [◀] or [▶] or slide up and down in the slide-touch area to select "Save Presets" and touch [▶] to confirm. The preset list appears.
4. Touch [◀] or [▶] or slide up and down in the slide-touch area to select a position (e.g. CH01) and touch [▶] to confirm. A system prompt appears to ask if you want to preset the searched station.
5. Touch [▶] to confirm and preset the station. Touch [≡] to return without presetting the station.

Automatically searching and storing stations

1. Touch and hold [≡] while listening to the FM Radio. The FM Radio sub-menu appears.
2. Touch [◀] or [▶] or slide up and down in the slide-touch area to select **Auto Tune**, and touch [▶] to confirm.
The MP3 player automatically searches for all radio stations with

strongest reception and save them in memory locations (up to 20 stations). The unit will start to play the first channel automatically after finishing the search.

Listening to preset stations

In preset mode, touch[<<]or[>>]to scroll through the stored stations.

Selecting FM region

When you travel overseas, change the FM region to search the local radio station.

1. Touch and hold[≡]while listening to the FM radio. The FM Radio sub-menu appears.
2. Touch[<<] or[>>]or slide up and down in the slide-touch area to select “**FM band**”, and touch[>||]to confirm.
3. Touch[<<]or [>>] or slide up and down in the slide-touch area to select **USA**, **Europe**, or **Asia.**, then touch [>||]to confirm.

FM recording

You can record the FM radio program at any time while listening to the FM radio.

1. Touch and hold[≡]while listening to FM radio. The FM Radio sub-menu appears.
2. Touch[<<]or[>>]or slide up and down in the slide-touch area to select “**FM Record**” and touch[>||]to start recording.
To pause the recording, touch[>||]. To resume the recording, touch [>||]again.
3. To stop recording, touch[≡]. The system prompt appears to ask if you want to save the recording.
4. Touch[>||]to save the recording. Touch[≡]to return to the FM radio without saving.
The saved recording file can be listened in the “Voice” mode.

Recording Voice

In Mic Record mode, you can record voice with interior microphone.

1. Touch[≡]to enter the main menu.
2. Touch[<<]or[>>]or slide up and down in the slide-touch area to select “**Mic Record**”, and touch[>||]to start recording.
To pause the recording, touch [>||]. To resume the recording, touch

[>||]again.

3. To stop recording, touch[≡]. The system prompt appears to ask if you want to save the recording.
4. Touch[>||]to save the recording and return to voice mode. Touch[≡] to return to main menu without saving.
The saved recording file can be listened in the “Voice” mode.

Listening to recordings

All recordings can be played in the voice mode

1. Touch[≡]to enter the main menu.
2. Touch[<<]or[>>]or slide up and down in the slide-touch area to select **“Voice”** and touch[>||]to confirm. The voice file list appears.
3. Touch[<<]or [>>]or slide up and down in the slide-touch area to select a voice file, and touch[>||]to start playing the file.
File selected, file searched and playback function in the Voice mode correspond to the functions in the Music mode.

Deleting voice file

1. Touch[≡]to enter the main menu.
2. Touch[<<]or[>>]or slide up and down in the slide-touch area to

- select **"Voice"** and touch[>||]to confirm. The voice file list appears.
3. Touch[<<]or[>>]or slide up and down in the slide-touch area to select the file you want to delete, then touch and hold[≡]. The security prompt appears to ask if you ensure to delete the file.
 4. Touch[>||]to continue deleting. Touch[≡]to return to the playback interface without deleting.

Displaying Clock

1. Touch[≡]to enter the main menu.
2. Touch[<<]or[>>]to select “Clock” and touch[>||]to confirm. The current clock time appears on the screen.

Note: In Music mode, touch and hold[>||]to display the clock directly.

Setting clock

1. Touch[≡]to enter the main menu.
2. Touch[<<]or[>>]or slide up and down in the slide-touch area to select “**Settings**” and touch[>||]to confirm.
3. Touch[<<]or[>>] or slide up and down in the slide-touch area to select “**Time Settings**” and touch[>||]to confirm.. The time setting options appear.
 - Set Time: Touch[>||]to enter. Touch[<<]or[>>]or slide up and down in the slide-touch area to navigate between minute and second, and slide up or down to adjust the value. Touch [>||]to save the setting. Touch[≡]to return without saving.
 - Time Format: Touch[<<]or[>>]or slide up and down in the slide-touch area to select “Time Format” and touch[>||]to

enter. Touch[<<]or[>>]or slide up and down in the slide-touch area to select 24 hours system or 12 hours system and touch [>||]to confirm.

Setting system

The unit settings can be customized by accessing the Settings Menu. The Settings Menu consists of several items where various functions can be selected concerning time, power, display, language and so on.

1. Touch[≡]to enter the main menu.
2. Touch[<<]or[>>]or slide up and down in the slide-touch area select “ **Settings**”, and touch[>||]. The settings menu appears.
 - To select an option or adjust the value, touch[<<]or[>>]or slide up or down.
 - To confirm the select or value, touch[>||].
 - To return to superior directory, touch[≡].

Idle shutdown

Set the shutdown time. The player will turn off automatically if the player is idle for the set time.

Sleep shutdown

Set the sleep time. The player will turn off automatically after the set time.

Sound Settings

You can limit the maximum volume in the setting menu.

Select “Sound Settings” and touch[>II].

- Off: Do not limit the volume. You can adjust the volume to maximum value at any time.
- Set: To set the maximum adjustable volume. Touch[<<]or[>>] to adjust the volume and touch[>II]to confirm.

Backlight time

Set the LCD off time. The backlight will be off after the set time if no button is pressed. To activate the backlight, touch any key.

Information

Select “Information” to check the free and total memory and firmware version of the player.

Factory settings

Select “Factory settings” to restore all settings of the player to factory default settings.

Language

Select a desired menu language. The available options include: English, Simple Chinese and Traditional Chinese.

Product Specification

MODEL	aigo MP3 player a6
MEMORY	1G/2G/4G/8G FLASH
LCD	FSTN LCD, 128*64
BATTERY	Built-in 3.7V 300mAh Lithium-ion Battery
ADAPTER	(Optional)
VOLTAGE	Power supply voltage: 3.7V Power charging voltage: 5V
CHARGING TIME	Please use USB cable to connect the player with the computer to charge. The charging time is about 3 hours (May different as your computer configuration). If you use The adapter (optional,M2608) The charging time is about 3 hours After charge please unplug the adapter.
CONTINUOUS PLAY TIME	Approx. 30 hours (MP3 128kbps middle Volume, Screen 5 seconds protection,normal temperature(25℃))
LANGUAGE	English,Simple Chinese and Traditional Chinese
AUDIO FORMAT	MP3: MPEG 1.0 Layer 3 CBR 80Kbps ~ 320Kbps

	WMA: CBR 80Kbps~192Kbps WAV: ADPCM 48Kbps~192Kbps
RECORDING FORMAT	Wav
USB	USB 2.0 HIGH SPEED
AUDIO OUTPUT	Stereo
SIZE (W×L×H)	35×79×9 mm
WEIGHT (INCLUDE BATTERY)	27.6g
WORK TEMPERATURE	0℃ ~ 40℃
STORE TEMPERATURE	-20℃ ~ 55℃
MAX HUMIDITY	90% RH
SYSTEM SUPPORT	Windows 2000/XP/VISTA

In order to enhance the function of this product, the content of the instruction booklet is subject to change without other notices.

Contact us

Beijing Huaqi Information Digital Technology Co., Ltd.

Address: No. 2 Zhongguancun Square, Haidian District, Beijing, PRC.

(10/F, Room 1007-1010, Ideal International Plaza)

Company website: www.aigo.com www.aigodmp.com

Mailing Address: Post Box No. 069, Zhongguancun Post Office

Post Code: 100080

Order Online: <http://shop.aigo.com>

aigo Club: <http://www.aigoclub.com>

Customer Service Hotline: 400-610-6666

For the areas which don't open 400 service, please dial 010-82607776

aigo is a trademark of Beijing Huaqi Information Digital Technology Co., Ltd
Huaqi reserves all rights. All promotion materials are offered for reference only.