

Exquisite MP3 User Manual



Contents

Brief instructions	2
Structure drawing	2
Online and charge.....	3
Introduction of key functions	4
Introduction of earphone hole functions.....	5
Introduction of LED working status.....	5
Play music	5
Troubleshooting.....	6
Safety instructions	6
Specifications	7
Statement	7

Brief instructions

Congratulations on purchasing Exquisite MP3. Please download songs and other audio files to Exquisite MP3 from the computer. You can also use Exquisite MP3 as external disk to save and backup files

Structure drawing



Earphone hole

You can connect the earphone with earphone hole. Exquisite MP3 will play music automatically and circularly for you.

You can connect USB cable's small end with earphone hole. Exquisite MP3 will implement data transfer and charging up.

You can connect the charger to charge up with earphone hole.

LED

Indicate working status.

FORWARD /Volume+

Press the key to choose the next music, press and hold the key, the volume will increase.

BACK /Volume—

 
Press the key to choose the previous music, press and hold the key, the volume will decrease.

Online and charge

Connect with the computer

Connect the bigger end with PC USB interface, and then connect the smaller end with the machine.

If you want to copy music files into MP3 player, you just need to connect the MP3 player with PC and it will display icon as follows:



Transmit / delete files

Pitch on the audio frequency files which you want to copy and then you can transmit them into MP3 player directly.

Pitch on the files you want to delete, right click and choose “delete” will OK.

Remove device

If you want to avoid losing data please don't pull out USB cable directly. We

suggest that you should move mouse to  and click, choose to delete corresponding drivers and “Move from PC safely” icon will display in your desktop.

Charge

The product uses the lithium ion battery. While first use the machine, you'd better charge full. Please do as follows:

1. Connect the bigger end with PC USB interface, and then connect the smaller end with the machine.

2. If want stopping charge, please disconnect the USB line.

Lithium ion battery charge 70% need about 2.5 hours, charge full need about 3 hours. Please charge full the first time you use. You can also adopt special charge adapter to charge up. When you charge up Exquisite MP3, the LED is bright continuously. The LED will be off after 3 hours, which shows the battery is fully.



Caution

1. USB's interface which is lower powered may not be able to provide enough power.

2. While full charged, backlight will auto shut down.

3. Don't take apart、press、short circuit the battery or set it on fire, so as not to arose fire、injure、burn or other kinds of damage.

Introduction of key functions

“▲” —Press the key to select the next music. Press and hold the key to go into the volume adjustment, increasing the volume correspondingly.

“▼” —Press the key to select the previous music. Press and hold the key to go into the volume adjustment, decreasing the volume correspondingly.

Introduction of earphone hole functions

When the user inserts the earphone cable, the Exquisite MP3 can be running automatically and circularly under the condition of enough battery power.

When the user pulls out the earphone cable, the Exquisite MP3 will be closed automatically.

When the user inserts USB cable, the PC can supply the data and the power for the Exquisite MP3.

Introduction of LED working status

When you insert the earphone cable, the Exquisite MP3 will start working. The LED flickers normally. If you press the key, the LED will flicker more quickly.

After you insert the USB cable, If you download or upload music files to MP3 player, The LED will flicker more quickly, otherwise The LED is still on.

When the USB cable has connected with PC for about 3 hours, LED will be off, which shows the battery is charged up fully. Before exhausting the battery power, The LED will persist in another flickering mode all along (ON 200 milliseconds, OFF 6 seconds), which applies to the hint of low power. After removing the earphone cable or USB cable, The LED will be off.

Play music

When there are compatible audio files (*.mp3, *.wma) in your MP3, you can insert the earphone. Then the Exquisite MP3 will Play circularly and automatically.

Troubleshooting

Unable to boot-strap	1. Reset again. 2. Examine whether the battery quantity of electricity is enough.
No music play in earphone	1. The music file must be MP3, or WMA. 2. Examine whether the earphone is in good quality. 3. Examine whether the music file is in good quality.
Unable to download music normally	1. Examine whether the free memory is enough. 2. Examine whether the USB is in good quality and right connected.

Safety instructions

The manual contains important safety precautions and the information of using the product correctly, in order to avoid accidents. Be sure that read the manual carefully before using the product.

Keep away from high flaming, damp or dusty places.

You charge up by the computer's USB port as long as you connect the Exquisite MP3 with the computer.

Don't disconnect the MP3 from the PC when the player is formatting, uploading or downloading. Otherwise, there may be a bad influence on the MP3.

If the memory loss due to product damage, repairing or other reasons, our company won't be responsible, you should operate the mp3 normatively conforming to the user manual.

Don't disassemble the product. Don't use alcohol, thinner or benzene to clean the product's surface.

Specifications

Items	Specifications
PC connection	USB2.0
Compatible file	MP3/WMA
Compatible systems	FAT16/FAT32
Flash Memory	1GB
Battery capacity	3.7V lithium battery
On-board Battery	4H
Working temperature	-5℃ — 40℃
Operation Systems	Windows 98SE/ME/2000/XP/VISTA
Attachments	User manual, earphones, USB cable, CD

Statement

The users are sure to backup data during using, our company isn't responsible for personal data loss and damage that are caused by software and hardware's wrong operations, product's repair, battery's charge or other accidental conditions, and isn't also responsible for other indirect loss. At the same time, we can't control the misunderstanding of the manual for the user, so our company won't be responsible for the accidental damage during using the manual, and won't be responsible for the third party's claim that is caused by using the product.