Polaroid

8GB

Music & Video Player with
1.8in (4.57cm) LCD Display

PMP180-8



User Manual

Polaroid and Polaroid & Pixel are trademarks of PLR IP Holdings, LLC. used under license.
PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.
© 2011 All Rights Reserved

Polaroid


In the box




MP3 Player



User Manual



Headphones




USB Cable



CD-ROM


Location of controls

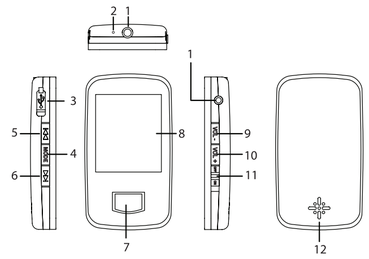

1. 3.5 mm dual headphone jacks (to share music)
2. Microphone
3. USB port
4. **[MODE]** button - Select / Enter menus / Main menu (hold)
5. **[⏮]** button - Previous file / Up on menu / Rewind (hold)
6. **[⏭]** button - Next file / Down on menu / Fast Forward (hold)
7. **[MAIN]** button - Play / Pause / Power On-Off (hold) / Previous screen (quickpress)
8. LCD screen
9. **[VOL –]** button - Decrease volume
10. **[VOL +]** button - Increase volume
11. **[ON/OFF]** switch - Power On-Off
12. Speaker

Charging

1. Connect the player to your computer using the included USB cable.

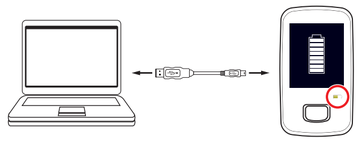

2. Charge the battery between 3-5 hours. Do not charge for more than 8 hours.
3. The green battery in the lower right corner of the charing screen is the battery level indicator.

Battery level indicator:


- indicates that the battery is full.
- indicates low battery; the player should be charged as soon as possible.

Important: Charge the player for at least 8 hours before using it for the first time.

Basic operation

Power on/off


- To turn on the player, make sure the **[ON/OFF]** switch is in the "ON" position and press and HOLD the **[MAIN]** button until the display lights up.
- To turn off the player, press and HOLD the **[MAIN]** button until the display shuts off, or slide the **[ON/OFF]** switch to the "OFF" position (shutting the player this way is quicker but the last changes in the settings, or last played song will not be saved).

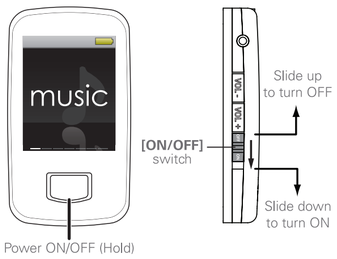

Power ON/OFF (Hold)

Transferring media files to the player

1. Find music, picture, or video files on your computer.
2. Connect the MP3 Player to your computer, and locate **"MP3"**.
3. Drag or copy the files as shown below (do not drag or copy files into the **"RECORD"** folder).

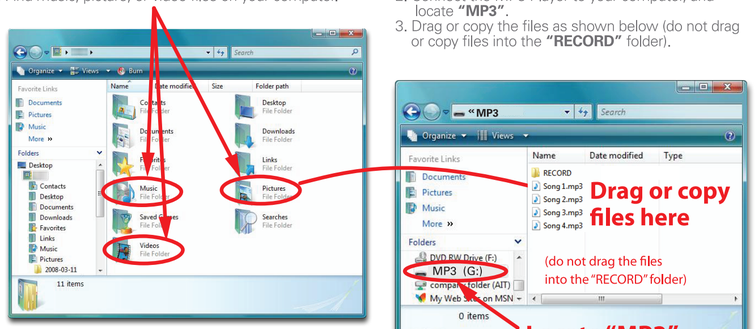

IMPORTANT: *Do not disconnect the MP3 Player from the PC while transferring files as doing so will damage the MP3 Player and your files.*

It is also possible to delete files on the player while connected to the computer. Select the file and press the delete key of the computer's keyboard.


When you are done, disconnect your MP3 Player from the computer using the **"Safe Device Removal"** utility in the taskbar.

NOTE: *Screenshots above may be slightly different than your computer's operating system.*

Main Menu

To navigate the main menu


[⏮] - move the selection left to the previous option
[⏭] - move the selection right to the next option
[MODE] - confirm the selection

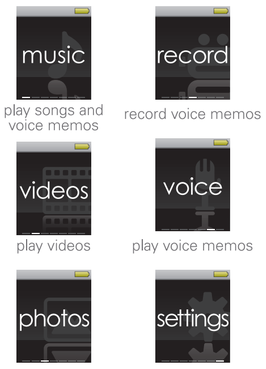

play songs and voice memos
record voice memos
play videos
play voice memos
view pictures
change system settings

Music

To play music, select **"music"** from the main menu and press the **[MODE]** button to confirm. The music playback screen will be displayed.

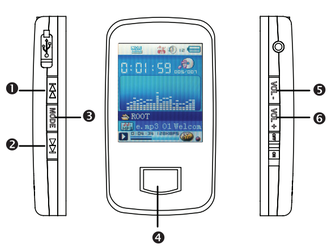

music playback screen

To browse the music files on the player, refer to "music menu 2"

Music playback controls

1. **[⏮]** button – Previous track / Rewind (hold)
2. **[⏭]** button – Next track / Fast forward (hold)
3. **[MODE]** button – Enter menu 1 (while music PLAYING) / Enter menu 2 (while music PAUSED) / Main menu (hold)
4. **[MAIN]** button – Play / Pause
5. **[VOL-]** button – Decrease volume
6. **[VOL +]** button – Increase volume

Music menu controls

1. **[MODE]** button – Make selection / Main menu (hold)
2. **[⏮]** button – Up on menu
3. **[⏭]** button – Down on menu
4. **[MAIN]** button – Previous screen (quickpress)

Music Menu 1

While music is PLAYING, press the **[MODE]** button to access music menu 1 where you can select from the following options:

Music
>>Repeat
>>Equalizer
>>Replay mode
>>Exit

Repeat – track repeat options
Equalizer – select music type
SRS WOW – adjust sound field
Replay mode – track loop options
Exit – exit to music playback screen

Music menu 2

While music is PAUSED, press the **[MENU]** button to access music menu 2 where you can select from the following options:


Music
>>Local folder
>>Delete file
>>Delete all
>>Exit

Local folder – browse music files on the player
Delete file – delete a single music file
Delete all – delete all music files
Exit – exit to music playback screen

Converting Videos

Before transferring video files to the player, you must convert them to the correct format. Use the Video Converter on the provided CD to convert most video files to the correct format suitable for the player.

1. Insert the CD into the CD drive of your computer.



2. Click on **"User Guide".**
3. Click on **"View"** to view instructions on installing and using the video converter.




Click **"User Guide"**



Click **"View"**

Videos

To watch videos, select **"videos"** from the main menu and press the **[MODE]** button to confirm. The video playback screen will be displayed.

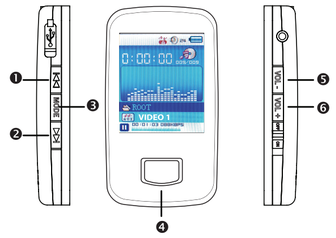

Video playback screen

Video playback controls

1. **[⏮]** button – Previous video / Rewind (hold)
2. **[⏭]** button – Next video / Fast forward (hold)
3. **[MODE]** button – Enter video menu (when paused) / Main menu (hold)
4. **[MAIN]** button – Play / Pause
5. **[VOL-]** button – Decrease volume
6. **[VOL +]** button – Increase volume

Video menu

While a video is PAUSED, press the **[MENU]** button to access the video menu where you can select from the following options:

Movie
>>Local folder
>>Delete file
>>Repeat
>>Exit

Local folder – browse video files on the player
Delete file – delete a single video file
Delete all – delete all video files
Repeat – video repeat options
Exit – exit to video playback screen

Video menu controls:

1. **[⏮]** button – Up on menu
2. **[⏭]** button – Down on menu
3. **[MODE]** button – Make selection / Main menu (hold)
4. **[MAIN]** button – Previous screen (quickpress)

Photos

To view pictures, select **"photos"** from the main menu and press the **[MODE]** button to enter the photo browser.



Photo browser screen

1. Use the **[⏮]** or **[⏭]** button to scroll through the **"ROOT"** folder and select a photo you would like to view, and press the **[MAIN]** button.
2. Use the **[⏮]** or **[⏭]** button to scroll through your pictures.
3. Press the **[MAIN]** button again to return to the **"ROOT"** folder.

Photo menu

While in the **"ROOT"** folder, press the **[MODE]** button to access the photo menu where you can select from the following options:

Photo
>>Local folder
>>Slideshow
>>Delete file
>>Delete all
>>Exit

Local folder – browse photo files on the player
Slideshow – set slideshow mode
Delete file – delete a single photo file
Delete all – delete all photo files
Exit – exit to photo playback screen

Slideshow

1. To view all pictures in slideshow mode, press the **[MODE]** button while in the **"ROOT"** folder to enter the photo menu, then select **"Playback set"**, then choose **"Auto Play".**
2. Choose a time interval between photos, then press the **[MAIN]** button to start the slidshow.
3. To stop the slideshow and return to the **"ROOT"** menu, press the **[MAIN]** button again


.

Record

To record voice memos, select **"record"** from the main menu and press the **[MODE]** button to enter the recording mode.

1. Press the **[MAIN]** button to start recording.
2. To pause recording, press the **[MAIN]** button again.
3. To save the recording and exit to the main menu, press and HOLD the **[MAIN]** button or the **[MODE]** button.


[MODE]
Press and HOLD to save voice memos

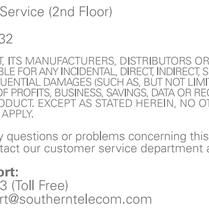

record screen

Voice

To play back recorded voice memos, select "voice" from the main menu and press the **[MODE]** button to enter the voice memos mode.

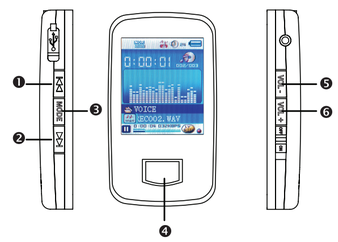

Voice memo playback screen

Voice playback controls

1. **[⏮]** button – Previous memo / Rewind (hold)
2. **[⏭]** button – Next memo / Fast forward (hold)
3. **[MODE]** button – Enter voice memo menu
4. **[MAIN]** button – Play / Pause
5. **[VOL-]** button – Decrease volume
6. **[VOL +]** button – Increase volume

Voice Menu 1

While music is PLAYING, press the **[MODE]** button to access music menu 1 where you can select from the following options:

Voice
>>Repeat
>>Replay mode
>>Exit

Repeat – memo repeat options
Replay mode – memo loop options
Exit – exit to voice memo playback screen

Voice menu 2

While music is PAUSED, press the **[MENU]** button to access music menu 2 where you can select from the following options:

Voice
>>Local folder
>>Delete file
>>Delete all
>>Exit

Local folder – browse voice memos on the player
Delete file – delete a single voice memos
Delete all – delete all voice memos
Exit – exit to voice memo playback screen

Settings

In the settings menu you can customize various player settings such as power usage, language, display settings and more.

1. To adjust date and time, select **"Clock"** from the setup menu. Press the **[MAIN]** button to select an option and use **[⏮]** or **[⏭]** button to adjust.



settings menu

Adjust the "LCD Set" and "Power off" options to extend and optimize battery performance.

Legal information

FCC Part 15:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to HYPERLINK "http://www.polaroid.com" www.polaroid.com and reference About / Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Troubleshooting

Can not power on

- The battery may be exhausted, please recharge the battery.

Files can not be transferred to the player

- Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer
- Check the connection between the player and PC, and confirm the USB cable is properly connected.

No sound from the headphones

- Please ensure the volume is turned up, and the \ headphones are properly connected.
- Check if the format of music file is supported by the player.

Can not record

- Check if there is enough memory and battery capacity.

Display is in the wrong language

- Please ensure you selected the correct language from the "Settings" menu.

I cannot display my .jpg files

- Many digital cameras and image editing softwares add hidden data to the .jpg files. This data can prevent the player from loading the images. Try to eliminate them by saving the file with another name.

Limited Warranty

This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty").
In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

AIT, Inc.
ATTN: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT, EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
☎ 1-877-768-8483 (Toll Free)
✉ polaroidsupport@southerntelecom.com

Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)