

Copyright

- * Copyright © 2007 Group Sense Mobile-Tech Limited. All rights reserved.
- * Product specifications and features are for reference only and are subject to change without prior notice.

Declaration

- * This Quick Start Guide is published by Group Sense Mobile-Tech Limited without any warranty. Improvement and changes to this Quick Start Guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment may be made by Group Sense Mobile-Tech Limited any time and without notice. Such changes will, however, be incorporated into new editions of this Quick Start Guide.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important safety information

PLEASE READ THIS CAREFULLY BEFORE USING WF100!

- * Do not expose WF100 to moisture or humidity.
- * Do not expose WF100 to extreme high or low temperatures.
- * Do not attempt to disassemble/repair your product.
- * Use only the chargers and batteries approved by Group Sense Mobile-Tech Limited. The use of any other type may invalidate any approval and warranty. No reverse charging with other chargers, they may have inverse polarity.
- * Never use the charger if the plug is damaged.
- * Never touch the charger if your hands/feet are wet.
- * Do not expose the charger to water, it may cause electrical fires.
- * To reduce the risk of fire or burns, do not disassemble, crush or puncture the battery.
- * Recycle or dispose of the battery safely and properly according to local laws and regulations.
- * Do not dispose of the battery in fire or water.
- * Do not let the metal contacts on the battery touch other metal object, it could lead to short-circuit and damage the battery.

Table of Contents


Getting started	5
Overview	5
Installing/Removing the battery	7
Charging battery	7
Using your WF100	8
Power on and off	8
Making/Answering a call	8
Using speed dial	9
Phone Book	10
Using the Phone Book	10
Adding an entry	10
Editing an entry	11
Deleting Phone Book entry	11

Making a call from Phone Book	12
Phone configuration	13
Customizing your phone	13
Audio	13
Ringer	13
Date/Time settings	14
Theme settings	15
Language selection	15
Admin configuration	16
WLAN Settings	16
SIP account settings	18

Getting started

This Guide will instruct you on quickly and easily connecting and using your WF100.

Overview

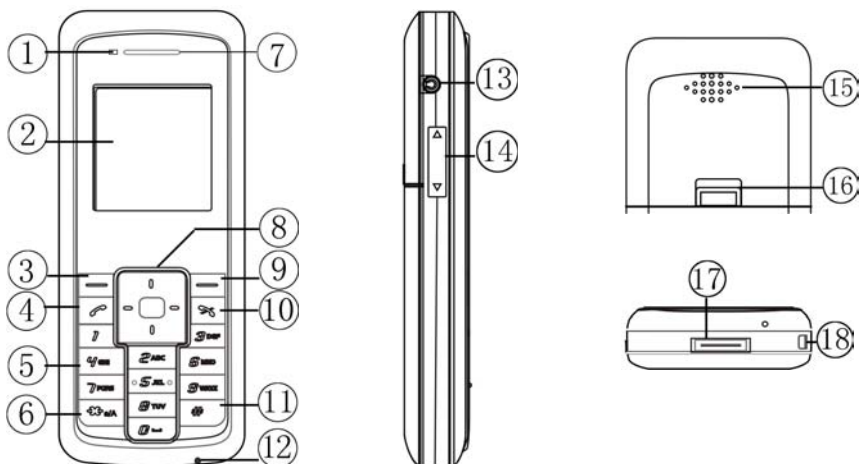

	Description		Description
1	Battery charging indicator	10	Power/End key
2	Display screen	11	Pound (#) key/when inputting text, use to enter punctuations
3	Left function key	12	Microphone
4	Call key	13	Earphone socket
5	Numeric keypad	14	Volume button
6	Asterisk (*) key/when inputting text, use to switch input method	15	Speaker
7	Earpiece	16	Battery lock
8	Navigation key	17	Charging socket
9	Right function key	18	Strap hole

Installing/Removing the battery

To remove the battery

1. In the idle screen, press and hold the Power key to switch the phone off.
2. Slide the battery lock upwards; lift the battery off.

To install the battery

1. Slide the battery lock upwards, align the metal contacts on the battery with the contacts inside the battery compartment.
2. Press the battery downwards until it fits into the battery compartment, then release the battery lock.

Charging battery

To charge the battery

1. Plug the charger to an AC wall outlet.
2. Connect the lead to the charging socket of the phone.
3. The LED light turns orange.
4. When charging is complete, the LED light turns green

Using your WF100

Power on and off

Power on

1. Press and hold the Power key for 3 seconds.

Power off

1. In the idle screen, press and hold the Power key for 2 seconds.
2. The phone will be switched off automatically.

Making/Answering a call

To make a call

1. Enter the phone number. (Press the right function key to delete the incorrect entry.)
2. Press the Call key to connect your call.

To answering an incoming call

1. Press the Call key to answer the incoming call.

To End/Reject a call

1. Press the End key to end/reject a call.

Using speed dial

To assign a phone number

1. Press the left function key to access main menu, select **Call Features**, then select **Speed Dial**.
2. Select a slot you want to set the speed dial number.
3. Enter the speed dial number.
4. Press the left function key to save.

To make a call in speed dial

In the idle screen, press and hold the corresponding speed dial number key to automatically dial out the number.

Phone Book

Using the Phone Book

Adding an entry

To add a new entry in the following steps:

1. Press the left function key to access main menu, select **Phone Book**.
2. Press the left function key to select **Add Contact**, enter the name.
3. Scroll to the number field and enter the number.
4. Save the entry when editing completed.

Editing an entry

Change names or numbers by doing the following steps:

1. Press the left function key to access main menu, select **Phone Book**.
2. Press the left function key to select **Edit Contact** to access the entry edit mode.
3. Change the name or number; press the left function key to save.

Deleting Phone Book entry

1. Press the left function key to access main menu, select **Phone Book**.
2. Press the left function key to open the option list.
3. Select **Del Contact/Delete All** to delete selected entry.
4. When get the prompt “The contact will be deleted. Are you sure?” press the left function key to delete the selected entry; press the right function key to cancel your selection.

Making a call from Phone Book

1. Press the left function key to access main menu, select **Phone Book**.
2. Press the Call key; select the number you will dial (if there are more than one number record), then press the Call key.

Phone configuration

Customizing your phone

Press the left function key to access main menu, select **Phone Conf.**

Audio

1. Select **Audio** in **Phone Conf.**
2. Select the audio you will activate, press the left function key to confirm your selection.

Ringer

This option enables you to select a special ringtone, volume and vibration for the incoming calls.

Ringtone

1. Select **Ringtone**.
2. Select a ringtone in the list, press the left function key to save.

Volume

1. Select **Volume** in **Ringer**.
2. Press the left/right navigation key to select the ring volume level.
3. Press the left function key to save setting.

Vibration

1. Select **Vibration** in **Ringer**.
2. Select **On** to enable vibration; select **Off** to disable.

Date/Time settings

This function enables you to set the phone's date, time, time format, etc.

1. Select **Date/Time** in **Phone Conf**.
2. Select **NTP**, and then select **Enable**. The phone will automatically update time from NTP server.

3. In **Date/Time**, select **Time Zone**. Select corresponding time zone, press the left function key to save.

Theme settings

This function enables you to change the screen color.

1. Select **Theme** in **Phone Conf**.
2. Scroll to the desired theme, press the left function key to confirm your selection.

Language selection

This function enables you to select the language of the phone's text display.

1. Select **Language** in **Phone Conf**.
2. Scroll to the desired language, press the left function key.

Admin configuration

This section we'll introduce how to setup wireless network related parameters.

WLAN Settings

In the idle screen, press the navigation key to select **Admin Conf**, input the default password “1111” to access Admin Conf.

Auto WLAN conf

1. Enter **Others** in **Admin Conf**.
2. Enter **Site Survey** in **Others** screen, the phone will automatically search for available WLAN access point.
3. Enter a WLAN access point in the list.
4. Input the WEP/WPA key if needed.
5. Press the left function key to save current setting.

Manual WLAN conf

1. Enter **WLAN Conf** in **Admin Conf**.
2. Enter “1.” and press the left function key.
3. Enter **Edit**.
4. Enter **SSID** to input SSID characters (press  to switch input methods); press the left function key to save.
5. Enter **Encryption**.
 - Enter **Mode** to choose **None/WEW/WPA Personal**; press the left function key to save.
 - If **WEW** is selected, enter **WEW keys** in **Encryption**, enter **WEW Bits** in **WEW keys** to choose **64/128** bits; and then enter **WEW keys 1**, input the WEP keys (press  to switch input methods).
 - If **WPA Personal** is selected, enter **Passphrase** to input the password (press  to switch input methods).
6. Enter **TCP/IP**.

- Enter **DHCP Conf**. Select **Enable** or **Disable** to activate or deactivate DHCP function.
 - If DHCP is disabled, enter **Static IP** to perform IP settings. (Only when DHCP is disabled, can the Static IP option be available.)
7. When finished the **WLAN** settings, you can enter **Current Conf** in **WLAN Conf** to select the desired access point.

SIP account settings

User conf

1. Enter **User Conf** in **Admin Conf**.
2. Enter **User 1**.
 - Enter **Profile Name** to input issued landline number.
 - Enter **Username** to input username.
 - Enter **Password** to input security code.
 - Enter **Domain** to set the SIP server address.

3. Press End call key to exit.

STUN conf

To make STUN settings with the following steps if needed:

1. Enter **STUN Conf** in **Admin Conf**.
 - Enter **Enable** to activate STUN function.
 - Enter **STUN Server** to set the STUN server address.
 - Enter **STUN svr Port** to set the STUN server port.
2. Press End call key to exit.

版權聲明

- * 版權所有 2007 權智移動科技有限公司，保留所有權。
- * 本用戶手冊中產品功能僅供參考，如有更改，恕不另行通知。

聲明

- * 該用戶手冊由權智移動科技有限公司製作，不包括任何保養。權智移動科技有限公司有權因印刷上的錯誤、目前資源上的不準確，或設備及程式上的改良將該手冊做出修改而無需另行通知。但這些更改將合併於手冊的新版中。

FCC 聲明

本裝置符合 **FCC rules Part 15** 的規定。相關操作必須遵循以下兩項條件；（1）本裝置不能造成有害干擾，以及（2）本裝置必須能夠承受任何接收到的干擾，包括可能導致意外操作的干擾。

任何未被負責方明確認可的修改或變化都可能導致用戶對本設備的操作權限無效。

安全使用訊息

在使用 WF100 之前，請仔細閱讀該安全使用訊息：

- * 請勿暴露 WF100 於潮濕的地方或水中。
- * 請勿暴露 WF100 於及其高溫或低溫的地方。
- * 為安全起見，請勿自行拆修本機。
- * 只能使用由權智移動科技有限公司提供的電池，充電器；由於使用其他品牌的電池，充電器造成的危害，我方將不負任何責任；不可使用其他充電器進行充電，否則可能造成嚴重損害。
- * 如果插座損壞，請勿使用充電器進行充電。
- * 在手或腳濕的情況下，請勿碰觸充電器。
- * 請勿暴露充電器於潮濕的地方或水中，以免造成火災。
- * 請勿拆解，擠壓電池，以免發生爆炸，火災。
- * 請按照當地法律規定正確安全回收棄置電池。
- * 請勿將電池棄置於水或火中。
- * 不要將電池的金屬接觸面與金屬物品接觸，這樣會造成電池短路，損壞電池。

目錄


入門	25
手機外觀概覽	25
安裝 / 移除電池	27
電池充電	27
使用手機	28
開啓 / 關閉手機	28
撥打 / 接聽電話	28
快速撥號	29
通訊錄	30
使用通訊錄	30
新增聯絡人	30
編輯聯絡人	30
刪除聯絡人	31

從通訊錄撥打電話	31
電話設定	32
電話個性化設定	32
聲音	32
響鈴	32
日期 / 時間設定	33
主題設定	34
語言選擇	34
管理設定	35
WLAN 設定	35
SIP 帳戶設定	37

入門

本指南將引導您輕易，快速的連接和使用您的 WF100 電話。

手機外觀概覽

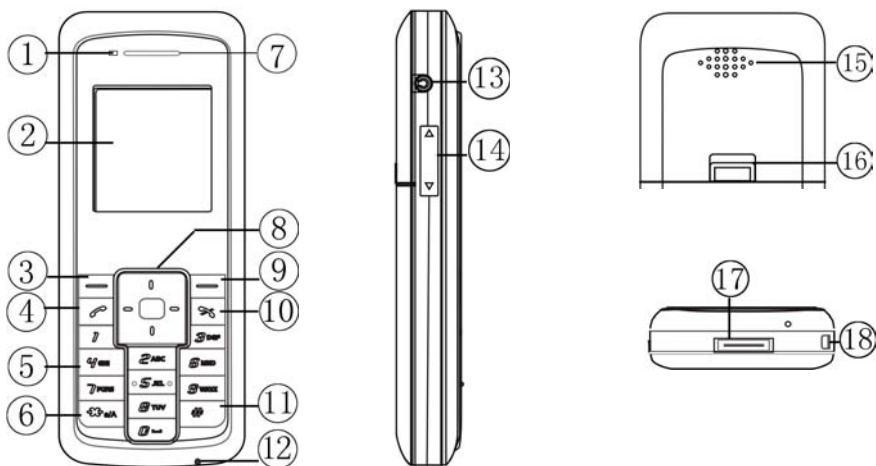

	描述		描述
1	充電狀態顯示燈	10	電源開關鍵 / 結束通話鍵
2	螢幕	11	# 鍵 / 輸入文字時，按該鍵輸入標點符號
3	左功能鍵	12	麥克風
4	通話鍵	13	耳機插孔
5	數字 / 字母鍵盤	14	音量按鍵
6	* 鍵 / 輸入文字時，按該鍵切換輸入法	15	揚聲器
7	聽筒	16	電池鎖
8	導航鍵	17	充電接口
9	右功能鍵	18	手機繩孔

安裝 / 移除電池

移除電池

1. 在待機界面，長按電源開 / 關鍵關閉手機。
2. 向上滑動電池鎖，移除電池。

安裝電池

1. 向上滑動電池鎖，電池上的金屬接觸面向下放入電池槽中。
2. 向下按電池直到電池與電池槽吻合，然後鬆開電池鎖。

電池充電

電池充電

1. 將充電器電源插頭插入主電源插座。
2. 將充電器的連接線插頭連接到手機充電接口。
3. 充電狀態顯示燈亮起，顯示為橙色。
4. 充電結束後，電池標識停止滾動，並且充電狀態顯示燈變成綠色。

使用手機

開啓 / 關閉手機

開啓手機

1. 長按電源開 / 關鍵 3 秒鐘。

關閉手機

1. 在待機界面，長按電源開 / 關鍵 2 秒鐘。
2. 手機自動關閉。

撥打 / 接聽電話

撥打電話

1. 輸入電話號碼。(按右功能鍵刪除錯誤輸入)
2. 按通話鍵撥打電話。

接聽來電

1. 按通話鍵接聽來電。

結束 / 拒接電話

1. 按結束通話鍵結束 / 拒接來電。

快速撥號

新增快速撥號號碼

1. 按左功能鍵進入主目錄，選擇**通話設定**，選擇**快速撥號**。
2. 選擇您要設定快速撥號號碼的位置。
3. 輸入速撥號碼。
4. 按左功能鍵儲存。

通過快速撥號撥打電話

- * 在手機待機界面，長按相應快速撥號按鍵自動撥出號碼。

通訊錄

使用通訊錄

新增聯絡人

按照以下步驟新增聯絡人：

1. 按左功能鍵進入主目錄，選擇**通訊錄**。
2. 按左功能鍵選擇**新增聯絡人**，輸入姓名。
3. 選擇號碼欄，輸入號碼。
4. 編輯完成後儲存記錄。

編輯聯絡人

按照以下步驟修改姓名及號碼：

1. 按左功能鍵進入主目錄，選擇**通訊錄**。
2. 按左功能鍵選擇**編輯聯絡人**，進入記錄編輯界面。
3. 更改姓名或號碼，按左功能鍵儲存記錄。

刪除聯絡人

您可以逐一刪除或者刪除全部通訊錄中聯絡人記錄。

1. 按左功能鍵進入主目錄，選擇**通訊錄**。
2. 按左功能鍵開啓選項列表。
3. 選擇**刪除聯絡人 / 刪除所有聯絡人**刪除所選記錄。
4. 當彈出提示框“確認刪除聯絡人？”，按左功能鍵確定刪除；按右功能鍵取消操作。

從通訊錄撥打電話

您可以在待機界面直接輸入號碼撥打電話。也可以通過通訊錄撥打電話。

1. 按左功能鍵進入主目錄，選擇**通訊錄**。
2. 按通話鍵；選擇您要撥叫的號碼（如果該聯絡人有多個號碼），按通話鍵。

電話設定

電話個性化設定

按左功能鍵進入主目錄，選擇**電話設定**。

聲音

1. 選擇**聲音**。
2. 選擇您要啓用的聲音類別，按左功能鍵確認操作。

響鈴

該選項讓您爲來電設定特別鈴聲 / 聲量 / 震動。

鈴聲

1. 選擇**鈴聲**。
2. 在列表中選擇合適的鈴聲，按左功能鍵確認。

聲量

1. 在**響鈴**中選擇**聲量**。
2. 按左 / 右導航鍵選擇合適的音量級別。
3. 按左功能鍵儲存設定。

震動

1. **響鈴**中選擇**震動**。
2. 選擇**開啓**，啓用震動功能；選擇**關閉**，則關閉震動功能。

日期 / 時間設定

該選項幫助您設定電話時間，日期以及時間 / 日期格式等。

1. 在**電話設定**中選擇**日期 / 時間**。
2. 選擇**網絡時間**，選擇**啓動**。手機根據網絡時間伺服器自動更新時間。
3. 在**日期 / 時間**中選擇**時區**，選擇相應時區，按左功能鍵儲存。

主題設定

該選項幫助您更改螢幕顯示色彩。

1. 在**電話設定**中選擇**主題**。
2. 選擇合適的主題，按左功能鍵確認操作。

語言選擇

使用該功能選擇您需要的語言。

1. 在**電話設定**中選擇**語言**。
2. 選擇所需要的語言類型，按左功能鍵確認操作。

管理設定

我們將在這部分簡單介紹如何進行無線網絡設定。

WLAN 設定

在待機界面，按導航鍵選擇**管理設定**，輸入系統默認密碼 "1111" 進入管理設定界面。

WLAN 自動設定

1. 從**管理設定**進入其他。
2. 然後進入**網絡搜尋**，手機會自動搜尋可用 WLAN 接入點。
3. 在列表中選擇一個接入點。
4. 如果有需要，請輸入 WEP/WPA 碼。
5. 按左功能鍵儲存當前設定。

WLAN 手動設定

1. 從**管理設定**進入 **WLAN** 設定。
2. 進入 "1.", 按左功能鍵。
3. 進入**編輯**。
4. 然後進入 **SSID**, 輸入服務區標識符碼 (按  轉換輸入法); 按左功能鍵儲存。
5. 進入**編碼**。
 - 進入**模式**, 再選擇**無 /WEP/ 個人 WPA**, 按左功能鍵儲存。
 - 如果選擇 **WEP**, 從**編碼**界面進入 **WEP 鍵**, 再進入 **WEP 鍵位數**, 選擇 64/128 位數; 然後進入 **WEP 鍵 1**, 輸入鍵碼 (按  轉換輸入法)。
 - 如果選擇**個人 WPA**, 進入**通關密語**, 輸入密碼 (按  轉換輸入法)。
6. 進入 **TCP/IP**。
 - 進入 **DHCP** 設定, 選擇**啓動**或**關閉**來開啓 / 關閉 DHCP 功能。

- 如果 **DHCP** 已關閉，進入**固定 IP** 設定 IP 地址。(只有當 **DHCP** 關閉時，才可以設定固定 IP)
7. 完成無線網絡設定後，從 **WLAN** 設定進入**當前設定**，選擇所需接入點設定。

SIP 帳戶設定

用戶設定

1. 從**管理設定**界面進入**用戶設定**。
2. 進入**用戶一**。
 - 進入**設定名稱**。輸入網絡電話號碼。
 - 進入**帳號**。輸入帳號。
 - 進入**密碼**。輸入安全密碼。
 - 進入**網域**。輸入 **SIP** 伺服器地址。
3. 按結束通話鍵退出。

STUN 設定

如果有需要，請按照以下步驟進行 STUN 設定。

1. 從**管理設定**進入 **STUN 設定**。
 - 進入**啓動**。開啓 STUN 功能。
 - 進入 **STUN 伺服器**。輸入伺服器地址。
 - 進入 **STUN 連接埠**。輸入伺服器連接埠。
2. 按結束通話鍵退出。

版权声明

- * 版权所有 2007 权智移动科技有限公司，保留所有权。
- * 本用户手册中产品功能仅供参考，如有更改，恕不另行通知。

声明

- * 该用户手册由权智移动科技有限公司制作，不包括任何保养。权智移动科技有限公司有权因印刷上的错误、目前资源的不准确，或设备及程序上的改良对该手册做出修改而无需另行通知。但这些更改将合并于此手册之新版中。

FCC 声明

本装置符合 **FCC rules Part 15** 的规定。相关操作必须遵循以下两项条件：（1）本装置不能造成有害干扰，以及（2）本装置必须能够承受任何接收到的干扰，包括可能导致意外操作的干扰。

任何未被负责方明确认可的修改或变化都可能导致用户对本设备的操作权限无效。

安全使用信息

使用 WF100 之前，请仔细阅读该安全使用信息：

- * 请勿暴露 WF100 于潮湿的地方或水中。
- * 请勿暴露 WF100 在极其高温或低温的地方。
- * 为安全起见，请勿自行拆修本机 / 充电器。
- * 只能使用由权智移动科技有限公司提供的充电器 / 电池；由于使用其他品牌的电池、充电器造成的危害，我方将不负任何责任；不可使用其它充电器进行充电，否则可能造成严重损坏。
- * 如果插座损坏，请勿使用充电器充电。
- * 在手或脚湿的情况下，请勿碰触充电器。
- * 请勿暴露充电器于潮湿的地方或水中，以免造成火灾。
- * 请勿拆解、挤压电池，以免造成火灾或爆炸。
- * 请按照当地法律规定正确安全回收弃置电池。
- * 请勿将电池弃置于火或水中。
- * 不要将电池的金属接触面与金属物品接触，这样会造成电池短路，损坏电池。


目录

入门	43
手机外观概览	43
安装 / 移除电池	45
电池充电	45
使用手机	46
开启 / 关闭手机	46
拨打 / 接听电话	46
快速拨号	47
通讯录	48
使用通讯录	48
添加联络人	48
编辑联络人	48
删除联络人	49
从通讯录拨打电话	49

电话设定	50
电话个性化设定	50
声音	50
响铃	50
日期 / 时间设定	51
主题设定	52
语言选择	52
 管理设定	 53
WLAN 设定	53
SIP 帐户设定	55

本指南将引导您轻易、快速的连接和使用您的 WF100。

手机外观概览

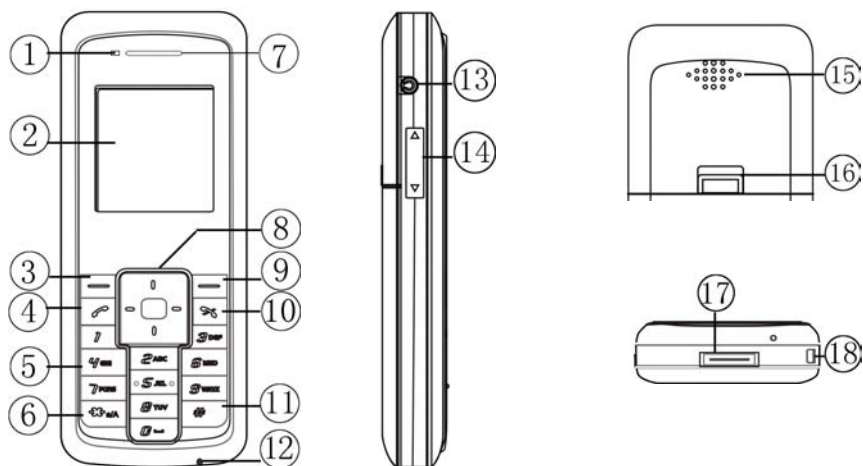

	描述		描述
1	充电状态显示灯	10	电源开关键 / 结束通话键
2	屏幕	11	# 键 / 输入文字时，按该键输入标点符号
3	左功能键	12	麦克风
4	通话键	13	耳机插孔
5	数字 / 字母键盘	14	音量按键
6	* 键 / 输入文字时，按该键切换输入法	15	扬声器
7	听筒	16	电池锁
8	导航键	17	充电接口
9	右功能键	18	手机绳孔

安装 / 移除电池

移除电池

1. 在待机界面，长按电源开 / 关键关闭手机。
2. 向上滑动电池锁，移除电池。

安装电池

1. 向上滑动电池锁，电池上的金属接触面向下放入电池槽中。
2. 向下按电池直到电池与电池槽完全吻合，然后松开电池锁。

电池充电

电池充电

1. 将充电器电源插头插入主电源插座。
2. 将充电器的连接线插头连接到手机充电接口。
3. 充电状态显示灯亮起，显示为橙色。
4. 充电结束后，电池标识停止滚动，并且充电状态显示灯变成绿色。

使用手机

开启 / 关闭手机

开启手机

1. 长按电源开 / 关键 3 秒钟。

关闭手机

1. 在待机界面，长按电源开 / 关键 2 秒钟。
2. 手机自动关闭。

拨打 / 接听电话

拨打电话

1. 输入电话号码。（按右功能键删除错误输入）
2. 按通话键拨打电话。

接听来电

1. 按通话键接听来电。

结束 / 拒接电话

1. 按结束通话键结束 / 拒接电话。

快速拨号

增加快速拨号号码

1. 按左功能键进入主目录，选择**通话设定**，选择**快速拨号**。
2. 选择您要设定快速拨号号码的位置。
3. 输入速拨号码。
4. 按左功能键保存。

通过快速拨号拨打电话

- * 在手机待机界面，长按相应快速拨号按键自动拨出号码。

通讯录

使用通讯录

添加联络人

按照以下步骤添加联络人：

1. 按左功能键进入主目录，选择**通讯录**。
2. 按左功能键选择**添加联络人**，输入姓名。
3. 选择号码栏输入号码。
4. 编辑完成后保存记录。

编辑联络人

按照以下步骤修改姓名及号码：

1. 按左功能键进入主目录，选择**通讯录**。
2. 按左功能键选择**编辑联络人**进入记录编辑界面。
3. 更改姓名或号码，按左功能键保存记录。

删除联络人

1. 按左功能键进入主目录，选择**通讯录**。
2. 按左功能键打开选项列表。
3. 选择**删除联络人 / 删除所有联络人**删除所选记录。
4. 当弹出提示框“确认删除联络人？”，按左功能键删除记录；按右功能键取消操作。

从通讯录拨打电话

1. 按左功能键进入主目录，选择**通讯录**。
2. 按通话键；选择您要拨叫的号码（如果该联络人有多个号码），按通话键。

电话设定

电话个性化设定

按左功能键进入主目录，选择**电话设定**。

声音

1. 选择**声音**。
2. 选择您要启用的声音类别，按左功能键确认操作。

响铃

该选项让您为来电设定特别铃声 / 声量 / 振动。

铃声

1. 选择**铃声**。
2. 在列表中选择合适的铃声，按左功能键确认操作。

声量

1. 在**响铃**中选择**声量**。
2. 按左 / 右导航键选择合适的音量级别。
3. 按左功能键保存设定。

振动

1. 在**响铃**中选择**振动**。
2. 选择**开启**，启用振动功能；选择**关闭**，则关闭振动功能。

日期 / 时间设定

该选项帮助您设定电话时间，日期以及时间 / 日期格式等。

1. 在**电话设定**中选择**日期 / 时间**。
2. 选择**网络时间**，选择**启动**。手机根据网络时间服务器自动更新时间。
3. 在**日期 / 时间**中选择**时区**，选择相应时区，按左功能键保存。

主题设定

该功能帮助您更改屏幕显示色彩。

1. 在**电话设定**中选择**主题**。
2. 选择合适的主题，按左功能键确认操作。

语言选择

使用该功能选择您需要的语言。

1. 在**电话设定**中选择**语言**。
2. 选择所需要的语言类型，按左功能键确认操作。

管理设定

我们将在该部分简单介绍如何进行无线网络设定。

WLAN 设定

在待机界面，按导航键选择**管理设定**，输入系统默认密码“1111”进入**管理设定**界面。

WLAN 自动设定

1. 从**管理设定**进入**其他**。
2. 然后进入**网络搜寻**，手机会自动搜索可用 **WLAN** 接入点。
3. 在列表中选择一个接入点。
4. 如果有需要，请输入 **WEP/WPA** 码。
5. 按左功能键保存当前设定。

WLAN 手动设定

1. 从管理设定进入 **WLAN** 设定。
2. 进入 “1.”，按左功能键。
3. 进入**编辑**。
4. 然后进入 **SSID**，输入服务区标识符码（按  转换输入法）；按左功能键保存。
5. 进入**编码**。
 - 进入**模式**，选择**无 /WEP/ 个人 WPA**；按左功能键保存。
 - 如果选择 **WEP**，从**编码**界面进入 **WEP 键**，再进入 **WEP 键位数**，选择 64/128 位数；然后进入 **WEP 键 1**，输入键码（按  转换输入法）。
 - 如果选择**个人 WPA**，进入**通关密语**输入密码（按  转换输入法）。
6. 进入 **TCP/IP**。
 - 进入 **DHCP** 设定。选择**启动**或**关闭**来开启 / 关闭 DHCP 功能。

- 如果 **DHCP** 已关闭，进入**固定 IP** 设定 **IP** 地址。（只有当 **DHCP** 关闭时，才可以设定**固定 IP**）
7. 完成无线网络设定后，从 **WLAN** 设定进入**当前设定**，选择所需接入点设定。

SIP 帐户设定

用户设定

1. 从**管理设定**界面进入**用户设定**。
2. 进入**用户一**。
 - 进入**设定名称**。输入网络电话号码。
 - 进入**账号**。输入账号。
 - 进入**密码**。输入安全密码。
 - 进入**网域**。设定 **SIP** 服务器地址。
3. 按结束通话键退出。

STUN 设定

如果有需要，请按照以下步骤进行 STUN 设定：

1. 从管理设定进入 **STUN 设定**。
 - 进入**启动**。开启 STUN 功能。
 - 进入 **STUN 服务器**。输入服务器地址。
 - 进入 **STUN 连接埠**。输入服务器端口。
2. 按结束通话键退出。